



Dialogic® Vision™ Call Server Administration Manual

Copyright and legal notice

Copyright © 2006-2009 Dialogic Corporation. All Rights Reserved. You may not reproduce this document in whole or in part without permission in writing from Dialogic Corporation at the address provided below.

All contents of this document are furnished for informational use only and are subject to change without notice and do not represent a commitment on the part of Dialogic Corporation or its subsidiaries ("Dialogic"). Reasonable effort is made to ensure the accuracy of the information contained in the document. However, Dialogic does not warrant the accuracy of this information and cannot accept responsibility for errors, inaccuracies or omissions that may be contained in this document.

INFORMATION IN THIS DOCUMENT IS PROVIDED IN CONNECTION WITH DIALOGIC® PRODUCTS. NO LICENSE, EXPRESS OR IMPLIED, BY ESTOPPEL OR OTHERWISE, TO ANY INTELLECTUAL PROPERTY RIGHTS IS GRANTED BY THIS DOCUMENT. EXCEPT AS PROVIDED IN A SIGNED AGREEMENT BETWEEN YOU AND DIALOGIC, DIALOGIC ASSUMES NO LIABILITY WHATSOEVER, AND DIALOGIC DISCLAIMS ANY EXPRESS OR IMPLIED WARRANTY, RELATING TO SALE AND/OR USE OF DIALOGIC PRODUCTS INCLUDING LIABILITY OR WARRANTIES RELATING TO FITNESS FOR A PARTICULAR PURPOSE, MERCHANTABILITY, OR INFRINGEMENT OF ANY INTELLECTUAL PROPERTY RIGHT OF A THIRD PARTY.

Dialogic products are not intended for use in medical, life saving, life sustaining, critical control or safety systems, or in nuclear facility applications.

Due to differing national regulations and approval requirements, certain Dialogic products may be suitable for use only in specific countries, and thus may not function properly in other countries. You are responsible for ensuring that your use of such products occurs only in the countries where such use is suitable. For information on specific products, contact Dialogic Corporation at the address indicated below or on the web at www.dialogic.com.

It is possible that the use or implementation of any one of the concepts, applications, or ideas described in this document, in marketing collateral produced by or on web pages maintained by Dialogic may infringe one or more patents or other intellectual property rights owned by third parties. Dialogic does not provide any intellectual property licenses with the sale of Dialogic products other than a license to use such product in accordance with intellectual property owned or validly licensed by Dialogic and no such licenses are provided except pursuant to a signed agreement with Dialogic. More detailed information about such intellectual property is available from Dialogic's legal department at 9800 Cavendish Blvd., 5th Floor, Montreal, Quebec, Canada H4M 2V9. **Dialogic encourages all users of its products to procure all necessary intellectual property licenses required to implement any concepts or applications and does not condone or encourage any intellectual property infringement and disclaims any responsibility related thereto. These intellectual property licenses may differ from country to country and it is the responsibility of those who develop the concepts or applications to be aware of and comply with different national license requirements.**

Any use case(s) shown and/or described herein represent one or more examples of the various ways, scenarios or environments in which Dialogic® products can be used. Such use case(s) are non-limiting and do not represent recommendations of Dialogic as to whether or how to use Dialogic products.

Dialogic, Dialogic Pro, Brooktrout, Diva, Cantata, SnowShore, Eicon, Eicon Networks, NMS Communications, NMS (stylized), Eiconcard, SIPcontrol, Diva ISDN, TruFax, Exnet, EXS, SwitchKit, N20, Making Innovation Thrive, Connecting to Growth, Video is the New Voice, Fusion, Vision, PacketMedia, NaturalAccess, NaturalCallControl, NaturalConference, NaturalFax and Shiva, among others as well as related logos, are either registered trademarks or trademarks of Dialogic Corporation or its subsidiaries. Dialogic's trademarks may be used publicly only with permission from Dialogic. Such permission may only be granted by Dialogic's legal department at 9800 Cavendish Blvd., 5th Floor, Montreal, Quebec, Canada H4M 2V9. Any authorized use of Dialogic's trademarks will be subject to full respect of the trademark guidelines published by Dialogic from time to time and any use of Dialogic's trademarks requires proper acknowledgement.

The names of actual companies and products mentioned herein are the trademarks of their respective owners.

This document discusses one or more open source products, systems and/or releases. Dialogic is not responsible for your decision to use open source in connection with Dialogic products (including without limitation those referred to herein), nor is Dialogic responsible for any present or future effects such usage might have, including without limitation effects on your products, your business, or your intellectual property rights.

Revision history

Revision	Release date	Notes
64-0406-02 Rev B	December 2009	BK, Dialogic® Vision™ CX Video Gateway 4.2 and Dialogic® Vision™ VX Integrated Media Platform 4.2.
64-0406-02 Rev A	August 2009	BK, Dialogic® Vision™ CX Video Gateway 4.2 and Dialogic® Vision™ VX Integrated Media Platform 4.2.
64-0406-01 Rev A	June 2009	DEH/BK, Dialogic® Vision™ CX Video Gateway 4.1 and Dialogic® Vision™ VX Integrated Media Platform 4.1.
Last modified: November 17, 2009		

Refer to www.dialogic.com for product updates and for information about support policies, warranty information, and service offerings.

Table Of Contents

Chapter 1: Introduction	7
Chapter 2: Overview	9
Overview of the Vision™ Call Server	9
Call Server components	9
Document conventions	11
System file locations	12
Chapter 3: Call Server configuration file settings	13
Call Server configuration file	13
General settings	14
Logging settings	15
CCXML scripting engine settings	16
Client-side HTTP settings	19
VoiceXML dialog settings	20
Fax call detection settings	21
Call detail record generation settings	22
Chapter 4: Telecom configuration file settings	23
Telecom configuration file	23
ISDN settings	25
ISUP settings	26
VS_isup_server keyword	26
ISUP_board keyword	27
BICC settings	28
NbUP settings	29
IPBCP settings	30
SIP settings	31
SIP_stack keyword	31
SIP_config keyword	32
SIP_uas keyword	35
SIP header settings	37
SDP settings	37
RTP settings	39
PSTN settings	43
Video settings	45
Conferencing settings	48
DTMF settings	51
Fax tone recognition settings	53
Media capability settings	54
Media stream channel types	54
Media_board keyword	55
Resource keyword	56
Trunk and route settings	58
Trunk keyword	58
Route keyword	60
H.100 bus settings	63
Chapter 5: Administrative tasks	65
Call Server logging	65

Log file format65
Starting and stopping the Call Server68
Chapter 6: Glossary69

1

Introduction

The *Dialogic® Vision™ Call Server Administration Manual* provides detailed information about configuring the Dialogic® Vision™ Call Server for the Dialogic® Vision™ CX Video Gateway and the Dialogic® Vision™ VX Integrated Media Platform.

This manual supplements the *Dialogic® Vision™ CX Video Gateway Administration Manual* and the *Dialogic® Vision™ VX Integrated Media Platform User's Manual*, and assumes that you have read one of these manuals before using the current manual.

Note: The products to which this document pertains are part of the NMS Communications Platforms business that was sold by NMS Communications Corporation ("NMS") to Dialogic Corporation ("Dialogic") on December 8, 2008. Accordingly, certain terminology relating to the products has been changed. Below is a table indicating terminology that was formerly associated with the products, as well as the new terminology by which the products are now known.

Former terminology	Current terminology
Vision CX Gateway	Dialogic® Vision™ CX Video Gateway
Vision VoiceXML Server	Dialogic® Vision™ VX Integrated Media Platform

2 Overview

Overview of the Vision™ Call Server

The Vision™ Call Server is the subsystem of the Dialogic® Vision™ CX Video Gateway and the Dialogic® Vision™ VX Integrated Media Platform that manages call control capabilities. The Vision™ Call Server also functions as a media gateway for the Vision™ VX Integrated Media Platform. Depending on the telecom model your Vision™ Server supports, the Call Server can:

- Support the ISDN, ISUP, BICC, and SIP telecommunications protocols.
- Support signaling server subsystem for scalable and highly available SS7 connectivity.
- Terminate T1/E1 TDM audio trunks.
- Support 3G-324M video on TDM and IP networks.
- Leverage video transcoder resources for enhanced video gateways and applications.
- Execute CCXML applications.

Note: The remainder of this manual uses the term Call Server to refer to the Vision™ Call Server, and the term Vision™ Server to refer to both the Dialogic® Vision™ CX Video Gateway and the Dialogic® Vision™ VX Integrated Media Platform.

Call Server components

The Call Server is composed of three components:

- Telecom signaling layers
- Media capabilities
- CCXML Scripting Engine

These components are based on specific hardware support, including Dialogic® media boards and signaling boards.

Telecom signaling layers

The telecom signaling layers in the Call Server support the following telephony and signaling interfaces:

- ISDN protocol
- ISUP protocol
- BICC protocol
- VoIP protocols (SIP/RTP)

Media capabilities

The Call Server supports the following codecs:

Codec type	Description
Audio	<ul style="list-style-type: none"> • AMR (3GPP TS 26.090, 26.101, and 26.073, version 5.3.0, 2004) • G.711 A-law and mu-law • G.723.1 • G.726 • G.729 A
Video	<ul style="list-style-type: none"> • H.263, H.263+ • H.264 • MPEG-4
Fax relay	T.38

For information on the codecs and the standards supported, see the *Dialogic® Vision™ CX Video Gateway Administration Manual* and *Dialogic® Vision™ VX Integrated Media Platform User's Manual*.

The Call Server also supports audio conferencing using CCXML, Video 3G-324M, and Video-over-IP.

CCXML scripting engine

The CCXML scripting engine enables the Call Server to execute applications written in the Call Control Extensible Markup Language (CCXML). You can use CCXML to write applications that provide call control for the duration of a phone call, including call setup, monitoring, and tear-down. You can also use CCXML to implement conferencing. The CCXML version implemented in the Call Server is based upon the W3C Working Draft of CCXML dated 29 June 2005. For information, see <http://www.w3.org/TR/2005/WD-ccxml-20050629>.

For general information about using CCXML, including instructions for creating a CCXML application definition file, see the *Dialogic® Vision™ CCXML Developer's Manual*. For information about configuring the CCXML engine, see *CCXML scripting engine settings* on page 16.

Document conventions

The Call Server software is installed in the `/opt/nms/vx` directory. This manual uses the string `vx` to refer to the installation directory.

System file locations

The main Call Server system files are stored in the following default locations:

Directory	Description
<i>vx/callserver/conf/callserver.conf</i>	Call Server configuration file. For more information, see <i>Call Server configuration file</i> on page 13.
<i>vx/callserver/conf/telecom.conf</i>	Configuration file for signaling layers and media capabilities. For more information, see <i>Telecom configuration file</i> on page 23.
<i>vx/callserver/logs</i>	Call Server log file directory. For more information, see <i>Call Server logging</i> on page 65.

3

Call Server configuration file settings

Call Server configuration file

This section describes how to fine-tune the Call Server configuration by using the Call Server configuration file, *callserver.conf*, which resides in the *vx/callserver/conf* directory.

When specifying values for a particular setting, use the following syntax:

setting_name=setting_value

If ***setting_value*** is a long string, continue the value over several lines by placing a backslash (\) at the end of every line.

To designate time, use either seconds or milliseconds (ms), unless otherwise stated.

You can configure the following types of settings in the *callserver.conf* file:

- General
- Logging
- CCXML scripting engine
- Client-side HTTP
- VoiceXML dialog
- Fax call detection
- Call detail record generation

General settings

Use the following settings in the *callserver.conf* file to configure general settings for the Call Server:

Keyword	Description
ProcessName	Name of the Call Server process. Default: callserver
SNMPEnabled	Specifies whether to enable the Call Server's SNMP sub-agent. The SNMP sub-agent handles SNMP requests for getting and setting Call Server management information. It also sends SNMP notifications through the Net-SNMP master agent. Valid values: <ul style="list-style-type: none"> • true • false Default: true For information about using SNMP with the Call Server, see the <i>Dialogic® Vision™ SNMP Reference Manual</i> .
TelecomConfigFile	Location and name of the telecom configuration file. Default: <i>vx/callserver/conf/telecom.conf</i> For more information, see <i>Telecom configuration file</i> on page 23.

Logging settings

Use the following settings in the *callserver.conf* file to configure logging for the Call Server:

Keyword	Description
LogDir	Directory where Call Server system log files are stored. Default: <i>vx/callserver/logs</i>
SystemLogLevel	Severity of a log message when it is recorded in the system log file. Valid values (in order of decreasing severity and increasing verbosity): <ul style="list-style-type: none"> • FATAL ERROR • ERROR • WARNING • INFO1 • INFO2 • INFO3 • INFO4 • INFO5 Default: INFO1
SystemLogFileMaxNum	Maximum number of system log files kept by the Call Server. When this value is reached, the oldest system log file is deleted so that the number of log files does not exceed the specified quantity. A value of zero (0) specifies that the Call Server never deletes system log files. Valid values: 0 - 500 Default: 50
SystemLogFileMaxSize	Maximum size of the system log file. When the system log file reaches this size, the Call Server creates a new log file with an incremented file index. Include a unit identifier, such as MB or KB, with the value. The default unit identifier is MB. Valid values: 100KB - 500MB Default: 10MB
SystemLogTime	Time format for the Call Server system log. Valid values: <ul style="list-style-type: none"> • GMT: Greenwich Mean Time format. • LOCAL: Same time format as the local Vision™ Server. Default: LOCAL

For more information about logging, see *Call Server logging* on page 65.

CCXML scripting engine settings

Use the following settings in the *callserver.conf* file to configure the CCXML scripting engine:

Name	Description
CcxmlAppliConfig	<p>URI of the CCXML application definition file. This file maps number ranges to CCXML applications. It also contains application settings such as dialog server addresses and outbound routes.</p> <p>Currently, only <i>file://</i> URIs are supported.</p> <p>Default: <i>file://vx/callserver/conf/ccxmlappcfg.xml</i></p> <p>For more information, see the <i>Dialogic® Vision™ CCXML Developer's Manual</i> .</p>
CcxmlAppLogLevel	<p>Severity level of CCXML application logs.</p> <p>Valid values (in order of decreasing severity and increasing verbosity):</p> <ul style="list-style-type: none"> • 0 (info level 1) • 1 (info level 2) • 2 (info level 3) • 3 (info level 4) • 4 (info level 5) • 5 (info level 6) • 6 (info level 7) <p>Default: 2</p>
CcxmlCacheDir	<p>Cache directory for CCXML files.</p> <p>Default: <i>vx/callserver/data/ccxml</i></p>
CCXMLConnectionLocal	<p>Indicates whether to populate the <i>connection.local</i> property field with the content of the SIP TO field.</p> <p>Valid values:</p> <ul style="list-style-type: none"> • <i>to</i>: Populates the <i>connection.local</i> property with the content of the SIP TO field. • Any value besides <i>to</i>: Populates the <i>connection.local</i> property with the request-URI. <p>Default: Blank</p> <p>Use this setting for backward compatibility with previous versions that only use the TO field to populate <i>connection.local</i>.</p>

Name	Description
CcxmlDefaultAppType	<p>Type of application used for routing inbound calls that are not matched by a CCXML application.</p> <p>Valid values:</p> <ul style="list-style-type: none"> • CUSTOM: Call Server uses the CCXML application specified by the CcxmlInboundUri setting. By default, this application is <i>vx/callserver/www/ccxml/inbound.ccxml</i>, and it routes all inbound calls to a VoiceXML server. • GATEWAY: Call Server uses the CCXML application specified by the CcxmlGatewayUri setting, which references the information in the gateway routing table. By default, this application is called <i>vx/callserver/www/ccxml/gateway.ccxml</i>. <p>Default:</p> <ul style="list-style-type: none"> • GATEWAY, for the Vision™ CX Video Gateway • CUSTOM, for the Vision™ VX Integrated Media Platform
CcxmlDtdLocation	<p>Location of the CCXML DTD file.</p> <p>Default: <i>vx/callserver/package/ccxml.dtd</i></p>
CcxmlGatewayUri	<p>For gateway routing (CcxmlDefaultAppType = GATEWAY), URI of the CCXML application to execute when an incoming call is answered. This value can be an HTTP or file URI, and it must be a full URI.</p> <p>Default: <i>file://vx/callserver/www/ccxml/gateway.ccxml</i></p>
CcxmlGwAppliConfig	<p>URI of the gateway route table configuration file, which is used by gateway CCXML applications.</p> <p>Currently, only <i>file://</i> URIs are supported.</p> <p>Default: <i>file://vx/callserver/conf/gwappcfg.xml</i></p>
CcxmlInboundUri	<p>For custom CCXML applications (CcxmlDefaultAppType = CUSTOM), URI of the CCXML application to execute when the Vision™ Server answers a call whose dialed number does not match the number range for any of the configured CCXML applications.</p> <p>The value must be a full URI, because relative URIs are not allowed.</p> <p>Both HTTP and local file URIs are supported. In the latter case, the <i>file://</i> protocol specifier must precede the path.</p> <p>Default: <i>vx/callserver/www/ccxml/inbound.ccxml</i></p> <p>For information about configuring CCXML applications see the <i>Dialogic® Vision™ CCXML Developer's Manual</i>.</p>
CcxmlNumChannels	<p>Number of CCXML interpreter channels to be started. Each channel runs as a separate thread. The value of this field depends the number of configured CCXML ports.</p>
CcxmlOutboundUri	<p>URI of the initial page to execute when the Vision™ Server places a call through the CallPlacer interface, and the dialed number does not match the number range for any of the configured CCXML applications.</p> <p>The value must be a full URI, because relative URIs are not allowed.</p> <p>Both HTTP and local file URIs are supported. In the latter case, the <i>file://</i> protocol specifier must precede the path.</p> <p>Default: <i>file://vx/callserver/scripts/omp/outbound.ccxml</i></p> <p>For information about configuring CCXML applications see the <i>Dialogic® Vision™ CCXML Developer's Manual</i>.</p>

Name	Description
CcxmlResManThreads	Size of the resource manager thread pool, which dictates the number of fetch requests that can be serviced simultaneously. The thread pool is shared across all CCXML interpreter channels. Default: 40
CcxmlSysLogLevel	Severity level of the CCXML system log. Valid values (in order of decreasing severity and increasing verbosity): <ul style="list-style-type: none">• 0 (error)• 1 (warning)• 2 (info level 1)• 3 (info level 2)• 4 (info level 3)• 5 (info level 4)• 6 (info level 5) Default: 2

For information about using CCXML, see the *Dialogic® Vision™ CCXML Developer's Manual*.

Client-side HTTP settings

Use the following settings in the *callserver.conf* file to configure the Call Server client-side HTTP settings for transferring files over the internet:

Name	Description
BypassProxyAddress	Comma-separated list of IP addresses or host names for the proxy server to bypass. Default: 127.0.0.1,localhost
ProxyAddress	Name or IP address (and port) of the proxy server for the Call Server to use when fetching files. Use the following syntax to format an IP address: <i>IPAddress:Port</i> If no value is specified for this setting, the Call Server does not use a proxy server. Default: Blank
HTTPClientRepository	Location where temporary files downloaded by the Call Server are stored. Default: <i>vx/callserver/data/cache</i>

VoiceXML dialog settings

Use the DialogDisconnectMode setting in the *callserver.conf* file to specify how the Call Server operates with a VoiceXML Server when connections are disconnected; for example, when a caller hangs up.

The valid values for DialogDisconnectMode are:

Value	Description
BYE	(Default) The dialog between the Call Server and the VoiceXML Server immediately terminates.
DISCONNECT	The VoiceXML Server is notified when the call is disconnected and is then allowed to terminate the dialog gracefully. Use this mode for full W3C compliance when the Call Server expects the VoiceXML application to return exit data.

Fax call detection settings

Use the following settings in the *callserver.conf* file to enable the Call Server to detect and react to T.38 fax calls:

Name	Description
DetectFaxToneCNG	<p>Enables or disables the CNG (calling) tone detector, which determines whether an incoming call is a fax call.</p> <p>Valid values:</p> <ul style="list-style-type: none"> • TRUE: Enables the CNG tone detector. • FALSE: Disables the CNG tone detector. <p>Default: FALSE</p>
InitiateReInviteUponFaxToneCNG	<p>Indicates whether to issue a SIP RE-INVITE with T.38 SDP when the Call Server detects a CNG tone.</p> <p>Valid values:</p> <ul style="list-style-type: none"> • TRUE: Initiates a SIP RE-Invite with T.38 SDP • FALSE: Does not initiate a SIP RE-INVITE. <p>Default: FALSE</p>

By default, the fax CNG tone detector listens for tones that have a minimum amplitude of 28 decibels and a minimum duration of 300 ms. To change these specifications, see *Fax tone recognition settings* on page 53.

Call detail record generation settings

Use the following settings in the *callserver.conf* file to enable the Call Server to generate call detail records (CDRs).

Setting	Description
BillingCDRBaseDir	Directory in which to store call detail records (CDRs). CDRs are written every hour to a file named <i>YYYY/MM/DD/HH.cdr</i> , off the base directory. CDRs written to this file are in a concise, non-XML format. Default: <i>vx/callserver/cdr</i>
BillingEnabled	Indicates whether the Call Server generates CDRs. Valid values: <ul style="list-style-type: none">• true• false Default: false

For information about the Call Server's CDRs, see the *Dialogic® Vision™ CX Video Gateway Administration Manual* or the *Dialogic® Vision™ VX Integrated Media Platform User's Manual*.

4 Telecom configuration file settings

Telecom configuration file

Note: Because the Vision™ Server is pre-configured at the factory, you should not change the settings described in this section without first consulting Dialogic Services and Support.

This section describes how to fine-tune your existing telecom configuration using the telecom configuration file, *telecom.conf*, which resides in the *vx/callserver/conf* directory.

The telecom configuration file provides information about the boards that interface with the gateway, and about logical elements such as the number of routes and the circuit selection strategy. The telecom configuration file is a text file that contains a list of keywords that the gateway interprets at start-up.

The following terms are used for describing the identifiers required by some keywords:

Term	Description
Logical board identifier	Numerical value (starting at 1) that references a signaling or media board in this configuration file, for the purpose of associating the board to other configuration elements.
Physical board index	Numerical value (generally starting at 0) that references the hardware board. For Dialogic® media boards, this is the board index in the <i>oamsys.cfg</i> configuration file. For Dialogic® signaling boards, the index can be retrieved or set using the <i>txcpcfg</i> utility. For more information about the <i>oamsys.cfg</i> file, see the <i>Dialogic® OAM API Developer's Manual</i> . For more information about the <i>txcpcfg</i> utility, see the <i>Dialogic® TX Series SS7 Boards TX Utilities Manual</i> .

When specifying values for a particular setting, use the following syntax:

setting_name setting_value

The setting name is case sensitive.

You can define the following types of settings in the *telecom.conf* file:

- ISDN
- ISUP
- BICC
- NbUP
- IPBCP
- SIP
- PSTN
- Video
- Conferencing

- DTMF
- Fax tone recognition
- Media capability
- Trunk and route
- H.100 bus

ISDN settings

Use the `ISDN_board` keyword in the `telecom.conf` file to define ISDN settings for the Vision™ Server.

Syntax

`ISDN_board` ***sig_board_num board_vendor_id ISDN_type***

Parameter	Description
<i>sig_board_num</i>	Logical signaling board identifier. Valid values: 1 - 8
<i>board_vendor_id</i>	Vendor identifier of the board.
<i>ISDN_type</i>	ISDN protocol variant. Valid values: <ul style="list-style-type: none"> • ATT_4ESS = AT&T 4ESS • ATT_5E10 = AT&T 5ESS10 • AUSTEL_1 = Australian Telecom 1 • ECMA_QSIG = ECMA 143 QSIG • ETSI = EuroISDN (ETSI ISDN) • HK_TEL = Hong Kong Telecom • KOREAN_OP = Korean operator • NI2 = US National ISDN 2 • NT_DMS = Northern Telecom DMS100 • NT_DMS250 = Northern Telecom DMS250 • NTT = Nippon Telegraph Telephone • TAIWAN_OP = Taiwanese operator • VN6 = France Telecom VN6

Example

The following example enables the EuroISDN protocol on CG board 0:

```
# protocol variant = ETSI ISDN (EuroISDN)
ISDN_board 1 0 ETSI
```

ISUP settings

The keyword used to define ISUP settings depends on whether the Vision™ Server model uses native ISUP or a Vision™ Signaling Server for ISUP signaling.

VS_isup_server keyword

Use the VS_isup_server keyword to define signaling server settings for ISUP audio and ISUP video models that use Vision™ Signaling Servers.

Syntax

VS_isup_server **sig_server_num board_vendor_id ISUP_start_circuit
SS7_node_pc SS7_switch_type signaling_and_bearer_type**

Parameter	Description
<i>sig_server_num</i>	Logical signaling server identifier. Valid values: 1 - 2
<i>board_vendor_id</i>	Vendor identifier of the signaling server.
<i>ISUP_start_circuit</i>	Starting circuit number of the circuits that the Signaling Server will handle.
<i>SS7_node_pc</i>	SS7 local point code (in decimal).
<i>SS7_switch_type</i>	Switch type (ISUP protocol variant). Valid values: <ul style="list-style-type: none"> • ANS88 = ANSI 88 (ref. T1.123 – 1988) • ANS92 = ANSI 92 (ref. T1.113 – 1992) • ANS95 = ANSI 95 (ref. T1.113 – 1995) • ANSIBICC = ANSI BICC (T1.BICC.1-2000 to T1.BICC.7-2000) • ETSIV2 = ETSI v2 (ETS 300 356) • ETSIV3 = ETSI v3 (ETS 300 356-1 – 1998) • ITUBICC = ITU-T BICC (Q.1901, Q.1902-6) • ITUBLUE = ITU-T Blue Book • ITUWHITE = ITU-T White Book • ITU97 = ITU-T 1997 • JTTC = JTTC (Japan TTC) • JNTT = JNTT (Japan NTT) • Q767 = ITU-T Q.767
<i>signaling_and_bearer_type</i>	Signaling and bearer type that the signaling server uses. Valid values are: <ul style="list-style-type: none"> • ISUP = ISUP • BICC+IP = BICC with IP bearer channels Default: ISUP

ISUP_board keyword

Use the ISUP_board keyword to define native ISUP settings for the Vision™ Server.

Syntax

ISUP_board *sig_board_num board_vendor_id <SS7_node_pc>*
<switch_type>

Parameter	Description
<i>sig_board_num</i>	Logical signaling board identifier. Valid values: 1 - 8
<i>board_vendor_id</i>	Vendor identifier of the board.
<i><SS7_node_pc></i>	SS7 local point code (in decimal).
<i><switch_type></i>	Switch type (ISUP protocol variant). Valid values: <ul style="list-style-type: none"> • ANS88 = ANSI 88 (ref. T1.123 – 1988) • ANS92 = ANSI 92 (ref. T1.113 – 1992) • ANS95 = ANSI 95 (ref. T1.113 – 1995) • ETSIV2 = ETSI v2 (ETS 300 356) • ETSIV3 = ETSI v3 (ETS 300 356-1 – 1998) • ITU97 = ITU-T 1997 • ITUWHITE = ITU-T White Book • ITUBLUE = ITU-T Blue Book • JTTC = JTTC (Japan TTC) • JNTT = JNTT (Japan NTT) • Q767 = ITU-T Q.767 Default: None. The protocol variant specified here must match that specified in the configuration files associated with the Dialogic® signaling board. For basic ISUP models, the protocol variant must match the variant declared in the signaling board configuration files (<i>isupcp1.cfg</i> and <i>ss7load</i>). For more information, see the <i>Dialogic® Vision™ CX Video Gateway Administration Manual</i> or the <i>Dialogic® Vision™ VX Integrated Media Platform User's Manual</i> .

Example

The following example enables the ETSI v2 ISUP protocol on one Dialogic® signaling board (point code 8000) and the ISUP ITU White Book protocol on another Dialogic® signaling board (point code 9000):

```
# First ISUP board on SS7 point code 8000, linked to an ETSI v2 Switch.
ISUP_board 1 1 8000 ETSIV2 ISUP
# Second ISUP board on SS7 point code 9000, linked to an "ITU White Book" Switch
ISUP_board 2 2 9000 ITUWHITE ISUP
```

BICC settings

For ISUP models with Vision™ Signaling Servers configured for BICC, use the BICC_ip_bearer keyword to specify information about IP bearer channels and their dimensioning. The following table describes the parameters for the BICC_ip_bearer keyword that you can change if the defaults do not describe your configuration.

Syntax

BICC_ip_bearer ***sig_board_num media_board_num max_circuits trunk_type***

Parameter	Description
<i>sig_board_num</i>	Logical signaling board identifier, referring to a board previously declared with the VS_isup_server keyword. Valid values: 1-8.
<i>media_board_num</i>	Logical media board identifier, referring to a board previously declared with the Media_board keyword. Valid values: 1-8.
<i>max_circuits</i>	Maximum number of IP bearer channels to be created on that media board. Typically this value should not exceed the number of RAW, G.711, and AMR resources defined on that board.
<i>trunk_type</i>	Type of trunk. Valid values: <ul style="list-style-type: none"> • E1 (30 media channels) • T1 (23 media channels) • E1RAW (31 media channels) • T1RAW (24 media channels) Default: E1RAW.

NbUP settings

For ISUP models with Vision™ Signaling Servers configured for BICC, use the NbUP parameters to specify information about NbUP endpoints. The following table describes the NbUP parameters that you can change if the defaults do not describe your configuration.

Parameter	Description
<i>nbupInitTimerDuration</i>	NbUP initialization phase maximum duration in milliseconds. Default: 1000.
<i>nbupInitRetry</i>	Number of retries upon initialization failure. Default: 3.
<i>nbupPayloadId</i>	The payload id of the RTP packets to be sent and received. Default: 123.
<i>nbupFrameDuration</i>	The duration of the media put into each NbUP / RTP packet. Only used for G.711 or H.223 codec. This parameter is ignored for AMR streams since 20 ms frame duration is required. Default: 5.
<i>nbupAudioPreferredCodec</i>	The audio codec to be specified in the APP transport element of the BICC IAM message for audio calls. Valid values: <ul style="list-style-type: none"> • BCF_NO_CODEC • BCF_CODEEC_AMR • BCF_CODEEC_AMR2 • BCF_CODEEC_G711 Default: BCF_NO_CODEC.
<i>nbupPduType</i>	Specifies whether error detection is performed on the payload. Valid values: <ul style="list-style-type: none"> • 0: With payload CRC (default) • 1: Without payload CRC Default: 0.
<i>nbupMode</i>	Specifies whether the gateway is the master or slave in the NbUP initialization. Valid values: <ul style="list-style-type: none"> • 0: slave • 1: master Default: 0.

IPBCP settings

For ISUP models with Vision™ Signaling Servers configured for BICC, use the IPBCP parameters to specify information about IPBCP negotiation. The following table describes the IPBCP parameters that you can change if the defaults do not describe your configuration.

Parameter	Description
<i>ipbcSetupVariant</i>	Call flow to use for outbound audio calls. Valid values: 0 : Fast forward tunneling. 1 : Delayed forward tunneling. Default: 1.
<i>ipbcVideoSetupVariant</i>	Call flow to use for outbound video calls. Valid values: 0 : Fast forward tunneling. 1 : Delayed forward tunneling. Default: 0.

SIP settings

Use the following settings in the *telecom.conf* file to configure SIP settings for the Vision™ Server:

Settings	Description
SIP_stack keyword	Specifies SIP interfaces and dimensioning.
SIP_config keyword	Changes configuration parameters for a declared SIP interface.
SIP_uas keyword	Defines peer SIP user agents or SIP proxy addresses that determine the platform's load balancing and failover strategy.
SIP header settings	Defines additional MIME headers for SIP, and includes or excludes the transport parameter from the SIP TO and FROM fields.
SDP-related settings	Group of settings that define SDP parameters.
RTP-related settings	Group of settings that define RTP parameters.

SIP_stack keyword

The SIP_stack keyword specifies SIP interfaces and their dimensioning.

Syntax

SIP_stack *interface_num* *DLL_name* RTP *max_RTP_contexts*
media_board_num

Parameter	Description
<i>interface_num</i>	Logical interface index, numbering the SIP stack declared in the configuration and starting at 1. Currently, only one SIP stack is supported.
<i>DLL_name</i>	Name of the DLL providing the SIP stack. Default and only value: RV_SIP
RTP <i>max_RTP_contexts</i> <i>vocal_board_num</i>	The RTP keyword specifies the maximum number of SIP contexts with on-board RTP available on the specified media board: <ul style="list-style-type: none"> <i>max_RTP_contexts</i> = Maximum number of SIP contexts with on-board RTP. <i>vocal_board_num</i> = Logical media board identifier, which refers to a media board previously declared with the Media_board keyword. Valid values are 1-8. For information about the Media_board keyword, see <i>Media capability settings</i> on page 54. Repeat this command sequence for each media board.

Examples

The following example uses the SIP_stack keyword to declare 120 SIP contexts and 120 RTP contexts on board 3:

```
# SIP/RTP interface with 120 SIP contexts and 120 RTP contexts as well, on board #3
SIP_stack 1 RV_SIP RTP 120 3
```

The following example uses the SIP_stack keyword to declare 240 SIP contexts and 240 RTP contexts on boards 3 and 4. Each board has 120 ports:

```
# SIP/RTP interface with 120 SIP contexts and 120 RTP contexts as well, on board #3
# and board #4 (each having 120 ports)
SIP_stack 1   RV_SIP   RTP 120 3   RTP 120 4
```

SIP_config keyword

For each declared SIP interface, you can change several configuration parameters using the SIP_config keyword with the following syntax:

SIP_config **interface_num parameter value**

Parameter	Description
interface_num	Logical interface index, which refers to a SIP stack previously declared with the SIP_stack keyword.
parameter	(Optional) Name of an interface configuration parameter. parameter is always paired with value . Repeat the parameter value sequence for each parameter whose value you want to change.
value	(Optional) Value of an interface configuration parameter specified by parameter . For a description of valid values, see Valid values for parameter.

Valid values for parameter

Valid values for **parameter** are:

Parameter name	Description
1XXNotif	Processing of SIP provisional responses. Valid values: <ul style="list-style-type: none"> • true: Forwards provisional SIP responses (1XX) to the Vision™ Server scripting engine as notifications. • false: Ignores provisional SIP responses (1XX). Default: false
ackNotif	Processing of ACK notifications. Valid values: <ul style="list-style-type: none"> • true: Forwards ACK messages to the Vision™ Server scripting engine as notifications. • false: (Default) Handles ACK messages automatically without notifying the call control scripts. Default: false
localIPaddress	Local IP address of the SIP interface. Use this parameter to supersede the default IP address, which is automatically retrieved at start-up. This can be useful if the host has several network adapters and you need to select the adapter to be used for SIP. Default: Internet address of the primary network adapter of the host (automatically retrieved).

Parameter name	Description
maxCallLegs	Maximum number of call legs handled in the SIP stack. Default: 512
poolINbPages	Number of pages in the memory pool used by the SIP stack. Default: 512
poolPageSize	Size in bytes for the memory pool used by the SIP stack. Default: 1024
reclInfoAutoResponse	Processing of INFO messages. Valid values: true: Sends a 200 OK reply for received SIP INFO requests. false: Does not send a 200 OK reply for received SIP INFO requests. Default: false
sendReceiveBuffer	Maximum send/receive buffer size for SIP messages, in bytes. Valid values: Integer up to 30720 bytes (30 Kb) Default: 5120 bytes (5 Kb)
setStackToLocalAddress	Indicates whether the SIP stack listens to the local IP address. Valid values: <ul style="list-style-type: none"> • true: SIP stack listens to the local IP address. • false: SIP stack listens to 0.0.0.0. Default: false
sipLog	Debug traces. Valid values: <ul style="list-style-type: none"> • true: Generates textual SIP traces for debugging in <i>rvsipLog.txt</i>. • false: Does not generate textual SIP traces for debugging in <i>rvsipLog.txt</i>. Default: false Note: This parameter is intended for debugging purposes and should be used with caution. When SIP logging is enabled, many trace messages are generated, which is generally not suitable for in-service environments. When in-service, using a SIP probe or network analyzer (such as Ethereal) can provide a more suitable alternative.
T1	Value of the T1 protocol timer, in milliseconds (ms). Default: 500
tcpLocalPort	Listening port when using TCP as a transport protocol. Default: 5060
transport	Transport protocol for SIP (over TCP or UDP). Valid values: <ul style="list-style-type: none"> • tcp • udp Default: tcp

Parameter name	Description
<i>transportPersistency</i>	<p>Transport persistency level.</p> <p>When TCP is used as a transport layer, this option sets the transport persistency level to optimize the connections used for transactions.</p> <p>Valid values:</p> <ul style="list-style-type: none">• 0: TRANSPORT_PERSISTENCY_LEVEL_TRANSC Connection kept for a transaction.• 1: TRANSPORT_PERSISTENCY_LEVEL_TRANSC_USER Connection kept for all transactions from the same session. <p>Default: 1</p>
<i>udpLocalPort</i>	<p>Listening port when using UDP as a transport protocol.</p> <p>Default: 5060</p>

Example

The following example uses the SIP_config keyword to change the specified SIP configuration parameters:

```
SIP_config 1 transport tcp acknotif true tcpLocalPort 5060 udpLocalPort 5060
```

SIP_uas keyword

The SIP_uas keyword defines peer SIP user agents or SIP proxy addresses that determine the platform's load balancing and fail-over strategy. Use this keyword for each declared SIP interface.

Syntax

SIP_uas *interface_num media_mode IP_address:port[priority]*

Parameters	Description
<i>interface_num</i>	Logical interface index, referring to a SIP stack previously declared with the SIP_stack keyword.
<i>media_mode</i>	Media control mode supported by the SIP UAs. Valid value: RTP: Standard UAs using SIP/RTP
<i>IP_address</i>	IP address of the peer SIP UAs. The address must be given in traditional quad-dot notation (<i>www.xxx.yyy.zzz</i>), optionally specifying a port number. You can use several SIP_uas configuration lines to declare the IP addresses of the peer SIP UAs or SIP proxy servers that the platform tries to reach. If you declare several addresses, the platform uses them for its load balancing and fail-over strategy (random-robin mechanism). You can optionally specify a priority (<i>P</i>) between brackets for load-balancing and fail-over: $(0 \leq P \leq 65535 \text{ with } \text{priority}(P1) > \text{priority}(P2) \text{ if } P1 < P2)$ Proxies with the same priority are subject to the same load balancing and fail-over processes.
<i>port[priority]</i>	(Optional) Port number for SIP on the peer SIP UA with an optional priority for load balancing or fail-over. Default port number: 5060 Valid values for priority: 0 - 65535 Default priority: 0

Example 1: Configuration with one proxy server

The following example configuration declares a SIP proxy server located at 123.123.123.201:5060:

```
# SIP proxy server
SIP_uas 1 RTP 123.123.123.201:5060
```

Example 2: Configuration with two proxy servers for fail-over

In the following example, the first line defines a SIP proxy server located at 123.123.123.201 using the default port 5060. The proxy server has priority 0 (highest priority). The second line defines a SIP proxy server located at 123.123.123.202 using port 5063, with priority 1.

With these settings, the first proxy with priority 0 is always used (no load balancing) as long as it can handle the calls. If it fails, then the second proxy with priority 1 is used instead.

```
# Main SIP proxy server
SIP_uas 1 RTP 123.123.123.201[0]
# Back-up SIP proxy server
SIP_uas 1 RTP 123.123.123.202:5063[1]
```

You can configure two proxies on one single configuration line with a comma as a separator. For example:

```
# SIP proxy servers (main and back-up)
SIP_uas 1 RTP 123.123.123.201[0],123.123.123.202:5063[1]
```

Example 3: Configuration with three proxy servers for fail-over and load balancing

The following example defines a SIP Proxy located at 123.123.123.201 with priority 0. It also defines two other proxies at 123.123.123.202 and 123.123.123.203 respectively, both with priority 1.

```
# SIP proxy servers
SIP_uas 1 RTP 123.123.123.201[0],123.123.123.202:5063[1],123.123.123.203:5063[1]
```

Proxy 123.123.123.201 is always used unless a failure occurs. In that case, the proxy servers 123.123.123.202 and 123.123.123.203 are used randomly since they have the same priority. If proxy 123.123.123.202 then fails, proxy 123.123.123.203 is used instead.

SIP header settings

Use following settings in the *telecom.conf* file to define additional MIME headers for SIP or to include or exclude the transport parameter from the SIP TO and FROM fields:

Name	Description
sipCustomHeader	<p>Defines additional MIME headers for SIP. This setting can be repeated, as shown in the following example:</p> <pre> sipCustomHeader= Vision-ServiceNumber sipCustomHeader= Vision-Prepare-dialog sipCustomHeader= Vision-InitialURI sipCustomHeader= Vision-ParentCallID </pre>
sipDefaultCallMode	<p>Indicates whether the Call Server should initiate an audio or video PSTN outbound call when it receives a SIP INVITE that does not contain an SDP offer.</p> <p>Valid values:</p> <ul style="list-style-type: none"> • audio: Initiates outbound PSTN calls in video (3G-324M). • video: Initiates outbound PSTN calls in audio. <p>Defaults:</p> <ul style="list-style-type: none"> • audio for an audio-only Vision™ Server • video for a video (3G-324M) Vision™ Server
sipTransportInFrom	<p>Determines whether the transport parameter is included in the SIP From field.</p> <p>Valid values:</p> <ul style="list-style-type: none"> • 0: Exclude the transport parameter from the SIP From field. • 1: Include the transport parameter in the SIP From field. <p>Default: 1</p>
sipTransportInTo	<p>Determines whether the transport parameter is included in the SIP To field.</p> <p>Valid values:</p> <ul style="list-style-type: none"> • 0: Exclude the transport parameter from the SIP To field. • 1: Include the transport parameter in the SIP To field. <p>Default: 1</p>

SDP settings

Use the following settings in the *telecom.conf* file to define SDP settings for the gateway. The syntax for these settings is:

setting_name setting_value

The setting names are case sensitive.

Name	Description
h263DefaultFmtp	<p>Default fmtp attribute (a=fmtp) added to the outbound SDP when routing PSTN video calls to a SIP agent using the H.263 or H.263+ codecs.</p> <p>Valid value: One or more fmtp parameters formatted as a string. Separate the parameters with spaces.</p> <p>Default: QCIF=4 MaxBr=452</p>

Name	Description
h264DecoderInfo	<p>Out-of-band DCI (decoder configuration information) for the H.264 video codec, sent to the remote server during H.324M negotiation.</p> <p>Valid value: Decoder configuration information formatted as a hexadecimal string</p> <p>Default: none.</p>
h264DefaultFmtp	<p>Default fmtp attribute added to the outbound SDP when routing PSTN video calls to a SIP agent using the H.264 codec.</p> <p>Valid value: One or more valid media attributes formatted as a string. Separate the attributes with semicolons.</p> <p>Default: profile-level-id=42e00a; max-br=40</p>
mpeg4DecoderInfo	<p>Out-of-band DCI for the MPEG-4 video codec, sent to the remote server during the H.324M negotiation.</p> <p>Valid value: Decoder configuration information formatted as a hexadecimal string.</p> <p>Default: 000001b008000001b509000001000000012000845d4c282c2090a21f</p>
mpeg4DefaultFmtp	<p>Default fmtp attribute added to the outbound SDP when routing PSTN video calls to a SIP agent using the MPEG-4 codec.</p> <p>Valid value: One or more valid media attributes formatted as a string. Separate the parameters with semicolons.</p> <p>Default: profile-level-id=1; bitrate=42000</p>
sipSdpFull	<p>Defines default SDP parameters according to the following format:</p> <pre data-bbox="634 1037 1390 1373"> sipSdpFull { v=... o=... s=... c=... t=... m=... a=rtpmap... a=rtpmap... a=rtpmap... . . . } </pre> <p>Fields v, o, s and m are mandatory. Attributes (a) are optional. They have to be filled according to RFC 2327. Ports in m= fields are updated automatically.</p> <p>If sipSdpFull is not defined, the following values are automatically used for audio SDP:</p> <pre data-bbox="634 1541 1390 1808"> sipSdpFull { v=0 o=omp 2890844526 2890844526 IN IP4 123.123.123.101 s=sessionOMP c=IN IP4 123.123.123.101 t=0 0 m=audio 1234 RTP/AVP 0 8 96 a=rtpmap:0 PCMU/8000/1 a=rtpmap:8 PCMA/8000/1 a=rtpmap:96 telephone-event/8000/1 } </pre> <p>If sipSdpFull is not defined, the following values are automatically used for video SDP:</p>

Name	Description
	<pre> sipSdpFull { v=0 o=omp 2890844526 2890844526 IN IP4 123.123.123.101 s=sessionOMP c=IN IP4 123.123.123.101 t=0 0 m=audio 1234 RTP/AVP 98 0 96 a=rtpmap:98 AMR/8000/1 a=rtpmap:0 PCMU/8000/1 a=rtpmap:96 telephone-event/8000/1 m=video 1234 RTP/AVP 102 101 115 34 a=rtpmap:102 H264/90000 a=rtpmap:101 MP4V-ES/90000 a=rtpmap:115 H263-1998/90000 a=rtpmap:34 H263/90000 } </pre>
sipSdpLessInviteFor3GGateway	<p>Determines whether to send SDP in an outbound SIP INVITE that routes inbound PSTN video calls to a SIP agent.</p> <p>Valid values:</p> <ul style="list-style-type: none"> • true: Invite does not contain the SDP. • false: Include SDP in the Invite. <p>Default: true</p>
sipSdpDefaultAudioFrameSize	<p>The length of time in milliseconds represented by the media in a packet.</p> <p>Valid values: 10, 20, 30, 40, 50, 60, 70, 80, 90, 100.</p> <p>Default: 20.</p>

RTP settings

Use the following settings in the *telecom.conf* file to define RTP settings for the gateway. The syntax for these settings is:

setting_name setting_value

The setting name is case sensitive.

Name	Description
mediaStreamDeactivationMode	<p>Defines the action applied on a media stream at the end of any media over IP request (such as prompt playback).</p> <p>Valid values:</p> <ul style="list-style-type: none"> • 0: Full release. The DS0 endpoint is returned to its pool and the media stream is disabled, disconnected, and finally destroyed. • 1: Disabled only. The media stream is disabled, but the objects are not destroyed. Voice can no longer be conveyed. • 2: No action. The media stream remains active. <p>Default: 1</p>

Name	Description
mspChnAdaptEnable	<p>Whether the adaptive jitter mode is enabled. When the adaptive jitter mode is enabled, the jitter buffer automatically increases or decreases the number of frames in the jitter depth according to the number of frames received in the previous five seconds.</p> <p>Valid values:</p> <ul style="list-style-type: none"> • 0: Disabled • 1: Enabled <p>Default: 0</p>
mspChnDecoderDtmfMode	<p>Specifies how DTMF tones are decoded from RTP packets. The value of this parameter is a 16-bit word composed of two 8-bit bytes.</p> <p>The first byte is the control parameter.</p> <p>Valid values for the first byte:</p> <ul style="list-style-type: none"> • 0: No RFC 2833 decoding. • 1: RFC 2833 decoding. • 3: RFC 2833 decoding with DTMF events sent to the application. <p>The second byte indicates the number of decoder frames generated before stopping, when no-end-of-tone packet is received,</p> <p>Default value: 771 (0x0303) - RFC 2833 enabled, three frames.</p>
mspChnDecoderGain	<p>Decoder gain.</p> <p>Default: 1024</p>
mspChnDecoderMode	<p>Decoder mode.</p> <p>Valid values:</p> <ul style="list-style-type: none"> • 0: Offline • 1: Online <p>Default: 1</p>
mspChnEncoderDtmfMode	<p>Indicates how to encode DTMF tones into RTP packets.</p> <p>Valid values:</p> <ul style="list-style-type: none"> • 0: RFC 2833 disabled. • 1: RFC 2833 enabled. DTMF tones are not transmitted as voice data. • 5: Voice enabled. DTMF tones are transmitted both as RFC 2833 packets and in-voice packets. • 9: RFC 2833 is enabled and the encoder shifts the timestamp of associated DTMF packets. <p>Default: 1</p> <p>Note: The payload ID for RFC 2833 compliant in-band packets is automatically defined by SIP/SDP negotiation.</p>
mspChnEncoderGain	<p>Encoder gain.</p> <p>Default: 1024</p>

Name	Description
mspChnEncoderMode	Encoder mode. Valid values: <ul style="list-style-type: none"> • 0: Offline • 1: Online Default: 1
mspChnEncoderRate	Encoder rate applicable to G.723 only. Valid values: <ul style="list-style-type: none"> • 0: 6.4 kbit/s • 1: 5.3 kbit/s Default: 0
mspChnJitterDepth	Size in frames of the internal queue maintained by a jitter filter. A jitter filter holds frames in the queue and does not transmit them until it accumulates the number of frames specified by the jitter depth. While holding the frames, the jitter filter transfers null frames with empty payloads. Once the number of frames specified by the jitter depth has accumulated, the output function draws from the queue at the rate defined by the vocoder type. Valid values: Integer > 0 Default: 2
mspChnNotchControl	Enables, disables, or both the DTMF/CED tone suppression filters. Valid values: <ul style="list-style-type: none"> • 0: DTMF and CED notch filters disabled. • 1: DTMF notch filter enabled, CED notch filter disabled. • 2: DTMF notch filter disabled, CED notch filter enabled. • 3: DTMF and CED notch filters enabled. Default: 0
mspChnVadControl	Enables or disables voice activity detection (VAD) on the media stream. Valid values: <ul style="list-style-type: none"> • 0: Disabled. • 1: Enabled Silence packets are filtered and are not sent over the network. Comfort noise packets are sent instead. Default: 0
mspRtpTOS	IPv4 ToS (type of service) field specified in the IP header. Valid values: Integer ≥ 0 Default: 0

Name	Description
rfc2833Encoding_IPMode	<p>In case of IP mode (no PSTN leg), set to TRUE if incoming inband DTMF must be encoded into RFC 2833 packets to the destination.</p> <p>Valid values:</p> <ul style="list-style-type: none">• TRUE• FALSE <p>Default: FALSE</p>

PSTN settings

Use the following settings in the *telecom.conf* file to define PSTN settings for the Vision™ Server. The syntax for these settings is:

setting_name setting_value

The setting name is case sensitive.

Setting	Description
callingPartyNumber	Calling party number, formatted according to ITU-T Q.763. See also the table below for the format. Default: None.
csThreadTimeInIdleState	Time interval for which a call thread remains alive after the associated call ends. The call thread is used by another call to avoid the overhead of creating a new thread. A call thread is created for a call when needed, to manage a call's events. Default : 3600 ms (1 hour)
defaultReleaseCause	Release cause returned when no application is triggered by the CCF::IncomingCall notification. For information, see ITU-T recommendation Q.850, section 2.2.5. Default: 31.
timer_connected	Defense timer in connected, trombone, and conference states. Value in seconds or INFINITY. <ul style="list-style-type: none"> • <i>n</i> seconds • INFINITY Default: INFINITY.
timer_incomingCall	Time interval within which the gateway answers an incoming call. If the gateway cannot answer the call within the specified interval, it rejects the call. This prevents gateway timeslots from getting busy with inbound calls that did not get connected or rejected. <ul style="list-style-type: none"> • <i>n</i> seconds • INFINITY Default: 180.
timer_placingCall	Waiting time of the answer to an outgoing call placed by the platform. Valid values: <i>n</i> seconds or INFINITY Default: 120.
timer_releaseConfirm	Waiting time of the release confirmation when a release message is sent by the platform. Valid values: <ul style="list-style-type: none"> • <i>n</i> seconds • INFINITY Default: 10

The format (character string) used for phone numbers for the callingPartyNumber setting is as follows.

Information	Length	Value
Delimiter	1 character	T
Nature of address indicator	1 character	0000001 = subscriber number 0000010 = unknown address 0000011 = national (significant) number 0000100 = international number 0000101 to 1101111 = spare 1110000 to 1111110 = reserved for national use 1111111 = spare
Delimiter	1 character	I or N
		If the delimiter is I: Internal network number indicator (INN indicator) 0 = routing to internal network number allowed 1 = routing to internal network number not allowed
		If the delimiter is N: Calling party number incomplete indicator 0 = complete 1 = incomplete
Numbering plan indicator	1 character	0 = complete 1 = ISDN (Telephony) numbering plan 2 = spare 3 = Data numbering plan 4 = Telex numbering plan 5 = reserved for national use 6 = reserved for national use 7 = spare
Presentation indicator	1 character	0 (unused)
Screening	1 character	0 (unused)
Address signal	1 to 30 characters	0 = digit 0 1 = digit 1 2 = digit 2 3 = digit 3 4 = digit 4 5 = digit 5 6 = digit 6 7 = digit 7 8 = digit 8 9 = digit 9

Video settings

Use the following settings in the *telecom.conf* file to define video settings for the Vision™ Server. The syntax for these settings is:

setting_name setting_value

The setting name is case sensitive.

Name	Description
amrModeChoice	<p>AMR codec mode.</p> <p>Valid values:</p> <ul style="list-style-type: none"> • 0: MR475 (4.75 kbit/s) • 1: MR515 (5.15 kbit/s) • 2: MR59 (5.90 kbit/s) • 3: MR67 (6.70 kbit/s) • 4: MR74 (7.40 kbit/s) • 5: MR795 (7.95 kbit/s) • 6: MR102 (10.20 kbit/s) • 7: MR122 (12.20 kbit/s) <p>Default: 7</p>
dialogAlwaysVideoTranscoding	<p>Indicates whether the VX Integrated Media Platform uses video transcoding in a dialog leg.</p> <p>Valid values:</p> <ul style="list-style-type: none"> • TRUE: If enabled, video transcoding is inserted in the video path regardless of the negotiated video codec on either side. • FALSE: If disabled, video transcoding only applies to calls with different video codec characteristics such as different codec or different picture frame. <p>Default: FALSE</p>
enableVideoTranscoding	<p>Indicates whether video transcoder resources are available for the Vision™ Server.</p> <p>Valid values:</p> <ul style="list-style-type: none"> • TRUE: If enabled, video transcoding is inserted in the video path if the Vision Server finds incompatible video codec characteristics between call legs. • FALSE: If disabled, the call is dropped if the Vision Server finds incompatible video codec characteristics. <p>Default: FALSE</p>
h263CapabilityMaxBitRate	<p>Gateway terminal capability that determines the maximum bit rate for video in bit/s.</p> <p>Valid values: Integer > 0</p> <p>Default: 43000</p>

Name	Description
h263ModeBitRate	<p>Gateway terminal capability that determines the bit rate for video in bit/s.</p> <p>Valid values: Integer > 0</p> <p>Default: 43000</p>
h324ResponseTimeout	<p>Delay (in seconds) to wait for the H324EVN_MEDIA_SETUP_DONE event during H.324 negotiation. A video call is terminated when a timeout occurs.</p> <p>Valid values: Integer > 0</p> <p>Default: 30</p>
h324TraceLevel	<p>Trace level for the Dialogic® H.324 stack.</p> <p>The trace level is a bit mask. For more information, see the Dialogic® Video Access 3G-324M Interface Developer's Reference Manual.</p> <p>Valid values include:</p> <ul style="list-style-type: none"> • 0: No traces. • ALL (0xFFFF): Full traces. • ERRORS_ONLY (0xC1084): Errors only. <p>Default: ERRORS_ONLY</p>
h324VideoCapabilities	<p>Indicates the priority level of 3G-324M video codecs. Priority 1 is the highest priority.</p> <p>When video transcoding is enabled, this parameter specifies the priority order in which 3G-324M video codecs are selected by the video transcoder. In this case, video codec selection on the 3G-324M side does not depend on results of negotiation from the IP side.</p> <p>When video transcoding is disabled, the Vision™ Server uses this setting in conjunction with the IP side negotiation to offer a list of video codecs that do not require transcoding.</p> <p>Valid values:</p> <ul style="list-style-type: none"> • h264: H.264. • mpeg4: MPEG-4. • h263: H.263. <p>Default: h263.</p>
h324VideoOverAL2	<p>Indicates video support for adaptation layer 2. Although most 3G terminals support video over AL2, using this parameter decreases the duration of H.245 negotiation.</p> <p>Valid values:</p> <ul style="list-style-type: none"> • 0: false (video over AL3) • 1: true (video over AL2) <p>Default: 1</p>
mspAudioGwRtpDtmfControl	<p>Indicates whether to use DTMF detection when audio transcoding.</p> <p>Valid values:</p> <ul style="list-style-type: none"> • 0: Disabled • 3: Enabled <p>Default: 3</p>

Name	Description
mspAudioGwRtpFrameQuota	<p>Number of frames per packet generated by the audio gateway RTP endpoint.</p> <p>Valid values: Integer > 0</p> <p>Default: 2</p> <p>Set mspAudioGwRtpFrameQuota as follows:</p> <ul style="list-style-type: none"> • If the destination end point uses the AMR codec, set mspAudioGwRtpFrameQuota to 1. • If the destination end point uses the G.711 codec, set mspAudioGwRtpFrameQuota to 2.
mspVideoChnAdaptEnable	<p>Enables or disables adaptive jitter.</p> <p>Valid values:</p> <ul style="list-style-type: none"> • 0: Disabled • 1: Enabled <p>Default: 0</p>
mspVideoChnJitterDepth	<p>Size in frames of the internal queue maintained by a jitter filter.</p> <p>Valid values: Integer > 0</p> <p>Default: 2</p>
mspVideoGwRtpFrameQuota	<p>Number of frames per packet generated by the video gateway RTP endpoint.</p> <p>Valid values: Integer > 0</p> <p>Default: 2</p>

Conferencing settings

Use the following settings in the *telecom.conf* file to define conferencing settings for all models of the Vision™ Server except for IP-only. The syntax for these settings is:

setting_name setting_value

The setting name is case sensitive.

Name	Description and default value
cnfActiveTalkers	Number of simultaneous active talkers. Valid values: 1 - 62 Default: 3
cnfECGain	Echo cancellation gain. Valid values: -54 - 24 Default: 0
cnfECPredelay	Echo cancellation pre-delay. Valid values: 0 - 9 Default: 0
cnfEnterToneAmpl1	Amplitude of the first enter tone when someone joins a conference. Valid values: -54 - 3 Default: -20
cnfEnterToneAmpl2	Amplitude of the second enter tone when someone joins a conference. Valid values: -54 - 3 Default: -20
cnfEnterToneFreq1	Frequency of the first enter tone when someone joins a conference. Valid values: 200 - 3600 Default: 1000
cnfEnterToneFreq2	Frequency of the second enter tone when someone joins a conference. Valid values: <ul style="list-style-type: none"> • 0: Single frequency • 200 - 3600 Default: 500
cnfEnterToneIterations	Number of iterations for the enter tone. Valid values: 1..32767 Default: 2
cnfEnterToneOffTime	Amount of time in ms that the Call Server waits between generating enter tones. Valid values: 0 - 65535 Default: 200
cnfEnterToneOnTime	Duration in ms for an enter tone generated by the Call Server. Valid values: 0 - 65535 Default: 200

Name	Description and default value
cnfExitToneAmpl1	Amplitude of the first exit tone when someone exits a conference. Valid values: -54 - 3 Default: -20
cnfExitToneAmpl2	Amplitude of the second exit tone when someone exits a conference. Valid values: -54 - 3 Default: 0
cnfExitToneFreq1	Frequency of the first exit tone when someone exits a conference. Valid values: 200 - 3600 Default: 300
cnfExitToneFreq2	Frequency of the second exit tone when someone exits a conference. Valid values: <ul style="list-style-type: none"> • 0: Single frequency • 200 - 3600 Default: 0
cnfExitToneIterations	Number of iterations for the exit tone. Valid values: 1 - 32767 Default: 2
cnfExitToneOfftime	Duration in ms for an exit tone generated by the Call Server. Valid values: 0 - 65535 Default: 0
cnfExitToneOnTime	Minimum amount of time in ms that a tone should be on to be considered an exit tone: Valid values: 0 - 65535 Default: 200
cnfInputAGCSilenceAmpl	Silence amplitude input automatic gain control. Valid values: -45 - 0 Default: -40
cnfInputAGCTargetAmpl	Target amplitude input automatic gain control. Valid values: -45 - 0 Default: -19
cnfInputGain	Input gain. Valid values: -12 - 12 Default: 0
cnfNumLoudest	Number of loudest speakers. Valid values: 1 - 62 Default: 3
cnfOutputAGCSilenceAmpl	Silence amplitude output automatic gain control. Valid values: -45 - 0 Default: -40

Name	Description and default value
cnfOutputAGCTargetAmpl	Target amplitude output automatic gain control. Valid values: -45 - 0 Default: -19
cnfOutputGain	Output gain. Valid values: -12 - 12 Default: 0

DTMF settings

Use the following settings in the *telecom.conf* file to determine how the Call Server handles DTMF signaling:

Name	Description
acceptInboundDTMFInSIPINFO	<p>Indicates whether the Call Server can accept an incoming SIP INFO message with DTMF content.</p> <p>Valid values:</p> <ul style="list-style-type: none"> • TRUE: Call Server can accept an incoming SIP INFO message with DTMF content when RFC 2833 is not negotiated. • FALSE: Call Server cannot accept an incoming SIP INFO message with DTMF content. It rejects the message by issuing a 415 Media not supported response. <p>Default: FALSE</p>
detectInbandDtmfInVideoCalls	<p>Determines whether the Call Server detects in-band DTMF in mobile video calls.</p> <p>Valid values:</p> <ul style="list-style-type: none"> • 0: Does not detect in-band DTMF in mobile video calls. • 1: Detects in-band DTMF when audio transcoding is required. • 2: Always detects in-band DTMF. This forces audio transcoding, even if the audio codecs on both call legs are the same. <p>Default: 1</p> <p>This setting is useful for supporting handsets that do not support User Input Indication (UII).</p> <p>Note: Detecting in-band DTMF uses additional DS0 resources, because each transcoded channel requires two DS0 resources.</p>
dtmfEventDuration	<p>Duration of an RFC 2833 DTMF event, in ms. The Call Server generates a DTMF event after it receives an H.245 User Input Indication message containing a DTMF from a 3G network.</p> <p>Default: 80 for audio setup; 300 for video setup</p>
dtmfEventNotification	<p>Whether to notify the CCXML engine that a DTMF was received on a call leg.</p> <p>Valid values:</p> <ul style="list-style-type: none"> • TRUE: Notify the CCXML engine. • FALSE: Do not notify the CCXML engine. <p>Default: FALSE</p>

Name	Description
outboundDTMFConfig	<p data-bbox="630 258 1256 281">Determines how the Call Server sends an outbound DTMF.</p> <p data-bbox="630 300 764 323">Valid values:</p> <ul data-bbox="639 342 1382 583" style="list-style-type: none"><li data-bbox="639 342 1382 394">• 0: Call Server always sends an outbound DTMF according to RFC 2833, if the other party supports RFC 2833.<li data-bbox="639 413 1382 466">• 1: Call Server always sends an outbound DTMF in a SIP INFO message.<li data-bbox="639 485 1382 583">• 2: Call Server sends an outbound DTMF according to RFC 2833, if the other party supports RFC 2833. If the other party does not support RFC 2833, the Call Servers sends the DTMF in a SIP INFO message. <p data-bbox="630 602 740 625">Default: 2</p>

Fax tone recognition settings

Use the following settings in the *telecom.conf* file to specify the minimum amplitude and duration of tones that the Call Server can recognize as fax CNG (calling) tones. The syntax for these settings is:

setting_name setting_value

The setting name is case sensitive.

Name	Description
faxToneCNGAmpl	Minimum amplitude of a tone in decibels that the Call Server can recognize as a fax CNG tone. Valid values: 54 to -3 Default: 28
faxToneCNGDuration	Minimum duration of a tone in ms that the Call Server can recognize as a fax CNG tone. Valid values: Any integer Default: 300

Note: To detect a fax call, the DetectFaxToneCNG setting in the *callserver.conf* file must be set to TRUE. For more information, see *Fax call detection settings* on page 21.

Media capability settings

Use the following keywords in the *telecom.conf* file to configure media capabilities and media streams:

Keyword	Description
Media_board	Declares a media board for media processing functions.
Resource	Declares the number and type of resources that Call Server applications can use.

Media stream channel types


A media stream can consist of one of the following channel types:

- Generic voice channel
- RTP bridge channel

Generic voice channel

A generic voice channel encodes voice coming from a circuit-switched (PSTN) channel or from a DSP into RTP packets. It also decodes RTP packets and sends the information to the PSTN or to a DSP.


The following illustration shows a generic voice channel that connects a DS0 endpoint to an RTP endpoint:

 


RTP bridge

An RTP bridge consists of two unidirectional channels that create an RTP connection between two RTP endpoints.

The following illustration shows an RTP bridge media stream that does not use audio transcoding:

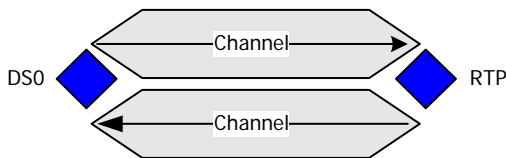

The following illustration shows an RTP bridge media stream that transcodes the audio from AMR to G.711 A-law. In this situation, two DS0 resources must be declared:

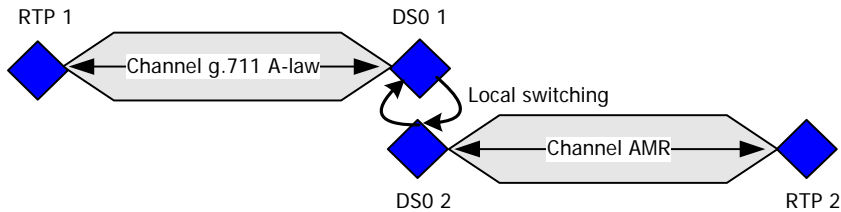

Media_board keyword

Use media board resources for media processing functions such as audio playback and recording, 3G video capabilities, and voice codecs. To define a media resource board for the Call Server, use the Media_board keyword according to the following syntax:

Media_board *board_num board_vendor_id port_base ip_address*

Parameters	Description
<i>board_num</i>	Logical media board identifier. Valid values: 1 - 8
<i>board_vendor_id</i>	Vendor identifier of the board.
<i>port_base</i>	(Optional) First port number for RTP channels. Other port values are equal to <i>port_base</i> + 2 x <i>N</i> , where <i>N</i> = 0.. <i>nb_resources</i> -1). Default: 10000 For information about <i>nb_resources</i> , see the <i>Resource keyword</i> on page 56.
<i>ip_address</i>	(Optional) IP address of the media board.

Example

The following example defines a media board that uses RTP as board number 1:

```
Media_board 1 0 2000
```

Resource keyword

After you define a media board, you can dimension resources, depending on their intended use. To specify the number and type of media resources that the Call Server uses, use the Resource keyword according to the following syntax:

Resource **media_board_num resource_type nb_resources**

Parameter	Description																						
media_board_num	Logical media board identifier. Refers to a board already declared with the Media_board keyword. Valid values: 1 - 8																						
resource_type	Resource type on the media board that the Call Server uses. The factory sets these parameters. Do not change the settings without contacting Dialogic Services and Support. Valid values: <table border="1"> <thead> <tr> <th>Value</th> <th>Description</th> </tr> </thead> <tbody> <tr> <td>AMR</td> <td>AMR resources.</td> </tr> <tr> <td>CNF</td> <td>Conferencing resources.</td> </tr> <tr> <td>G711</td> <td>G.711 resources.</td> </tr> <tr> <td>G723</td> <td>G.723 resources.</td> </tr> <tr> <td>G726</td> <td>G.726 resources.</td> </tr> <tr> <td>G729</td> <td>G.729A resources.</td> </tr> <tr> <td>RAW</td> <td>Clear channel resource required for IP-324M.</td> </tr> <tr> <td>RTP_BRIDGE</td> <td>Media stream resources used in VoIP/VoIP gateways without RTP switching or with transcoding.</td> </tr> <tr> <td>VIDEO_BRIDGE</td> <td>Resources used for video-over-IP/video-over-IP-gateways without RTP switching or with audio transcoding.</td> </tr> <tr> <td>VIDEO_GW</td> <td>Resources used for video/3G processing, such as playback and recording.</td> </tr> </tbody> </table>	Value	Description	AMR	AMR resources.	CNF	Conferencing resources.	G711	G.711 resources.	G723	G.723 resources.	G726	G.726 resources.	G729	G.729A resources.	RAW	Clear channel resource required for IP-324M.	RTP_BRIDGE	Media stream resources used in VoIP/VoIP gateways without RTP switching or with transcoding.	VIDEO_BRIDGE	Resources used for video-over-IP/video-over-IP-gateways without RTP switching or with audio transcoding.	VIDEO_GW	Resources used for video/3G processing, such as playback and recording.
Value	Description																						
AMR	AMR resources.																						
CNF	Conferencing resources.																						
G711	G.711 resources.																						
G723	G.723 resources.																						
G726	G.726 resources.																						
G729	G.729A resources.																						
RAW	Clear channel resource required for IP-324M.																						
RTP_BRIDGE	Media stream resources used in VoIP/VoIP gateways without RTP switching or with transcoding.																						
VIDEO_BRIDGE	Resources used for video-over-IP/video-over-IP-gateways without RTP switching or with audio transcoding.																						
VIDEO_GW	Resources used for video/3G processing, such as playback and recording.																						
nb_resources	Number of resources. The value of this field depends on the media board's specifications.																						

You can add multiple media resources as needed. However, the declaration must follow the circuit order, as shown in the following examples.

Example 1

The following example declares media resources for a media board with 120 G.711 ports that uses France Telecom VN6 signaling.

```
# ISDN signaling board
ISDN_board 1 0 VN6
# Media board
Media_board 2 0
# 120 voice channels
Resource 2 G711 120
.
.
.
```

Example 2

The following example declares media resources for a media board with 120 G.723 ports and 120 RTP bridge resources.

```
# Media board
Media_board 2 0
# 120 voice channels
Resource 2 G723 120
# 120 RTP switching channel
Resource 2 RTP_BRIDGE 120
.
.
.
```

Example 3

The following example declares media resources for a media board with 60 G.711 ports and 30 G.729 ports. The media board uses France Telecom VN6 signaling.

```
# ISDN Signaling board
ISDN_board 1 0 VN6
# Media board
Media_board 2 0 10000
# 60 predefined G.711 ports + 30 predefined G.729 ports
Resource 2 G711 60
Resource 2 G729 30
.
.
.
```

Trunk and route settings

A trunk is a connection port on a board that provides the physical path for transferring voice and signaling data to the PSTN network. Typical trunk types include:

Trunk type	Mode	Capacity
E1	PRI	30 voice timeslots, one signaling timeslot, and one synchronization timeslot
	RAW	31 voice timeslots and one synchronization timeslot
T1	PRI	23 voice timeslots and one signaling timeslot
	RAW	24 voice timeslots

Use the following keywords in the *telecom.conf* file to specify the PSTN trunks and routes used by the Call Server:

- Trunk
- Route

Trunk keyword

Declares the trunks used by the Call Server.

Syntax

Trunk *trunk_num sig_board_num media_board_num trunk_vendor_id trunk_type isdn_equipment -r channel_reserved*

Parameter	Description
<i>trunk_num</i>	Unique logical trunk identifier. Valid values: 1 - 128
<i>sig_board_num</i>	Logical signaling board identifier, referring to a board previously declared with the ISDN_board or ISUP_board keywords. Valid values: 1 - 8
<i>media_board_num</i>	Logical media board identifier, referring to a board previously declared with the Media_board keyword. Valid values: 1 - 8
<i>trunk_vendor_id</i>	Vendor identifier of the trunk. Valid values: 0-15
<i>trunk_type</i>	(Optional) Type of trunk. Valid values: <ul style="list-style-type: none"> • E1 (30 media channels) • T1 (23 media channels) • E1RAW (31 media channels) • T1RAW (24 media channels) Default: E1

Parameter	Description
<i>isdn_equipment</i>	<p>(ISDN models only) Mandatory. Represents the type of equipment connected to the trunk.</p> <p>Valid values:</p> <ul style="list-style-type: none"> • NT: Network equipment • TE: Terminal equipment <p>Default: TE</p>
-r <i>channel_reserved</i>	<p>(Optional) Reserved channel.</p> <p>Use the -r switch to declare a voice channel as unusable for audio purposes; for example, when signaling uses a voice timeslot. The value corresponds to the voice timeslot to reserve. For example, -r22 reserves voice timeslot 22 for signaling.</p> <p>Channels are numbered from 0 to ((maximum number of voice timeslots) - 1). The maximum number of voice timeslots depends on the type of trunk specified by the <i>trunk_type</i> parameter.</p> <p>Valid values for T1 trunks: 0 - 23</p> <p>Valid values for E1 trunks: 0 - 30</p>

Example

The following example configures four trunks. Trunks 1 and 2 are ISUP trunks in RAW mode, with channel 15 reserved for signaling. Trunks 3 and 4 are ISDN trunks in PRI mode:

```
# Trunks 1 and 2 are ISUP trunks in RAW mode
# They are linked to signaling board #1 and media board #2
# Vocal timeslot 16 (channel 15) is blocked
Trunk 1 1 2 0 E1RAW -r15
Trunk 2 1 2 1 E1RAW

# Trunks 3 and 4 are ISDN trunks in PRI mode
Trunk 3 1 2 2 E1RAW TE
Trunk 4 1 2 3 E1RAW TE
```

Route keyword

A route is a logical collection of trunks. For each trunk in the route, enter a line in the *telecom.conf* file that specifies the route for that trunk. Use the Route keyword to specify a route.

Syntax

Route *route_num trunk_num select_strategy...trunk_num select_strategy*

Parameter	Description
<i>route_num</i>	Route identifier. Valid values: 1 - 16
<i>trunk_num</i>	Trunk identifier, referring to a previously declared trunk (using the Trunk keyword). Valid values: 1 - 128
<i>select_strategy</i>	(Optional) Circuit selection strategy. This parameter defines which circuits of the route are reserved for outgoing calls, and how they are selected. Circuits are identified by their circuit code identifier (CCI), an integer ranging from 1 to the highest circuit code identifier (CCI max). For example, if the route contains four E1 trunks (each containing 30 circuits), circuits are numbered from 1 to 120. The value of CCI max is 120. Valid values: <ul style="list-style-type: none"> • FROM_TOP • FROM_BOTTOM • DESCENDING • ASCENDING • TIMER Default: FROM_TOP Values for <i>select_strategy</i> are described in the following table.

Valid values for the *select_strategy* parameter are:

Value	Description
FROM_TOP	(Default) Selects the first idle circuit in decreasing CCI order. This strategy always selects the highest available circuit. Example With this circuit selection strategy, a series of calls might be placed as follows: <ol style="list-style-type: none"> a. A first call is placed on the last circuit, CCI max. b. A second call is placed on circuit (CCI max – 1), because CCI max is busy processing the first call. c. The first call terminates, so CCI max becomes idle. d. A third call is placed on CCI max, because CCI max is now available. e. A fourth call is placed on (CCI max - 2), because both CCI max and (CCI max - 1) are busy processing calls 3 and 2, respectively.

Value	Description
FROM_BOTTOM	<p>Selects the first idle circuit in increasing CCI order. This strategy always selects the lowest available circuit.</p> <p>Example</p> <p>With this circuit selection strategy, a series of calls might be placed as follows:</p> <ol style="list-style-type: none"> A first call is placed on the first circuit, CCI 1. A second call is placed on the second circuit, CCI 2, because the first circuit is busy processing the first call. The first call terminates, so the first circuit becomes idle. A third call is placed on CCI 1, because CCI 1 is now available. A fourth call is placed on CCI 3, because CCI 1 and CCI 2 are busy processing calls 3 and 2, respectively.
DESCENDING	<p>Selects a circuit by rotating circuits in decreasing CCI order, from the highest circuit (CCI max) down to the middle of the route $((CCI \text{ max} / 2) + 1)$. If no circuit is idle on the second half of the route, a circuit on the first half of the route is selected.</p> <p>Example</p> <p>With this circuit selection strategy, a series of calls might be placed as follows:</p> <ol style="list-style-type: none"> A first call is placed on the last circuit, CCI max. A second call is placed on $(CCI \text{ max} - 1)$. The first call terminates, so CCI max becomes idle. A third call is placed on $(CCI \text{ max} - 2)$. For each subsequent call, the next lower circuit is selected up to the middle of the route. When the last circuit in the half route is reached $((CCI \text{ max} / 2) + 1)$, the selection strategy rotates back to the last circuit CCI max, because that is the first available circuit in decreasing order of CCI.
ASCENDING	<p>Selects a circuit by rotating circuits in increasing CCI order, from the first circuit (CCI 1) up to the middle of the route $(CCI \text{ max} / 2)$. If no circuit is idle on the first half of the route, a circuit on the second half is selected.</p> <p>Example</p> <p>With this circuit selection strategy, a series of calls might be placed as follows:</p> <ol style="list-style-type: none"> A first call is placed on the first circuit, CCI 1. A second call is placed on the second circuit, CCI 2. The first call terminates, so the first circuit becomes idle. A third call is placed on CCI 3. For each subsequent call, the next higher circuit is selected, up to the middle of the route. When the last circuit in the half route is reached $(CCI \text{ max} / 2)$, the selection strategy rotates back to CCI 1, because that is the first available circuit in increasing order of CCI.
TIMER	<p>The selected circuit is the one on which the inactivity timer is the most important.</p> <p>At the beginning, all circuits have the same inactivity timer. The circuits are selected in decreasing CCI order, starting from CCI max down to CCI 1.</p> <p>When all circuits have been used once, they are selected by the inactivity timer.</p>

Example

The following example shows how to configure two ISDN routes on four trunks. One route contains trunk 2 with circuit selection strategy DESCENDING. The other route contains the three remaining trunks with the default circuit selection strategy (FROM_TOP).

```
# Four trunks (e.g. on a CG board with four EIs)
Trunk 1 1 2 0 E1 NT
Trunk 2 1 2 1 E1 NT
Trunk 3 1 2 2 E1 NT
Trunk 4 1 2 3 E1 NT
# Route 1 contains trunk 2 - selection strategy = DESCENDING
Route 1 2 DESCENDING
# Route 2 contains trunks 1, 3 and 4 - default selection strategy
Route 2 1 3 4
```

H.100 bus settings

The H.100 bus is an interoperable superset of H-MVIP and MVIP that transports telephony voice data, signaling data, and switching information across PCI boards. If your Vision™ Server includes SS7, then you can use an H.100 bus to connect a signaling board to a media board. You do not typically need to change settings in the Call Server configuration file to use the H.110 bus.

When a timeslot on a specific stream is used to transmit signaling data between these two boards, the timeslot must be blocked for voice data. You can accomplish this by using the H100 keyword in the *telecom.conf* file.

Note: The Vision™ Server includes an H.100 clock manager that synchronizes the server's boards. For more information, see the *Dialogic® Vision™ CX Video Gateway Administration Manual* or the *Dialogic® Vision™ VX Integrated Media Platform User's Manual*.

Syntax

H100 *stream_1:slot_1 stream_2:slot_2 ... stream_n:slot_n*

Parameter	Description
<i>stream:slot</i>	Stream and timeslot pair on the bus. Limited by the bus capacity.

Example

The following example uses the H100 keyword to reserve timeslot 31 on streams 16 and 17 for signaling:

```
# Voice data forbidden on the following bus timeslots:
H100 16:31 17:31
```

5

Administrative tasks

Call Server logging

The Call Server creates and saves log files in the `vx/callserver/logs` directory. Each log file records information about active Call Server processes.

Call Server log files are named according to the following convention:

`callserver_YYYY_MM_DD_[index].log`

where **index** is an integer specifying the current incremented system log file. This value is reset daily and incremented when either the configured maximum system log file size is reached or when the Call Server is restarted. In each case, a new system log file is started.

To set the maximum system log file size, use the `SystemLogFileMaxNumber` log file setting. For more information, see *Logging settings* on page 15.

Log file format

The format of each log message is:

`mm/dd/yy hh:mm:ss.ms [severity] [origin:code] [UID:threadID] (alarm)`
`[message]`

For example, a telecom configuration error can lead to the following log file entry:

```
03/29/05 06:59:25.306 [MAJOR] [telecom.pkg:111] [-:1044] (ConfigurationError) - A trunk is declared with an unavailable protocol, line 16.
```

The timestamp is in the same time format as the local Call Server. Use the `SystemLogTime` setting to change the time format to Greenwich Mean Time (GMT). For more information, see *Logging settings* on page 15.

The following table describes the fields in a log file:

Field	Description
severity	<p>Severity of the log message.</p> <p>Valid values, in order of decreasing severity and increasing verbosity:</p> <ul style="list-style-type: none"> • FATAL ERROR (a severe malfunction from which the Call Server cannot recover) • ERROR • WARNING • INFO1 • INFO2 • INFO3 • INFO4 • INFO5 (highest level of detail) <p>Set up logging in either of the following ways:</p> <ul style="list-style-type: none"> • Use the Vision™ Console. For information, see the Dialogic® Vision™ CX Video Gateway Administration Manual or the Dialogic® Vision™ VX Integrated Media Platform User's Manual. • Set the parameters in the Call Server configuration file. For information, see <i>Logging settings</i> on page 15.
origin	Call Server component to which the log message refers.
code	Trace identifier of the message in the Call Server component to which the log message refers.
UID	Reserved for future use. The UID is represented by a hyphen (-) in the log file.

Field	Description
alarm	<p>Optional field that is included only when the log message refers to an alarm notification. In this situation, the field describes the general category of the alarm.</p> <p>Alarm categories include the following:</p> <ul style="list-style-type: none"> • Started • Quiesced • Shutdown • LicenseCheck • ConfigurationError • InitializationError • SoftwareException • InternalError • ResourceLimitation • CommunicationFailure • ProcessingFailure • InvalidArgument • UnexpectedEvent • NotificationDiscarded • Watchdog • Timeout
threadID	Identifier associated with the thread that generated the message. Use this field to track the progress of a single session or call when several requests are processed simultaneously.
message	Text description of the logged occurrence.

Starting and stopping the Call Server

The Call Server starts automatically when the Vision™ Server starts. You do not need to start and stop the Call Server manually, unless you need to troubleshoot the Vision™ Server. Use the Vision™ Console to start and stop the Call Server manually, as described in the *Dialogic® Vision™ CX Video Gateway Administration Manual* and the *Dialogic® Vision™ VX Integrated Media Platform User's Manual*.

6

Glossary

A

ADTCP: An audio driver that provides a TCP interface to MIOSIP for rendering SSML fragments.

AMR: Adaptive multi-rate; an audio data compression scheme optimized for speech coding. This scheme was adopted by 3GPP and is used in video services.

ASR: Automatic speech recognition; ASR resources, called ASR engines in the MRCP framework, typically enable users of information systems to speak entries rather than punching numbers on a keypad. See also MRCP.

Authorization and Usage Indication interface: XML-over-HTTP mechanism that authorizes call sessions and gathers information for call detail reports.

B

blind transfer: A call transfer in which the originating caller is not announced and is connected directly to destination. In a blind transfer the Vision™ Server redirects the caller to the callee without remaining in the connection and does not monitor the outcome.

bridge transfer: A blind transfer in which the Vision™ Server redirects the caller to the callee and remains as a listener.

C

Call Server: Component of the Vision™ Server that manages call control and routing capabilities.

CallPlacer interface: XML-over-HTTP mechanism for initiating outbound sessions or calls for VoiceXML applications.

CCXML: Call Control Extensible Markup Language; a W3C Working Draft standard language for providing telephony call control support for dialog systems, gateways, and conferencing services.

CCXML application definition file: A file that maps individual CCXML applications to number ranges that trigger the execution of those applications.

clock: A periodic reference signal used for synchronization on a transmission facility, such as a telephony bus. See also clock master, clock slave, clock fallback.

clock master: A board that drives the clock signal for a system of boards connected by a bus cable. See also clock slave.

clock slave: A board that derives its clock signal from a bus cable; the clock signal is driven by the bus clock master. See also clock master.

consultation transfer: A call transfer in which the Vision™ Server initiates a transfer between two parties, but does not stay attached to the call once it is

successfully established. The caller remains connected to the Vision™ Server if the transfer fails.

D

DTMF: Dual tone multi frequency; an inband signaling system that uses two simultaneous voiceband tones for dialing. Also called touchtone. Some times DMTF is used to generally describe any telephony keypad press, even if tones are not generated.

G

G.711: An ITU PCM encoder/decoder specification for mu-law and A-law encoding.

H

H.100 bus: A TDM telephony bus standard for integrating hardware from various PC board vendors. The H.100 specification defines a ribbon cable bus that transports telephony voice data and signaling data across PCI boards. The H.100 bus is an interoperable superset of the H-MVIP and MVIP-90 telephony buses.

H.223: A protocol used to multiplex control and audio and video media on and off of a single DS0 within a trunk.

H.263: An ITU video compression standard. H.263 supports CIF, QCIF, SQCIF, 4CIF and 16CIF resolutions.

H.264: An ITU and ISO video compression standard that compresses video into lower bandwidth compared to H.263 and MPEG-4. H.264 is also called MPEG-4 Part 10.

I

INAP: Intelligent Network Application Part; an SS7 protocol that facilitates building platform-independent, transport-independent, and vendor-independent applications. Such applications include service switching points (SSPs), internet protocol (IP) applications, service control points (SCPs), enhanced services platforms, service circuit nodes, and other custom applications.

ISDN: Integrated services digital network; a standard for providing voice and data telephone service with all digital transmission and message-based signaling.

ISUP: ISDN user part; the SS7 protocol layer that allows for the establishment, supervision, and clearing of circuit-switched connections between two SS7 signaling points, such as central office switches. Despite its name, the ISUP layer is not unique to interconnecting. It is used to manage all types of circuit-switched connections.

ITU: International Telecommunications Union; an international standards body for telecommunications.

IVR: Interactive voice response; a telephony application in which callers interact with programs using recorded or synthesized voice prompts, DTMF digits, or speech recognition to query or deliver information.

M

Media Resource Function: Component of the Dialogic® Vision™ VX Integrated Media Platform that provides media processing including record, playback, and interfaces to speech recognition resources. The Media Resource Function is implemented by MIOSIP.

MIB: Management information base; an SNMP collection of objects that represent a managed node. Physically, a list of variables. Logically, a table with rows of variables.

MIOSIP: Implements the Media Resource Function of the Dialogic® Vision™ VX Integrated Media Platform. MIOSIP provides SIP call control, media processing over RTP, DTMF generation and recognition, and an MRCP client to automatic speech recognition (ASR) resources.

MPEG-4: An ISO/IEC standard for compressing multimedia data (video, audio, and speech).

MRCP: Media Resource Control Protocol; an application protocol for implementing automatic speech recognition (ASR) and text-to-speech services (TTS). MRCP provides a distributed system of ASR and TTS engines connected over an IP network.

MTP: Message transfer part; the SS7 protocol layers responsible for the reliable, in-sequence delivery of packets between two SS7 signaling points. The MTP functions include message routing, signaling link management, signaling route management, and congestion control.

MVIP-95: Device driver specification for H-MVIP, H.100, and H.110 telephony buses.

N

NETANN: Basic Network Media Services with SIP; an interface that enables applications in a SIP network to locate and invoke basic services on a media server. These services include network announcements, user interaction, and conferencing services. Also called RFC 4240.

O

OSP: Open Settlement Protocol; a European Telecommunications Standards Institute (ETSI) protocol used to exchange authorization, accounting, and usage information for IP telephony.

P

PSTN: Public switched telephone network; a public telephone network.

R

route: A connection path. On the PSTN network, a route is a logical collection of trunks. On the IP network, a route is a destination URL.

RTP: Real time transport protocol; a layer added to the internet protocol (IP) that addressed problems caused when real-time interactive exchanges (such as

audio data) are conducted over lines designed to carry packet-switched (connectionless) data.

S

- SCCP:** Signaling connection control part; an SS7 protocol that provides both connection-oriented and connectionless data transfer over an SS7 network. It extends the service provided by the SS7 MTP layers by adding extended addressing capabilities and multiple classes of service. The SCCP addressing capabilities allow a message to be addressed to an individual application or database within a signaling point. See also SS7.
- SDP:** Session description protocol, a protocol that defines a text-based format for describing streaming media sessions and multicast transmissions.
- Signaling Server:** An optional component of the Vision™ Server that provides redundant and scalable ISUP signaling.
- SIP:** Session initiation protocol. An IP signaling and telephony control protocol used mainly for voice over IP calls and multimedia communications. SIP relies on the session description protocol (SDP) for session description and the Real Time Transport Protocol (RTP) for actual transport.
- SRGS:** Speech Recognition Grammar Specification (SRGS); a syntax for representing the grammars used in speech recognition.
- SS7:** Signaling system 7; an out-of-band signaling system that provides fast call setup using circuit-switched connections and transaction capabilities for remote database interactions.
- SSML:** Speech Synthesis Markup Language; a proposed standard for enabling access to the internet using speech. SSML provides a standard way to control various aspects of speech (such as pronunciation, volume, pitch, and rate) over a variety of platforms.
- SSML Processor:** Component of the Dialogic® Vision™ VX Integrated Media Platform that processes SSML requests for audio and text-to-speech.

T

- T.38 fax:** A standard for real-time fax over IP that makes it possible for fax machines from different vendors to talk to each other over IP networks. The T.38 standard defines how to conduct group 3 facsimile transmission between terminals in which a portion of the transmission path between terminals includes (besides the PSTN or ISDN) an IP network such as the internet.
- TCAP:** Transaction capabilities application part; an SS7 protocol that provides applications with transaction support over the SS7 network. It enables the exchange of non-circuit related data, such as database queries and responses and remote feature invocation requests between SS7 signaling points. The TCAP layer relies on both the MTP and SCCP layers for message addressing and delivery.
- TDM:** Time division multiplexing; a technique for transmitting a number of separate data, voice, or video signals simultaneously over one communications medium by quickly interleaving a piece of each signal one after another.

telecom configuration file: File that provides information about the resources that interface with the Call Server and about other elements, such as the number of routes and the circuit selection.

trunk: The physical interface between the telephone network and the Vision™ Server. In telephone networks, a trunk is a shared connection between two switches. It differs from a line in that it is not dedicated to one subscriber or extension. T1 and E1 trunks carry 24 and 31 circuits, respectively.

TTS: Text-to-speech; a system that converts written language to speech.

V

Vision™ Console: Web-based configuration tool that configures the Vision™ Server.

VoiceXML: Voice Extensible Markup Language; a language that enables users to interact with the internet through voice recognition technology.

VoiceXML application configuration file: A file that maps individual VoiceXML applications to number ranges that trigger the execution of those applications.

VoiceXML Interpreter: Component of the Dialogic® Vision™ VX Integrated Media Platform that interprets VoiceXML dialogs.

VoiceXML Subsystem: Component of the Dialogic® Vision™ VX Integrated Media Platform that provides media processing for VoiceXML applications. The VoiceXML Subsystem consists of the VoiceXML Interpreter, SSML Processor, and Media Resource Function.

Index

3

3G-324M 56

A

auto start 68

B

BICC settings 28

C

call detail records 22

callserver.conf file 13

- CCXML scripting engine settings 16

- CDR generation settings 22

- client-side HTTP settings 19

- DTMF transmission settings 51

- fax call detection settings 21

- general settings 14

- logging settings 15

- VoiceXML dialog settings 20

CCXML 9, 16

CDRs 22

channels 54

conferencing 48, 56

configuration files 12

- callserver.conf 13

- telecom.conf 23

configuring 13

- BICC settings 28

- CCXML settings 16

- fax settings 21, 53

- general settings 14

- H.100 bus settings 63

- HTTP settings 19

- IPBCP settings 30

- ISDN settings 25

- ISUP settings 26

- logging settings 15

- media capabilities 54

- NbUP settings 29

- PSTN settings 43

- SIP settings 31

- trunk and route settings 58

- video settings 45

- VoiceXML dialog settings 20

D

documentation conventions 11

DTMF 51

F

fax 21, 53, 56

file locations 12

G

general settings 14

H

H.100 bus 63

HTTP settings 19

I

in-band DTMF 51

IPBCP settings 30

ISDN 25

ISUP 26

L

Linux daemon 9, 68

logging 15, 65

M

media board 23, 55

media capabilities 54

N

NbUP settings 29

P

protocols

- ISDN 25
- ISUP 26
- SIP 31
- PSTN settings 43, 58
- R**
- RFC 2833 51
- routes 59
- RTP 9, 39
- S**
- SDP settings 37
- service 68
- signaling board 23
- Signaling Server 26
- SIP INFO message 51
- SIP/RTP 31
- starting and stopping the Call Server 68
- system file locations 12
- T**
- T.38 21
- telecom.conf file 23
 - BICC settings 28
 - conferencing settings 48
 - DTMF settings 51
 - fax tone recognition settings 53
 - H.100 bus settings 63
 - IPBCP settings 30
 - ISDN settings 25
 - ISUP settings 26
 - media capability settings 54
 - NbUP settings 29
 - PSTN settings 43
 - SIP settings 31
 - trunk and route settings 58
 - video settings 45
- trunks 58
- V**
- video 45, 56
- Vision™ Signaling Server 26
- VoiceXML dialog settings 20