



Dialogic® Host Media Processing Software for Linux

Configuration Guide

October 2010

Copyright and Legal Notice

Copyright © 2007-2010, Dialogic Corporation. All rights reserved. You may not reproduce this document in whole or in part without permission in writing from Dialogic Corporation.

All contents of this document are furnished for informational use only and are subject to change without notice and do not represent a commitment on the part of Dialogic Corporation or its subsidiaries ("Dialogic"). Reasonable effort is made to ensure the accuracy of the information contained in the document. However, Dialogic does not warrant the accuracy of this information and cannot accept responsibility for errors, inaccuracies or omissions that may be contained in this document.

INFORMATION IN THIS DOCUMENT IS PROVIDED IN CONNECTION WITH DIALOGIC® PRODUCTS. NO LICENSE, EXPRESS OR IMPLIED, BY ESTOPPEL OR OTHERWISE, TO ANY INTELLECTUAL PROPERTY RIGHTS IS GRANTED BY THIS DOCUMENT. EXCEPT AS PROVIDED IN A SIGNED AGREEMENT BETWEEN YOU AND DIALOGIC, DIALOGIC ASSUMES NO LIABILITY WHATSOEVER, AND DIALOGIC DISCLAIMS ANY EXPRESS OR IMPLIED WARRANTY, RELATING TO SALE AND/OR USE OF DIALOGIC PRODUCTS INCLUDING LIABILITY OR WARRANTIES RELATING TO FITNESS FOR A PARTICULAR PURPOSE, MERCHANTABILITY, OR INFRINGEMENT OF ANY INTELLECTUAL PROPERTY RIGHT OF A THIRD PARTY.

Dialogic products are not intended for use in medical, life saving, life sustaining, critical control or safety systems, or in nuclear facility applications.

Due to differing national regulations and approval requirements, certain Dialogic products may be suitable for use only in specific countries, and thus may not function properly in other countries. You are responsible for ensuring that your use of such products occurs only in the countries where such use is suitable. For information on specific products, contact Dialogic Corporation at the address indicated below or on the web at www.dialogic.com.

It is possible that the use or implementation of any one of the concepts, applications, or ideas described in this document, in marketing collateral produced by or on web pages maintained by Dialogic may infringe one or more patents or other intellectual property rights owned by third parties. Dialogic does not provide any intellectual property licenses with the sale of Dialogic products other than a license to use such product in accordance with intellectual property owned or validly licensed by Dialogic and no such licenses are provided except pursuant to a signed agreement with Dialogic. More detailed information about such intellectual property is available from Dialogic's legal department at 9800 Cavendish Blvd., 5th Floor, Montreal, Quebec, Canada H4M 2V9. **Dialogic encourages all users of its products to procure all necessary intellectual property licenses required to implement any concepts or applications and does not condone or encourage any intellectual property infringement and disclaims any responsibility related thereto. These intellectual property licenses may differ from country to country and it is the responsibility of those who develop the concepts or applications to be aware of and comply with different national license requirements.**

Any use case(s) shown and/or described herein represent one or more examples of the various ways, scenarios or environments in which Dialogic® products can be used. Such use case(s) are non-limiting and do not represent recommendations of Dialogic as to whether or how to use Dialogic products.

Dialogic, Dialogic Pro, Brooktrout, Diva, Diva ISDN, Making Innovation Thrive, Video is the New Voice, Diastar, Cantata, TruFax, SwitchKit, SnowShore, Eicon, Eicon Networks, NMS Communications, NMS (stylized), Eiconcard, SIPcontrol, TrustedVideo, Exnet, EXS, Connecting to Growth, Fusion, Vision, PacketMedia, PowerMedia, NaturalAccess, NaturalCallControl, NaturalConference, NaturalFax and Shiva, among others as well as related logos, are either registered trademarks or trademarks of Dialogic Corporation or its subsidiaries. Dialogic's trademarks may be used publicly only with permission from Dialogic. Such permission may only be granted by Dialogic's legal department at 9800 Cavendish Blvd., 5th Floor, Montreal, Quebec, Canada H4M 2V9. Any authorized use of Dialogic's trademarks will be subject to full respect of the trademark guidelines published by Dialogic from time to time and any use of Dialogic's trademarks requires proper acknowledgement.

Other names of actual companies and products mentioned herein are the trademarks of their respective owners.

Publication Date: October 2010

Document Number: 05-2519-004

Contents

	Revision History	9
	About This Publication	12
	Purpose	12
	Applicability	12
	Intended Audience	12
	How to Use This Publication	13
	Related Information	14
1	Configuration Overview	15
	1.1 Major Configuration Steps	15
	1.2 The Configuration Process	16
	1.3 Configuration/Administration Tools	17
	1.3.1 Command Line Interface (CLI)	18
	1.3.2 Simple Network Management Protocol (SNMP)	18
	1.4 System Performance Tuning	18
2	Feature Support by Platform	19
3	Configuration Details	21
	3.1 Configuration File Sets	21
	3.2 Media Loads	22
	3.2.1 Features Supported	22
	3.2.2 Flexible Routing Configuration	23
	3.3 CT Bus (TDM) Clocking	23
	3.3.1 Primary Clock Fallback	23
	3.4 Dialogic® HMP software Clocking and Fallback	24
	3.5 Transparent Data Routing for 3G-324M	25
	3.5.1 Transparent Mode Overview	25
	3.5.2 Enabling Transparent Mode on a Channel	26
	3.6 Preserving Data in User Configuration Files	26
	3.7 Modifying the FCD File By Editing the CONFIG File	28
	3.7.1 Editing the CONFIG File	28
	3.7.2 Generating the FCD File	28
4	Command Line Interface (CLI) Basics	29
	4.1 CLI Overview	29
	4.2 Accessing the CLI	29
	4.3 Default Usernames and Passwords for CLI Users	30
	4.4 CLI Commands by User Role	30
	4.5 CLI Help	31
	4.6 CLI Account Management Commands	32
	4.7 CLI Show Command	33
	4.8 CLI Configure (Conf) Command	34
	4.9 Troubleshooting	34

Contents

5	Command Line Interface (CLI) Reference	36
5.1	CLI Reference Overview	36
5.2	CLI Configure (Conf) Command Reference	36
5.3	CLI Show Command Reference	39
5.4	CLI Pagescroll Command Reference	40
5.5	CLI Command Reference by Device	41
6	Configuration Procedures Using CLI	43
6.1	Assumptions and Prerequisites	43
6.2	Order of Procedures	44
6.3	Showing Current Configuration Settings	44
6.4	Stopping Media Services	45
6.5	Configuring Start Mode for Media Services	46
6.6	Activating a Single License File	46
6.7	Activating a License File Directory	47
6.8	Configuring Dialogic® MMA Boards	48
6.8.1	Selecting an Ethernet Interface	49
6.8.2	Setting the IP Address for Each DSP	49
6.8.3	Configuring the Switch Port Interfaces	50
6.8.4	Configuring the Ethernet Interface	51
6.9	Configuring Dialogic® HMP Interface Boards	52
6.9.1	Configuring PSTN Network Interfaces	52
6.9.2	Configuring the TDM Bus	55
6.9.3	Configuring System-Level Bridging and Streaming	56
6.9.4	Configuring Device-Level Bridging and Streaming	57
6.9.5	Configuring Status Change Events on a Trunk	59
6.10	Restarting Media Services	59
7	SNMP Basics	61
7.1	SNMP Overview	61
7.2	MIBs	62
7.3	System Requirements	64
7.3.1	Requirements for Remote Management Stations	64
7.3.2	Requirements for Local Managed Nodes	66
7.4	Starting and Stopping the SNMP Agent	66
7.4.1	Stopping the SNMP Agent	66
7.4.2	Starting the SNMP Agent	66
7.4.3	Changing the SNMP Listening Port	66
7.4.4	Changing the Trap Listening Port	67
7.5	Username and Password	67
7.5.1	SNMP Version 1 and 2c	67
7.5.2	SNMP Version 3	68
7.6	Troubleshooting	68
8	SNMP MIB Reference	69
8.1	SNMP MIB Reference Overview	69
8.2	Public MIB 2 Module Reference	70
8.3	Public DS1 Module Reference	71
8.4	Private Bridge Device Module Reference	72
8.5	Private CT Bus Device Module Reference	72

8.6	Private External Interface Module Reference	72
8.7	Private Hardware Device Module Reference	72
8.8	Private Hardware DM3 Device Module Reference	73
8.9	Private Hardware DM3 Trunk Module Reference	73
8.10	Private Hardware MMA Device Module Reference	73
8.11	Private License Module Reference	73
8.12	Private Media Control Protocol Module Reference	73
8.13	Private RTP Configuration Module Reference	73
8.14	Private System Environment Module Reference	74
9	Configuration Procedures Using SNMP	75
9.1	Assumptions and Prerequisites	75
9.2	Order of Procedures	76
9.3	Configuring Traps	77
9.4	Stopping Media Services	78
9.5	Configuring Start Mode for Media Services	79
9.6	Activating a License	79
9.7	Configuring Dialogic® MMA Boards	80
9.7.1	Selecting an Ethernet Interface	80
9.7.2	Setting the IP Address for Each DSP	81
9.7.3	Configuring the Switch Port Interfaces	81
9.7.4	Configuring the Ethernet Interface	81
9.8	Configuring Dialogic® HMP Interface Boards	82
9.8.1	Configuring PSTN Network Interfaces	82
9.8.2	Configuring the TDM Bus	83
9.8.3	Configuring System-Level Bridging and Streaming	83
9.8.4	Configuring Device-Level Bridging and Streaming	84
9.8.5	Restarting Media Services	85
10	System Performance Tuning	86
10.1	Tuning a System with Dialogic® Software	86
10.1.1	High Channel Density Recommendations	86
10.1.2	Optimizing NIC Driver Settings	87
10.1.3	Configuring the Number of Message Queues	87
10.2	Tuning a System with Dialogic® HMP Interface Boards	88
10.2.1	Disabling Driver Status Messages	88
11	Echo Cancellation	90
11.1	Echo Cancellation Background Information	90
11.1.1	Overview	90
11.1.2	Acoustic Echo	91
11.1.3	Electrical Echo	91
11.2	Echo Cancellation Features	92
11.3	Using Echo Cancellation	93
11.4	Configuring Host-Based Echo Cancellation	94
11.4.1	Echo Cancellation on IP Media Devices	94
11.4.2	Echo Cancellation on Voice Devices	95
11.4.3	Echo Cancellation on Conferencing Devices	96
11.4.4	Echo Cancellation on CSP/Voice Devices	97
11.5	Host-Based Echo Cancellation Sample Scenarios	98
11.5.1	DTI and IP Gateway Example	98

Contents

11.5.2	DTI and IP Conferencing Example	98
11.5.3	DTI and CSP/Voice Example	99
11.5.4	DTI and Voice Example	99
11.5.5	IP and IP Connection Example	100
11.5.6	IP and CSP/Voice Example	100
11.5.7	IP and Voice Example	100
11.6	Configuring On-Board Echo Cancellation	101
12	CONFIG File Details	104
12.1	CONFIG File Formatting Conventions	104
12.2	CONFIG File Sections	105
12.3	[Encoder] Section	106
12.4	[NFAS] Section	107
12.5	[CHP] Section	108
12.6	[TSC] Section	109
13	CONFIG File Parameter Reference for Dialogic®HMP Software	110
13.1	[0x2c] Echo Cancellation Parameters	110
13.2	[encoder] Parameters	112
13.3	[0x3b] Conferencing Parameters	113
13.4	[IPVSC] IP Media Parameters	115
13.5	[decoder] Speed Control Parameter	120
13.6	[sigDet] Parameters	120
14	CONFIG File Parameter Reference for Dialogic® HMP Interface Boards	122
14.1	[0x2c] Echo Cancellation Parameters	123
14.2	[lineAdmin.x] Parameters	124
14.3	[NFAS] Parameters	132
14.4	[NFAS.x] Parameters	133
14.5	[CCS] Parameters	135
14.6	[CHP] Parameters	140
14.7	[CHP] ISDN Protocol Variant Definitions	141
14.8	[TSC] Parameters	149
14.9	[TSC] defineBSet Parameters	149
14.10	[sigDet] Parameters	156

Figures

1	Clock Fallback	24
2	General SNMP Architecture	62
3	Electrical Echo and the Hybrid.	91
4	T1/E1 Gateway Example	98
5	DTI and IP Conferencing Example	99
6	DTI and CSP/Voice Example.	99
7	DTI and Voice Example.	99
8	IP and IP Connection Example	100
9	IP and CSP/Voice Example	100
10	IP and Voice Example	100
11	AGC Gain vs. Input Average	106

Tables

1	High-Level Feature Support by Platform	20
2	CLI Usernames and Passwords	30
3	CLI Users and Command Privileges	31
4	Account Management Commands	32
5	CLI Conf Command Reference by Device	41
6	CLI Show Command Reference by Device	41
7	Supported MIBs	63
8	Version 1 and 2c Community Names	67
9	Version 3 Usernames and Passwords	68
10	MIB 2 Conformance Table	70
11	DS1 MIB Conformance Table	71
12	Supported Traps	77

Revision History

This revision history summarizes the changes made in each published version of this document.

Document No.	Publication Date	Description of Revisions
05-2519-004	September 2010	<p>Changed title to “Dialogic® Host Media Processing Software for Linux Configuration Guide.”</p> <p>Configuration Procedures Using CLI: Updated to support the Additive Licensing feature: changed the title of Section 6.6 to “Activating a Single License File,” and added a new section “Activating a License File Directory.” Updated the text in the Protocol Guidelines for Dialogic® DNI/2410TEPEHMP Boards subheading (IPY00082247).</p> <p>System Performance Tuning chapter: Updated the text in the Configuring the Number of Message Queues section. (IPY00091436)</p> <p>CONFIG File Parameter Reference for Dialogic®HMP Software: In the [IPVSC] IP Media Parameters section, corrected the number of frames buffered (replaced “1.5 times” with “2 times”) in the PrmPlr_LatencyAlg_Audio (Latency Mode) parameter description, and updated the note in the PrmRxLatencyFrameInit_Audio (PLR Initial Latency) parameter description.</p>
05-2519-003	October 2009	<p>Updated for Dialogic® Host Media Processing Software Release 4.1LIN (Dialogic® HMP Software 4.1LIN).</p> <p>Feature Support by Platform chapter: Added column for Dialogic® HMP Software 4.1LIN support. Added MSML.</p> <p>Configuration Details chapter: In Dialogic® HMP software Clocking and Fallback, added cross-reference to Software Installation Guide for more information on clocking if Dialogic® DNI board is not in the system.</p> <p>Command Line Interface (CLI) Reference chapter: Added conf interface ds1 alarmtrap/no alarmtrap command in CLI Configure (Conf) Command Reference.</p> <p>Configuration Procedures Using CLI chapter: For Dialogic® HMP Software 4.1LIN, default start mode is “manual”. Added Configuring Status Change Events on a Trunk.</p> <p>Configuration Procedures Using SNMP chapter: For Dialogic® HMP Software 4.1LIN, default start mode is “manual”.</p> <p>System Performance Tuning chapter: Removed “Disabling High Precision Event Timer (HPET)” topic. Updated information is now in the Software Installation Guide.</p> <p>CONFIG File Parameter Reference for Dialogic®HMP Software chapter: Added receive-only RFC 2833 mode parameter and two RTCP reporting parameters in [IPVSC] section.</p> <p>CONFIG File Parameter Reference for Dialogic® HMP Interface Boards: Added RM_ISCR in [Encoder] section.</p>

Revision History

Document No.	Publication Date	Description of Revisions
05-2519-002 (continued on next page)	August 2008	<p>Updated for Dialogic® Multimedia Kit Software Release 1.0 for PCIe and for Dialogic® Host Media Processing Software Release 3.1LIN Service Update.</p> <p>About This Publication chapter: Indicated that this document also applies to Dialogic® Multimedia Kit Software Release 1.0 for PCIe and Dialogic® Multimedia Accelerator Boards (MMA Boards).</p> <p>Configuration Overview chapter: Added MMA Boards to Major Configuration Steps. Added start mode for media services.</p> <p>Feature Support by Platform chapter: New chapter.</p> <p>Configuration Details chapter: Added Dialogic® HMP Interface Boards (PCI Express) to Media Loads. Updated Transparent Data Routing for 3G-324M section; added note about disabling EC on DTI devices. Removed Enabling Transparent Mode on a System section as it is not supported. Added steps, including deleting .pcd, .fcd, .config files before dstart, in Preserving Data in User Configuration Files.</p> <p>Command Line Interface (CLI) Basics chapter: Removed note about using the “root” username and “public” password, as this is no longer a restriction in Default Usernames and Passwords for CLI Users. Added ‘quit’ and ‘pagescroll’ to CLI Users and Command Privileges table. Minor edits to Account Management Commands table.</p>

Document No.	Publication Date	Description of Revisions
05-2519-002 (continued)	August 2008	<p>Command Line Interface (CLI) Reference chapter: Added note that future MSML features requiring configuration will not be supported using CLI or SNMP in CLI Reference Overview. Added start-mode subcommand for system ipmedia. Added mma subcommand for system hardware. Corrected bh-voicestream and hb-voicestream commands (removed 's'; voicestream rather than voicestreams). Added conf interface media. Added conf hardware ds1 (alias for 'pstn'). Added CLI Pagescroll Command Reference section for new pagescroll command. Added CLI Command Reference by Device section to show commands supported by device type.</p> <p>Configuration Procedures Using CLI chapter: Reorganized chapter; includes new Configuring Dialogic® MMA Boards section and separate Configuring Dialogic® HMP Interface Boards section. Added Configuring Start Mode for Media Services. Updated Configuring PSTN Network Interfaces to cover Dialogic® HMP Interface Boards (PCI Express), including Dialogic® DNI/2410TEPEHMP Boards. In Configuring Device-Level Bridging and Streaming, corrected bh-voicestream and hb-voicestream commands (removed 's'; voicestream rather than voicestreams). In Configuring Device-Level Bridging and Streaming, revised list of valid values for data streams and voice streams.</p> <p>SNMP Basics chapter: Added ipmsHwMMADev MIB module in Supported MIBs table. Changed Intel MIB names to Dialogic MIB names (Intel-Common-MIB to DLGC-GLOBAL-REG; Intel-Prod-Tel-MCPD-IPMS-Root to Dialogic-Prod-Tel-MediaServer-Root). Changed underscore to hyphen in all "ipms" MIB names. Updated example from 166 to 2005 in Changing the SNMP Listening Port. Updated information about ngmit.log in Troubleshooting section.</p> <p>SNMP MIB Reference chapter: Added Private Hardware MMA Device Module Reference section. Added note that future MSML features requiring configuration will not be supported using CLI or SNMP in Private Media Control Protocol Module Reference.</p> <p>Configuration Procedures Using SNMP chapter: Updated Supported Traps table: included new traps for MMA Boards (ipmsHwMMADevBoardTempCritical and ipmsHwMMADevBoardTempNonRecoverable). Reorganized chapter: includes new Configuring Dialogic® MMA Boards and separate Configuring Dialogic® HMP Interface Boards. Added Configuring Start Mode for Media Services. Updated Configuring PSTN Network Interfaces to cover Dialogic® HMP Interface Boards (PCI Express), including Dialogic® DNI/2410TEPEHMP Boards. In Configuring Device-Level Bridging and Streaming, revised list of valid values for data streams and voice streams.</p> <p>System Performance Tuning chapter: Added Configuring the Number of Message Queues section (IPY00039858, IPY00045219). Updated High Channel Density Recommendations, Optimizing NIC Driver Settings, and Disabling Driver Status Messages sections to show preferred commands.</p> <p>Echo Cancellation chapter: Added Configuring On-Board Echo Cancellation section and renamed some sections to indicate host-based EC. Made other minor edits.</p> <p>CONFIG File Parameter Reference for Dialogic Software chapter: Chapter applies to Dialogic® Host Media Processing (HMP) Software and Dialogic® Multimedia Kit Software for PCIe. Updated speed control enablement parameter to indicate that default value is disabled [decoder] Speed Control Parameter.</p> <p>CONFIG File Parameter Reference for Dialogic HMP Interface Boards: Added cross-references to Configuring On-Board Echo Cancellation section in [0x2c] Echo Cancellation Parameters. Updated list of values for ProtocolType in [CHP] ISDN Protocol Variant Definitions (IPY00045267).</p>
05-2519-001	August 2007	Initial version of document for Dialogic® Host Media Processing Software Release 3.1LIN.

About This Publication

The following topics provide more information about this publication:

- [Purpose](#)
- [Applicability](#)
- [Intended Audience](#)
- [How to Use This Publication](#)
- [Related Information](#)

Purpose

This document provides information for configuring Dialogic® software and Dialogic® hardware in a Linux system. Dialogic® software includes Dialogic® Host Media Processing (HMP) Software and Dialogic® Multimedia Kit Software for PCIe. Dialogic® hardware includes Dialogic® HMP Interface Boards (Dialogic® DNI boards) and Dialogic® Multimedia Accelerator Boards for PCIe (MMA Boards).

Configuration procedures are included, as well as descriptions of configuration files and configuration parameters. This document also provides system performance tuning guidelines and recommendations.

Applicability

This version of the document is published for Dialogic® Host Media Processing (HMP) Software Release 4.1LIN, Dialogic® Host Media Processing (HMP) Software Release 3.1LIN, and Dialogic® Multimedia Kit Software Release 1.0 for PCIe.

It may be applicable to other Dialogic® software releases (including service updates) on Linux operating systems. Check the Release Guide for your software release to determine whether this document is supported.

Intended Audience

This publication is intended for the following audience:

- System, application, and technology developers
- Toolkit vendors
- Value Added Resellers (VARs) and system integrators
- System and network administrators

This document assumes that you are familiar with the Linux operating system and have experience using the C programming language.

How to Use This Publication

The information in this document is organized as follows:

- [Chapter 1, “Configuration Overview”](#) describes the major configuration steps and introduces the tools available for configuration.
- [Chapter 2, “Feature Support by Platform”](#) describes high-level feature support by platform (software release).
- [Chapter 3, “Configuration Details”](#) provides more information about configuration topics such as configuration file sets, CT Bus clocking, and Dialogic® HMP software clocking and fallback.
- [Chapter 4, “Command Line Interface \(CLI\) Basics”](#) provides an overview of the CLI tool including how to access the tool, default usernames and passwords, and more.
- [Chapter 5, “Command Line Interface \(CLI\) Reference”](#) provides a reference to commonly used commands in the CLI.
- [Chapter 6, “Configuration Procedures Using CLI”](#) contains detailed procedural information for configuring a system using CLI.
- [Chapter 7, “SNMP Basics”](#) provides an overview of SNMP including system requirements, default usernames and passwords, and more.
- [Chapter 8, “SNMP MIB Reference”](#) provides a reference to the MIB modules supported by the SNMP agent software.
- [Chapter 9, “Configuration Procedures Using SNMP”](#) contains detailed procedural information for configuring a system using SNMP.
- [Chapter 10, “System Performance Tuning”](#) provides recommendations and guidelines for tuning system performance.
- [Chapter 11, “Echo Cancellation”](#) describes echo cancellation support in Dialogic® software and Dialogic® DNI boards. Background echo cancellation information and configuration information are included.
- [Chapter 12, “CONFIG File Details”](#) provides more information about *.config* (CONFIG) files such as file formatting conventions.
- [Chapter 13, “CONFIG File Parameter Reference for Dialogic®HMP Software”](#) describes parameters in the CONFIG files associated with Dialogic® software. Included are a description, a list of values, and configuration guidelines.
- [Chapter 14, “CONFIG File Parameter Reference for Dialogic® HMP Interface Boards”](#) describes parameters in the CONFIG files associated with the Dialogic® DNI boards. Included are a description, a list of values, and configuration guidelines.

Related Information

Refer to the following sources for more information:

- For information on installation and obtaining licenses, see the installation guide for your software release.
- For information about system requirements, release features, and release documentation, see the release guide for your software release.
- For details on compatibility issues, restrictions and limitations, known problems, and late-breaking updates or corrections to the release documentation, see the release update for your software release.
- For technical support, see <http://www.dialogic.com/support/>.
- For product information, see <http://www.dialogic.com>.

This chapter provides an overview of major configuration tasks to be performed and tools available to configure the system.

- Major Configuration Steps 15
- The Configuration Process 16
- Configuration/Administration Tools 17
- System Performance Tuning 18

1.1 Major Configuration Steps

The following major configuration steps apply to a system running Dialogic® Host Media Processing (HMP) Software and Dialogic® Multimedia Kit Software for PCIe. It also includes configuration steps for Dialogic® HMP Interface Boards (Dialogic® DNI boards) and Dialogic® Multimedia Accelerator Boards for PCIe (MMA Boards).

1. Showing current configuration settings
2. Stopping media services (**required**)
3. Configuring start mode for media services
4. Activating a license (**required**)
5. For Dialogic® MMA Boards, these additional procedures are applicable:
 - Selecting an ethernet interface
 - Setting the IP address for each DSP
 - Configuring the switch port interfaces
 - Configuring the ethernet interface
6. For Dialogic® DNI boards, these additional procedures are applicable:
 - Configuring PSTN network interfaces
 - Configuring the TDM bus
 - Configuring system-level bridging and streaming
 - Configuring device-level bridging and streaming
7. Configuring echo cancellation
8. Modifying the FCD File By Editing the CONFIG File
9. Configuring the Dialogic® Global Call CDP File
10. Restarting media services (**required**)

1.2 The Configuration Process

After the Dialogic® software is installed and the appropriate licensing is obtained, you can begin the configuration process. For information on installation and obtaining licenses, see the installation guide for your software release.

Two tools are available to perform configuration tasks as described in [Section 1.3, “Configuration/Administration Tools”](#), on page 17.

Showing current configuration settings

Default configuration settings are provided with the software according to the license obtained. You can modify these default settings as needed to suit your environment.

View current configuration settings before performing any modifications; for command line interface (CLI) tool, see [Section 6.3, “Showing Current Configuration Settings”](#), on page 44.

Stopping media services

Media services, which include services required to operate Dialogic® software and Dialogic® boards, must be stopped before configuring most components or subsystems. For CLI, see [Section 6.4, “Stopping Media Services”](#), on page 45; for SNMP, see [Section 9.4, “Stopping Media Services”](#), on page 78.

Configuring start mode for media services

You can specify whether the `dlstart` command starts the system in manual mode or in automatic mode. Manual mode starts all Dialogic® services but does not start media services. Automatic mode starts all Dialogic services **and** media services. For CLI, see [Section 6.5, “Configuring Start Mode for Media Services”](#), on page 46; for SNMP, see [Section 9.5, “Configuring Start Mode for Media Services”](#), on page 79.

Activating a license

You must activate a license before using the software. For CLI, see [Section 6.6, “Activating a Single License File”](#), on page 46; for SNMP, see [Section 9.6, “Activating a License”](#), on page 79.

Selecting an ethernet interface

Change the default selection for an MMA Board ethernet interface if necessary. For CLI procedures, see [Section 6.8.1, “Selecting an Ethernet Interface”](#), on page 49; for SNMP, see [Section 9.7.1, “Selecting an Ethernet Interface”](#), on page 80.

Setting the IP address for each DSP

Change the default IP address for each DSP on the MMA Board to fit your network layout if necessary. For CLI, see [Section 6.8.2, “Setting the IP Address for Each DSP”](#), on page 49; for SNMP, see [Section 9.7.2, “Setting the IP Address for Each DSP”](#), on page 81.

Configuring the switch port interfaces

Change the default setting for a switch port interface on the MMA Board if necessary. For CLI, see [Section 6.8.3, “Configuring the Switch Port Interfaces”](#), on page 50; for SNMP, see [Section 9.7.3, “Configuring the Switch Port Interfaces”](#), on page 81.

Configuring the ethernet interface

Change the default IP address for the ethernet interface to the MMA Board to fit your network layout if necessary. For CLI, see [Section 6.8.4, “Configuring the Ethernet Interface”](#), on page 51; for SNMP, see [Section 9.7.4, “Configuring the Ethernet Interface”](#), on page 81.

Configuring PSTN network interfaces

Change the default settings such as the protocol for each PSTN network interface for the Dialogic® DNI boards in your system. For CLI, see [Section 6.9.1, “Configuring PSTN Network Interfaces”](#), on page 52; for SNMP, see [Section 9.8.1, “Configuring PSTN Network Interfaces”](#), on page 82.

Configuring the TDM bus

Change the default settings for the TDM bus such as TDM bus clock source, primary board, secondary board, and more. For CLI, see [Section 6.9.2, “Configuring the TDM Bus”](#), on page 55; for SNMP, see [Section 9.8.2, “Configuring the TDM Bus”](#), on page 83.

Configuring system-level bridging and streaming

Change the default settings for bridging and streaming at the system level such as system law and idle pattern. For CLI, see [Section 6.9.3, “Configuring System-Level Bridging and Streaming”](#), on page 56. For SNMP, see [Section 9.8.3, “Configuring System-Level Bridging and Streaming”](#), on page 83.

Configuring device-level bridging and streaming

Change the default settings for bridging and streaming per device such as maximum voice streams, maximum data streams, and more. For CLI, see [Section 6.9.4, “Configuring Device-Level Bridging and Streaming”](#), on page 57. For SNMP, see [Section 9.8.4, “Configuring Device-Level Bridging and Streaming”](#), on page 84.

Configuring echo cancellation

Echo cancellation is typically required when Dialogic® HMP devices (for example, IP media, voice, and conferencing) receive media streams from the PSTN via DTI devices on certain boards. You can enable or disable echo cancellation, configure echo cancellation tail length, and more; see [Chapter 11, “Echo Cancellation”](#).

Modifying the FCD file by editing the CONFIG file

It is sometimes necessary to adjust the parameters within the FCD file. The files in a configuration file set (*.pcd*, *.fcd*, and *.config* files) are located in the *data* directory. The preferred method for adjusting parameters is to use *HMP.Uconfig*; for more information, see [Section 3.6, “Preserving Data in User Configuration Files”](#), on page 26. The alternate method is described in [Section 3.7, “Modifying the FCD File By Editing the CONFIG File”](#), on page 28.

Configuring the Dialogic® Global Call CDP file

If you are using the Dialogic® Global Call protocols, see the *Dialogic® Global Call Country Dependent Parameters (CDP) for PDK Protocols Configuration Guide*.

Restarting media services

After performing all configuration procedures for your system, you must restart media services to activate new configuration settings. For CLI, see [Section 6.10, “Restarting Media Services”](#), on page 59. For SNMP, see [Section 9.8.5, “Restarting Media Services”](#), on page 85.

1.3 Configuration/Administration Tools

Two tools are available to configure and monitor the system and, if applicable, the boards in the system. They both have access to the same configuration and monitoring data.

- [Command Line Interface \(CLI\)](#)

Configuration Overview

- [Simple Network Management Protocol \(SNMP\)](#)

1.3.1 Command Line Interface (CLI)

CLI is a text command-line based tool that provides multi-user access. The CLI agent is included with Dialogic® software. Users enter commands at the command prompt to execute configuration tasks.

For more information on the CLI, see [Chapter 4, “Command Line Interface \(CLI\) Basics”](#), [Chapter 5, “Command Line Interface \(CLI\) Reference”](#), and [Chapter 6, “Configuration Procedures Using CLI”](#).

A CLI demo, *cte.pl*, is included in the demos directory. It provides a script that automates repetitive tasks. See the *readme.txt* file for more information on this demo.

1.3.2 Simple Network Management Protocol (SNMP)

SNMP is a MIB-based tool that provides multi-user access. The SNMP agent software is included with Dialogic® software. Users can use an SNMP MIB browser to modify appropriate MIBs for configuration. SNMP MIB browser is not included with Dialogic® software.

For more information on SNMP, see [Chapter 7, “SNMP Basics”](#), [Section 8, “SNMP MIB Reference”](#), on page 69, and [Chapter 9, “Configuration Procedures Using SNMP”](#).

1.4 System Performance Tuning

This guide provides recommendations and guidelines on tuning system performance. For more information, see [Chapter 10, “System Performance Tuning”](#).

Feature Support by Platform

2

This System Configuration Guide is used in more than one Dialogic® platform. There may be information in this manual that is not supported in a Dialogic® platform. This chapter lists the high-level features documented in this current version and lists the Dialogic® platform (software release) that currently supports each feature.

Note: This table will be updated as a feature becomes available on a platform.

Feature Support by Platform

Table 1. High-Level Feature Support by Platform

Feature / Board	Dialogic® HMP Software 3.1LIN	Dialogic® HMP Software 4.1LIN	MMK for PCIe 1.0	Comments
Continuous Speech Processing API library	S	NS	NS	
Dialogic® HMP Interface Boards (Dialogic® DNI boards) (Universal PCI): DNI/300TEPHMP, DNI/601TEPHMP, DNI/1200TEPHMP	S	NS	NS	For media load information, see Section 3.2, “Media Loads” , on page 22. DNI/601TEPHMP has on-board echo cancellation. The other boards use host-based echo cancellation.
Dialogic® HMP Interface Boards (DNI boards) (PCI Express): DNI/310TEPEHMP, DNI/610TEPEHMP, DNI/1210TEPEHMP, DNI/2410TEPEHMP	S	S	S	For media load information, see Section 3.2, “Media Loads” , on page 22. These boards have on-board echo cancellation.
Dialogic® Multimedia Accelerator boards (PCI Express): MMAC500PCIEQ, MMAC250PCIEQ	NS	NS	S	
MSML	S	NS	S	
PSTN Network Interface protocols	S	S	S	Supported via Dialogic® HMP Interface Boards. R2MF is supported on DNI/601TEPHMP only.
Transparent data routing	S	S	S	Exception: not supported on DNI/601TEPHMP (Universal PCI).
User configuration file (<i>HMP.Uconfig</i>)	S	S	S	Exception: not supported on Dialogic® HMP Interface Boards.
Legend: S = supported; NS = not supported Dialogic® HMP Software 3.1LIN = Dialogic® Host Media Processing Software Release 3.1LIN Dialogic® HMP Software 4.1LIN = Dialogic® Host Media Processing Software Release 4.1LIN MMK for PCIe = Dialogic® Multimedia Kit Software Release 1.0 for PCIe				

The following topics provide more information about the configuration process:

- Configuration File Sets 21
- Media Loads 22
- CT Bus (TDM) Clocking..... 23
- Dialogic® HMP software Clocking and Fallback 24
- Transparent Data Routing for 3G-324M..... 25
- Preserving Data in User Configuration Files..... 26
- Modifying the FCD File By Editing the CONFIG File..... 28

3.1 Configuration File Sets

The set of files associated with a specific configuration all have the same name; only the extensions (*.pcd*, *.fcd* and *.config*) differ. A set of these files with the same name are used for a specific board type. The board type can include a single board or a group of similar boards. Depending on the board type and the protocol that the board will use, a specific FCD and PCD file are downloaded to that board. If the FCD file needs to be modified, the CONFIG file in that same set is used.

The files associated with configuration file sets include:

CONFIG File

The CONFIG file (*.config*), located in the *data* directory under INTEL_DIALOGIC_DIR (the environment variable for the directory in which the software is installed), contains the modifiable parameter settings used to configure board components. For additional information about CONFIG files, see [Chapter 12, “CONFIG File Details”](#).

Feature Configuration Description (FCD) File

An FCD file (*.fcd*), located in the *data* directory under INTEL_DIALOGIC_DIR, must be downloaded to each board in the system. The purpose of the FCD file is to adjust the settings of the components that make up each product. For example, the FCD file may contain instructions to set certain country codes, or may send messages that configure the Telephony Service Provider (TSP) component to operate with a particular network protocol.

The FCD file defines a simple message form that the downloader parses and sends to a specific component. These parameters are sent to a component within a message and can be thought of as configurable *features* of a component. The FCD file is created automatically from the associated CONFIG file during the board initialization process. For information about changing FCD file parameters, see [Section 3.6, “Preserving Data in User Configuration Files”](#), on page 26.

Note: Do not edit the FCD file directly.

Configuration Details

Product Configuration Description (PCD) File

A PCD file (*.pcd*), located in the *data* directory under `INTEL_DIALOGIC_DIR`, must be downloaded to each board in the system. The purpose of the PCD file is to determine the software components your system will use. It defines the product by mapping download object files to specific processors, configuring the kernel for each processor and setting the number of component instances to run on each processor.

Note: Do not modify the PCD file.

An example of a configuration file set for a Dialogic® DNI/601TEPHMP board using QSIG E1 on both trunks is as follows:

- *ghmpl1_hmpdsb_2_qsige1.config*
- *ghmpl1_hmpdsb_2_qsige1.fcd*
- *ghmpl1_hmpdsb_2_qsige1.pcd*

3.2 Media Loads

Media loads are pre-defined sets of features. A media load consists of a configuration file set (PCD, FCD, and CONFIG files) and an associated firmware load that are downloaded to each board.

- [Features Supported](#)
- [Flexible Routing Configuration](#)

3.2.1 Features Supported

This section describes the features supported by the media loads for Dialogic® HMP Interface Boards (Dialogic® DNI boards). See [Chapter 2, “Feature Support by Platform”](#) for information on boards supported in a platform (software release).

The media loads and features supported are:

NETWORKONLY

This media load supports network interface functionality only. Media processing functionality such as tone detection and tone generation, call progress analysis, and echo cancellation are provided by the Dialogic® HMP software.

The following Dialogic® HMP Interface Boards (PCI Express) use the NETWORKONLY media load: DNI/310TEPEHMP, DNI/610TEPEHMP, DNI/1210TEPEHMP, DNI/2410TEPEHMP.

The following Dialogic® HMP Interface Boards (Universal PCI) use the NETWORKONLY media load: DNI/300TEPHMP and DNI/1200TEPHMP.

HMPL1

Dialogic® DNI/601TEPHMP boards support a media load called HMPL1. This media load supports network interface functionality as well as some media processing functionality required for call control signaling, namely tone detection, tone generation, and call progress analysis. In addition, echo cancellation is performed on media received from the T1/E1 interface prior to that media being sent to the CT Bus and/or the Dialogic® HMP software.

Therefore, echo cancellation capabilities of other resources, such as IP media and conferencing, are not required for connections between these resources and T1/E1 interfaces on the DNI/601TEPHMP boards. Other media processing resources are provided by the Dialogic® HMP software.

3.2.2 Flexible Routing Configuration

Dialogic® HMP Interface Boards support flexible routing configuration.

Flexible routing configuration

With flexible routing, the resource devices (voice/fax) and network interface devices are independent, which allows exporting and sharing of the resources. All resources have access to the TDM bus. Each voice resource channel device and each network interface time slot device can be independently routed on the TDM bus.

3.3 CT Bus (TDM) Clocking

The system provides clocking and clock fallback to maintain timing in the event that the current clock source fails. The following provides reference information about the type of clock fallback:

- [Primary Clock Fallback](#)

3.3.1 Primary Clock Fallback


For the following discussion, refer to [Figure 1, “Clock Fallback”](#), on page 24 for an illustration of the CT Bus clocking concepts.

The Primary Clock Master is a device (board) that provides timing to all other devices attached to the bus. The Primary Clock Master drives bit and framing clocks for all of the other boards (slaves) in the system via CT Bus Line A or Line B. This bus clocking is synchronized to either the board's internal oscillator or, preferably, to the NetRef1 line which provides a timing reference (8 kHz) derived from a T1 or E1 interface signal.

The timing reference is provided by the Reference Master board. A T1 or E1 trunk on the Reference Master board is the source for the T1 or E1 interface signal from which the 8 kHz timing reference is derived. The timing reference is sent from the Reference Master board to the NetRef1 line.

In addition, a Secondary Clock Master can be defined as a backup for the same purpose. This board, like the Primary Clock Master, is capable of driving the bit and framing clocks for all of the other boards in the system. The Secondary Clock Master uses whichever CT Bus line (A or B) is not defined for the Primary Master Clock. If the system senses a failure of the Primary Clock Master, the system will cause the clock source to fall back to the Secondary Clock Master. The Secondary Clock Master, like the primary, also provides clocking that is synchronized to either the board's internal oscillator or, preferably, to the NetRef1 line.

Figure 1. Clock Fallback

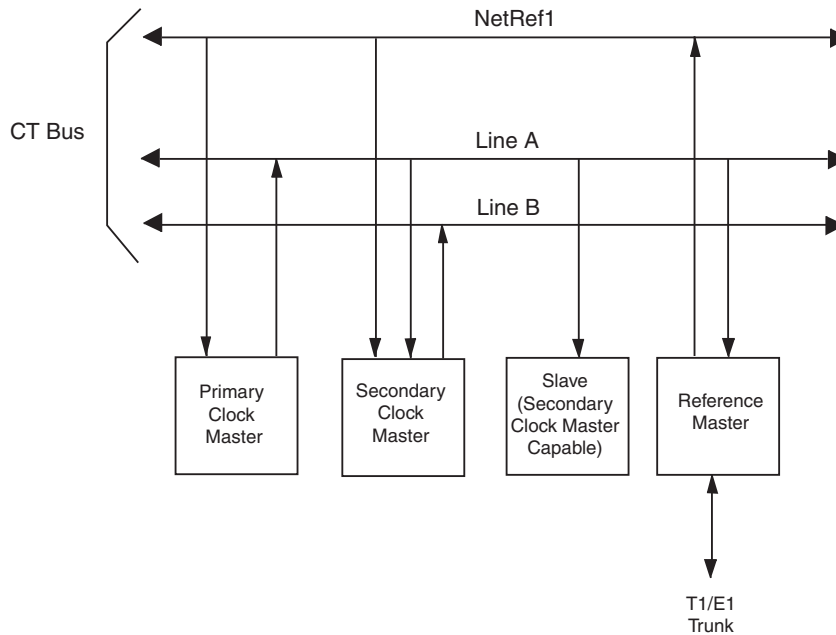

In the case where the Primary Clock Master has failed, and the clock source falls back to the Secondary Clock Master, the system selects a new Secondary Clock Master, assuming that a board in the system meets the criteria for a clock master.

If the Primary Clock Master fails and no Secondary Clock Master has been defined, the system will automatically choose another board to be Primary Clock Master, if another board in the system is clock master capable.

Both the Primary and Secondary Clock Masters can be configured by the user; default values are assigned by the system. For instructions on modifying the clock source, see [Section 6.9.2, “Configuring the TDM Bus”](#), on page 55 when using the CLI, and see [Section 9.8.2, “Configuring the TDM Bus”](#), on page 83 when using SNMP.

3.4 Dialogic® HMP software Clocking and Fallback

Dialogic® HMP Interface Boards include a bridge device that can stream data between the boards connected to the CT Bus and Dialogic® HMP software, and additionally is capable of providing clocking to HMP software. The clocking provided to HMP software from an HMP interface board is derived from CT Bus clocking. In an HMP system that contains interface boards, one board is selected as the Primary Clock Master for HMP software. Additional interface boards serve as backup clocking sources for HMP software, via a fallback list, should the Primary Clock Master fail.

In a Dialogic® HMP software system with no interface boards or no active boards, clocking for HMP software is derived from an alternate system clock source. This alternate system clock source

also serves as the last clock source for HMP software on the fallback list. For more information on this clock source, see the Linux RTC device topic in the software installation guide.

Clocking is configured as part of the bridge device configuration. When using the CLI, see [Section 6.9.4, “Configuring Device-Level Bridging and Streaming”](#), on page 57 for more information. When using SNMP, see [Section 9.8.4, “Configuring Device-Level Bridging and Streaming”](#), on page 84. The parameters for configuring clocking provided to HMP software from interface boards are located on the Bridge Device Configuration Property sheet in the configuration manager utility. For instructions on configuring these parameters, see [Section 4.6, “Modifying Bridge Device Parameters”](#), on page 41. For parameter reference information, see [Section 6.2, “Bridge Device Configuration Property Sheet”](#), on page 64.

3.5 Transparent Data Routing for 3G-324M

Transparent data routing (transparent mode) for 3G-324M is described in the following topics:

- [Transparent Mode Overview](#)
- [Enabling Transparent Mode on a Channel](#)

3.5.1 Transparent Mode Overview

Transparent data routing or transparent mode is used when connecting a DTI device supporting 3G-324M to an M3G (3G-324M) device. When these two devices are connected, H.223 data is passed between them transparently.

Note: This feature is not supported on all boards; see [Table 1, “High-Level Feature Support by Platform”](#), on page 20 for more information.

The DTI device, which represents the T1/E1 bearer channel interface, passes data between a bearer channel on the T1/E1 interface and the physical CT Bus. Data is then passed between timeslots on the physical CT Bus and the Dialogic® HMP Software “soft” CT Bus as needed using the bridging capability provided by the Dialogic® HMP Interface Boards.

When voice or audio is passed, it may be processed such as being converted to linear format or to a common system law format (A-law, mu-Law). When data other than voice or audio such as H.223 data supporting 3G-324M is passed, no processing should occur; that is, data should be passed transparently.

Use the `gc_SetConfigData()` function in the Dialogic® Global Call API library to set the DTI device or Global Call device to pass data transparently. See [Section 3.5.2, “Enabling Transparent Mode on a Channel”](#), on page 26 for more information.

Note: Echo cancellation (EC) must be disabled on the DTI device that is used for 3G-324M. EC is disabled by default on Dialogic® HMP Interface Boards that support EC. EC may be enabled or disabled in real time per call using the `gc_SetConfigData()` function in the Global Call API library; see [Section 11.6, “Configuring On-Board Echo Cancellation”](#), on page 101.

With the command line interface (CLI) utility, use the `conf hardware bridge` command to configure the bridge device to support the desired number of data streams for your environment.

Configuration Details

The default setting for **data streams** is 0 for Dialogic® HMP Interface Boards. As an example, for an application supporting 120 3G-324M channels, ensure that a minimum of 120 data streams have been configured. See [Section 6.9.4, “Configuring Device-Level Bridging and Streaming”](#), on page 57 for more information when using the CLI. See [Section 9.8.4, “Configuring Device-Level Bridging and Streaming”](#), on page 84 for more information when using SNMP.

A DTI channel must be configured to operate in transparent mode when supporting 3G-324M. DTI channels may be individually configured in real time per call via the `gc_SetConfigData()` function. Dialogic® HMP software will automatically select and use bridge data streams when connecting DTI devices to M3G (3G-324M) devices.

3.5.2 Enabling Transparent Mode on a Channel

The `gc_SetConfigData()` function, which supports the Global Call Real Time Configuration Management (RTCM) feature, allows the configuration of transparent mode on a PSTN channel basis at runtime. When transparent mode is **enabled**, there is no processing on the front end data coming in from the PSTN network before passing it to the TDM bus, nor is there any processing of data being transmitted to the PSTN network from the TDM bus. The default setting is transparent mode **disabled**.

The `gc_SetConfigData()` function uses a `GC_PARM_BLK` structure that contains the configuration element. The `GC_PARM_BLK` is populated using the `gc_util_insert_parm_val()` function.

To enable/disable transparent mode on a channel, the following setID/parmID pair is used:

- `CCSET_DM3FW_PARM` is the setID
- `CCPARAM_TRANSPARENTMODE` is the parmID, with values:
 - `CCDM3FW_TRANSPARENTMODE_DISABLE`
 - `CCDM3FW_TRANSPARENTMODE_ENABLE`

The size of the parameter is a char or UINT8.

Once the `GC_PARM_BLK` has been populated with the desired values, the `gc_SetConfigData()` function can be issued to perform the configuration. Use the target type `GCTGT_CCLIB_CHAN`.

To configure transparent mode on a system wide basis, you can add a parameter to the `Hmp.Uconfig` user configuration file. For more information, see [Section 3.6, “Preserving Data in User Configuration Files”](#), on page 26.

3.6 Preserving Data in User Configuration Files

Configuration settings unique to your environment can be preserved and re-applied whenever a Dialogic® HMP software license is changed or reactivated.

Previously customized settings in the `<licensename>.config` file (the default `.config` file created during license generation) were lost every time a new Service Update was installed or a new

Dialogic® HMP software license was activated. These customized settings then had to be re-entered.

A user configuration file, *Hmp.Uconfig*, is available. This file, which has the same format as the *<licensename>.config* file, contains only the parameters and parameter values that are customized for your environment. The contents of the *Hmp.Uconfig* file are not overwritten but are merged into the *<licensename>.config* file whenever a new Service Update is installed or a new HMP software license is activated.

To preserve custom configuration settings in a user configuration file, follow these steps:

1. Create an *Hmp.Uconfig* file in the *data* directory under `INTEL_DIALOGIC_DIR`, the environment variable for the directory in which the HMP software is installed. You may also want to make a copy of the *Hmp.Uconfig* file and save it in a safe location as a backup.
2. Delete the *.pcd*, *.fcd*, and *.config* files.
3. Restart the system using `dlstart`. The *.pcd*, *.fcd*, and *.config* files are regenerated with the new settings.

If you do not want the customized parameters in the *Hmp.Uconfig* file to be merged into the generated *<licensename>.config* file, you should either remove the *Hmp.Uconfig* file from the data directory or rename it.

Example

The following is a sample *Hmp.Uconfig* file, where the default AGC setting has been changed and a new parameter has been added:

```
[encoder]
SetParm=0x400,0    !AGC Enabled (1=Enable, 0=Disable)

[0xe]
SetParm=0xb17,4    !QFC3_ PrmResponseTimeout default 3 seconds
```

The following is a sample excerpt of a merged *<licensename>.config* file. It shows the new AGC setting in the `[encoder]` section followed by the default value for AGC, commented by “![^]”. It also shows a new parameter in `[0xe]`, delimited by the “![<]add[>]”.

```
[encoder]
SetParm=0x400,0    !AGC Enabled (1=Enable, 0=Disable)
!^SetParm=0x400,1    !AGC Enabled (1=Enable, 0=Disable)

[0xe]
...
!<add>
SetParm=0xb17,4    !QFC3_ PrmResponseTimeout default 3 seconds
!</add>
```

3.7 Modifying the FCD File By Editing the CONFIG File

Note: It is strongly recommended that you use the procedure described in [Section 3.6, “Preserving Data in User Configuration Files”](#), on page 26 for modifying FCD file parameters.

If the default settings in the FCD files are not appropriate for your configuration, you can modify the FCD file parameters using the CONFIG file and the *fcngen* utility. Modifications can be made at any time prior to starting the system. For each FCD file to be modified, the procedure includes:

1. [Editing the CONFIG File](#)
2. [Generating the FCD File](#)

3.7.1 Editing the CONFIG File

To edit the CONFIG file:

1. From the command prompt, go to the */usr/dialogic/data* directory and locate the CONFIG file.
2. Using a text editor (for example, *vi*), open the CONFIG file that corresponds to the FCD file you want to modify. By default, the CONFIG file will have the same file name as the FCD file, but with a *.config* extension.
3. Edit the CONFIG file as necessary.
4. For more information on CONFIG file sections and formatting conventions, see [Chapter 12, “CONFIG File Details”](#). For details about CONFIG file parameters, see [Chapter 13, “CONFIG File Parameter Reference for Dialogic®HMP Software”](#) and [Chapter 14, “CONFIG File Parameter Reference for Dialogic® HMP Interface Boards”](#).
5. Save and close the CONFIG file.

Proceed with [Section 3.7.2, “Generating the FCD File”](#), on page 28.

3.7.2 Generating the FCD File

In order to generate an FCD file, the corresponding CONFIG file must be converted to an FCD file. The *fcngen* utility converts the CONFIG file into a format that can be read directly by the downloader.

1. From the command prompt, go to the */usr/dialogic/data* directory.
2. Execute *fcngen* as follows:

```
../bin/fcngen -f <input file>.config -o <output file>.fcd  
OR  
../bin/fcngen <input file>.config
```

The resulting FCD file is created in the *data* directory. The *-f* and *-o* options are optional. If this command is run with the input file filename only, the default output FCD file will have the same filename as the input file, but with a *.fcd* extension.

Command Line Interface (CLI) Basics

4

This chapter provides basic information on accessing and using the Command Line Interface (CLI):

- CLI Overview 29
- Accessing the CLI 29
- Default Usernames and Passwords for CLI Users. 30
- CLI Commands by User Role 30
- CLI Help 31
- CLI Account Management Commands 32
- CLI Show Command 33
- CLI Configure (Conf) Command 34
- Troubleshooting 34

4.1 CLI Overview

CLI is one of two interfaces that can be used to configure Dialogic® software and Dialogic® hardware. The other is Simple Network Management Protocol (SNMP). They both have access to the same configuration and monitoring data. SNMP is MIB-based, and CLI is text command line-based. For information about using SNMP for configuration management, see [Chapter 7, “SNMP Basics”](#).

When the CLI is running, events are displayed on the CLI terminal.

4.2 Accessing the CLI

The CLI agent provides multi-user access for remote and/or local configuration management and monitoring of the Dialogic software and Dialogic hardware. The CLI agent is included with the Dialogic software and is automatically started when the software is started using a system reboot or the `dlstart` command.

Up to three users can access the CLI at the same time. Each login session is controlled by a session timer, so when users forget to log off the system, CLI will do it for them.

Command Line Interface (CLI) Basics

The CLI agent is a server process that monitors Telnet port 23 by default. (You can specify a different port as needed during the Dialogic software installation.) Users can access the CLI agent using the telnet command from any system supporting the Telnet protocol. For example:

```
> telnet 192.168.12.34
```

If you are already logged on to the system, you can use the loopback IP address to access the CLI:

```
> telnet 127.0.0.1
```

Once you successfully Telnet to the system, you will be presented with a product banner, followed by a login prompt.

After you successfully log in, you can use CLI commands to view and modify software and board settings and parameters, depending on your access level. The CLI command prompt is:

```
CLI>
```

4.3 Default Usernames and Passwords for CLI Users

CLI supports three levels of users. Each level has different capabilities and command access within the CLI.

Table 2. CLI Usernames and Passwords

Role	Username	Password	Description
Account manager	acctmgr	acctmgr	Allowed to add, delete, and update all user information.
Craftsperson	craft	craft	Allowed to read data except account manager specific data.
Administrator	admin	admin	Allowed to read and write data except account manager specific data.

4.4 CLI Commands by User Role

The CLI consists of basic commands used to configure and monitor the software and hardware, for example:

- **show** - To view information
- **conf** - To configure information

The basic commands are then followed by one or more subcommands that describe the type of data or specific data item you wish to view or modify. The following lists the available commands as they apply to a user's role.

Table 3. CLI Users and Command Privileges

Command	Account Manager	Craftsperson	Administrator	Description
adduser	Yes	No	No	Add users to the system
clear	Yes	Yes	Yes	Clear display
conf	No	No	Yes	Change parameters
deleteuser	Yes	No	No	Delete users from system
editpword	Yes	Yes	Yes	Change your password
edituser	Yes	No	No	Modify user account data
keepalive	Yes	Yes	Yes	Specify number of seconds to wait between CLI commands before auto logout for this session
list	Yes	No	No	List CLI user accounts
logout	Yes	Yes	Yes	Log off
man	Yes	Yes	Yes	Help
pagescroll	Yes	Yes	Yes	Specify paging in a session
prompt	Yes	Yes	Yes	Change the display prompt for the current session
quit	Yes	Yes	Yes	Log off
show	No	Yes	Yes	Show parameters and statistics
who	Yes	Yes	Yes	Display users currently logged on to CLI agent

4.5 CLI Help

The CLI agent provides context-level help at any point during command input by typing **-h** followed by a carriage return. For example:

```
CLI> show hardware -h
help - expected
      dm3
      dev
      pstn
      bridge
```

For the list of available commands based on your login permission, enter **?** at the command prompt. For example:

```
Login :admin
Password :*****
CLI> ?
adduser      clear      conf      deleteuser  editpword
```

...

The keyboard up/down arrows allow you to scroll through the input history buffer, and thus repeat the last line(s) you typed. Using the left and right arrow keys, you can edit the input line for updated values without having to retype the entire line.

4.6 CLI Account Management Commands

This section covers the CLI account management commands used to provision and maintain CLI users and permissions.

As stated earlier, there are three levels of users in the CLI. The account manager user is responsible for provisioning and managing all other users with the CLI. The account manager user can add new users, delete users, update user passwords or context (user role), and set user aging parameters. Aging parameters are used to automatically remove passwords and user accounts after a configurable time period and are provided to increase system security.

The commands to create, modify, and delete users have the form:

[add/edit/delete]user [*username*] <*parameters*>

where the command prefix is one of **add**, **edit**, or **delete**; *username* identifies the user; and the *parameters* define the managed user and optional settings. The *username* and *parameters* can be entered in any order.

The following lists account management commands.

Table 4. Account Management Commands

Command	Parameters	Description	Examples
adduser	[-g <password aging>] [-a <account aging>] [-i <context>] username password	Add user to the system. Default password aging: 60 Default account aging: 180 Contexts are ACCTMGRCTX for account manager, CRAFTCTX for craftsperson, ADMINCTX for administrator.	CLI> adduser -i ADMINCTX john pw123 Creates user "john" with password "pw123" and permissions "ADMINCTX"

Table 4. Account Management Commands (Continued)

Command	Parameters	Description	Examples
deleteuser	username	Deletes user "username" account	CLI> deleteuser john Deletes user "john"
editpword	password	Change current user password.	CLI> editpword john pw456 Updates current user password to "pw456"
edituser	[-g <password aging>] [-a <account aging>] [-i <context>] [-p <new password>] username	Edits account information for the specified user.	CLI> edituser john -p pw123 Changes user "john" password to "pw123"

4.7 CLI Show Command

The **show** command is used to view any/all configuration parameters and statistics. It has the form:

show <subcommand>

where *subcommand* can be a terminating command that results in data output, such as **show system**, or a submenu category such as **show tcp**, which requires additional arguments before output is displayed (for example, **show tcp brief**).

The initial command and subcommand are case sensitive and require complete command entry, for example:

```
CLI> show interface
```

Parameters following the command and subcommand will match to the shortest unique command. For instance, the following are valid inputs to the **interface** subcommand:

```
CLI> show interface e
CLI> show interface Ethernet
CLI> show interface de
CLI> show interface ds
```

If the user enters a non-unique parameter, a help message is displayed with the list of valid parameters. For example:

```
CLI> show interface d
ambiguous option - expected
    desc          Display link/administration status for interfaces
    ds1           DS1 interface information
    ethernet      Ethernet interface information
    media-ethernet Media ethernet interface information
    <cr>          Dump all interface information
```

Command Line Interface (CLI) Basics

See [Chapter 5, “Command Line Interface \(CLI\) Reference”](#) for more information on CLI commands.

4.8 CLI Configure (Conf) Command

The **conf** command is used to update configuration parameters. It has the general form:

```
conf <subcommand> <parameter> <value>
```

where *subcommand* identifies the group being configured, such as **interface** or **system**. Following the command and subcommand are a simple parameter/value pair or additional subcategories followed by a parameter/value setting.

For example, the following is a simple parameter/value setting that updates the system group, field name, to “My NetMedia Box”:

```
CLI> conf system name 'My NetMedia Box'
```

The same rules for the **show** command entry also apply to the **conf** command. The command and subcommand are case sensitive and must be entered as shown. Subcategories and parameters are case insensitive and match on the shortest, most unique input.

See [Chapter 5, “Command Line Interface \(CLI\) Reference”](#) for more information on CLI commands.

4.9 Troubleshooting

This section provides information on troubleshooting.

Restarting CLI Agent

In case of CLI failure, you may need to start the CLI agent manually.

```
dlservices cli start
```

Capturing CLI Session in Log File

To help troubleshoot configuration issues, it is sometimes helpful to capture your entire CLI session in a log file. To capture the CLI session, you can use the **script** operating system command. For example:

```
bash> script <optional filename>
bash> telnet localhost
cli> ... [perform CLI operations]
cli> logout
```

```
bash> exit  
bash> more typescript <or optional filename>
```

If you don't provide an argument for script, the default filename is typescript. The script command writes to the buffer until the exit command is issued.

Command Line Interface (CLI) Reference

5

This chapter provides reference information for commonly used commands in the Command Line Interface (CLI):

- CLI Reference Overview 36
- CLI Configure (Conf) Command Reference 36
- CLI Show Command Reference 39
- CLI Pagedscroll Command Reference 40
- CLI Command Reference by Device 41

5.1 CLI Reference Overview

CLI is a command line interface used to configure Dialogic® software and Dialogic® hardware. For basic CLI information such as how to access CLI, see [Chapter 4, “Command Line Interface \(CLI\) Basics”](#).

Information on all supported commands is available via the online help. You can access help by typing `?` at the command prompt. You can also access context-level help at any point during command input by typing `-h` followed by a carriage return.

Note: The subcommands that are available for a command depend on the hardware in your system. For more information, see [Section 5.5, “CLI Command Reference by Device”](#), on page 41.

Note: Future MSML features requiring configuration will not be supported using CLI or SNMP. You will need to manually edit the MSML media server configuration file. For MSML support, see the *Dialogic® MSML Media Server User’s Guide*.

5.2 CLI Configure (Conf) Command Reference

The **conf** command is used to update configuration parameters. Its subcommands are listed as follows:

hardware *<subcommand>*

configures hardware

- dm3 (or hib) – parameters for Dialogic® DM3 devices including Dialogic® HMP Interface Boards. See hardware dm3 for list of values.
- dev – device parameters. See hardware dev for list of values.
- pstn (or ds1) – PSTN network interface parameters. See hardware pstn for list of values.
- mma – parameters for Dialogic® Multimedia Accelerator Boards for PCIe (MMA Boards)

- bridge – bridging (host streaming interface or HSI) parameters. See hardware bridge for list of values.

Note: The subcommands that are available depend on the hardware in your system.

hardware bridge <*subcommand*>

configures bridging and streaming parameters

- sys – bridging and streaming system-level parameters. See hardware bridge sys for list of values.
- dev – bridging and streaming device-level parameters. See hardware bridge dev for list of values.

hardware bridge dev <*device ID*> <*subcommand*>

configures bridging and streaming parameters at the device level

- dev-enable – enable bridge device
- nbr-userdef – user-defined clock master fallback for Dialogic® HMP software
- bh-datastreams – maximum board to host data streams
- hb-datastreams – maximum host to board data streams
- bh-voicestream – maximum board to host voice streams
- hb-voicestream – maximum host to board voice streams

hardware bridge sys <*subcommand*>

configures bridging and streaming parameters at the system level

- a-law – idle pattern for a-law
- mu-law – idle pattern for mu-law
- nbrhsi-buffer – number of host streaming interface (HSI) hold buffers

hardware dev <*device ID*> <*subcommand*>

configures hardware device parameters

- admin *value* – set administration status of Dialogic® HMP Interface Boards; that is enabling or disabling a board. Values are: 1 (enabled) and 2 (disabled).

hardware dm3 <*DM3 device ID*> <*subcommand*>

configures parameters for a Dialogic® DM3 device including Dialogic® HMP Interface Boards

- logical-id *value* – logical device number
- fcd *value* – FCD file
- pcd *value* – PCD file
- media-load *value* – media load. Note that this parameter cannot be modified.
- pcmencoding *value* – PCM encoding

Note: It is recommended that you do not modify the FCD file and PCD file values via this command. These values are updated when you configure the protocol for the network interface.

hardware mma <*device ID*> <*subcommand*>

configures parameters for Dialogic® Multimedia Accelerator Boards for PCIe (MMA Boards)

- dsp <*DSP ID*> ipaddress <*IP address*> – IP address of DSP
- interface-select <*interfaceName*> – ethernet interface selected
- switchport <*port ID*> adminstatus <up/down> – switch port interface status

hardware pstn <*device ID*> <*trunk ID*> <*subcommand*> (alias hardware ds1)

configures PSTN network interface parameters

- protocol – protocol

Command Line Interface (CLI) Reference

interface <subcommand>

configures an interface

- ds1 <trunk number> <alarmtrap/no alarmtrap> – enables/disables trunk status change events (alarm states turn on and off)
- ethernet – ethernet interface information
- media-ethernet <dspid> address <current ip address> address <new ip address> – IP address for MMA Boards

Note: The media-ethernet command is an alias of conf hardware mma, provided for compatibility with Dialogic® Multimedia Platform for AdvancedTCA. The recommended command to use is conf hardware mma.

ip <subcommand>

configures global IP configuration subcommands

- ttl *value* – default packet time to live

license <subcommand>

configures media license parameters

- directory *value* – directory location of license file
- activate *value* – license (file name) to activate on next media start
- oem-function *value* – function to be invoked for OEM licensing
- oem-library *value* – library to be loaded for OEM licensing

msml <subcommand>

configures remote media control parameters

- access-list – trusted server list settings. See msml access-list for a list of values.
- http-caching – enable http caching
- ip *value* – set remote media control ip address
- no – disable MSML remote media control features
- port *value* – set remote media control port
- protocol *value* – enable MSML remote media control protocol
- transport-protocol *value* – set remote media control protocol transport
- schema-validation – enable schema validation

msml access-list <subcommand> or *value*

configures trusted server list settings. This command enables the list.

- <trusted ip address> – add this IP address to the trusted server list, if not already added
- no <trusted ip address> – delete this IP address from the trusted access server list

system <subcommand>

configures global system and media parameters

- contact *value* – set contact information
- ipmedia *value* – start/stop the IP media subsystem
- ipmedia start-mode *value* – specify whether dlstart starts the system in manual mode or automatic mode. Manual mode starts all Dialogic services but doesn't start media services. Automatic mode starts all Dialogic services and media services. On Dialogic® Host Media Processing (HMP) Software, the default mode is automatic mode. On Dialogic® Multimedia Platform for AdvancedTCA, the default mode is manual mode on the first dlstart command, and automatic mode on subsequent dlstart commands. On Dialogic® Multimedia Kit for PCIe, the default mode is manual mode.
- location *value* – set system location
- name *value* – set system name
- pstn apply – apply user defined values to system

- hmp-rtp-address *value* – set IP address used by Dialogic® software to send RTP messages
- tdmbus *value* – Alias for tdmbus is ctbus. Set TDM bus values. See system tdmbus for list of values.

system tdmbus <*subcommand*>

Alias for tdmbus is ctbus. Configures TDM bus values.

- daemon-mode *value* – set Clock Daemon Mode
- primary-line *value* – set TDM bus primary line
- primary-board *value* – set TDM bus primary line board
- secondary-board *value* – set TDM bus secondary line board
- primary-line-clock *value* – set TDM bus primary line clock (clock source)
- netref-provider *value* – set TDM bus NetRef provider board
- netref-clock-rate *value* – set TDM bus NetRef clock rate
- netref-interface *value* – set TDM bus NetRef line interface
- netref-fallback-provider *value* – set TDM bus NetRef fallback provider board
- netref-fallback-interface *value* – set NetRef fallback entry interface
- netref-fallback-enable – set NetRef fallback status

5.3 CLI Show Command Reference

The CLI **show** command is used to view any/all configuration parameters and statistics. Its parameters are listed as follows:

arp

shows ARP table

controller

shows controller status and information

- ds1 – ds1 interface

hardware

shows hardware information

- dm3 (or hib) – parameters for Dialogic® DM3 device including Dialogic® HMP Interface Boards
- dev – device parameters
- pstn (or ds1) – PSTN trunk parameters
- mma – parameters for MMA Boards
- bridge – bridging (host streaming interface or HSI) device parameters

Note: The subcommands that are available depend on the hardware in your system.

icmp

shows ICMP information

interface

shows interface information

- desc – display link/administration status for interfaces
- ds1 – DS1 interface information
- ethernet – ethernet interface information
- media-ethernet – media ethernet interface information

ip

shows global IP configuration subcommands

Command Line Interface (CLI) Reference

- `addr` – IP address table
- `arp` – ARP table
- `interface` – interface settings
- `routes` – route table entries
- `traffic` – all IP traffic data

`license`

shows license information

`mxml`

shows MSML properties

`system`

shows system information

- `tdmbus` – Alias for `tdmbus` is `ctbus`. Shows TDM bus (or CT Bus) information.

`tcp`

shows status of TCP connections

- `brief` – brief
- `statistics` – statistics

`udp`

shows status of UDP connections

- `brief` – brief
- `statistics` – statistics

`version`

shows version information such as system name (if defined), form factor, model (or software release), and vendor.

5.4 CLI Pagedscroll Command Reference

The CLI **pagedscroll** command is used to specify paging in a session. The parameters for the CLI **pagedscroll** command are as follows:

`enable`

enables page scrolling

`disable`

disables page scrolling. This is the default setting.

`status`

displays the current status (enabled/disabled)

The CLI output prints 20 lines to the console at a time. To navigate the output, use:

`<space bar>`

To scroll down one page

`<return>`

To scroll down one line

q

To leave the output display and return to the command line. Note that ‘q’ is the only way to quit, even when the cursor is at the end of the output.

5.5 CLI Command Reference by Device

The subcommands that are available for the configure (conf) and show commands depend on the hardware in your system. For example, if there are no Dialogic® HMP Interface Boards installed in your system, commands associated with these boards are not supported and will not be displayed in the help system.

The following tables list CLI commands and the devices that support these commands. Device types include: Dialogic® Multimedia Platform for AdvancedTCA (MMP for ATCA), Dialogic® PCI device, Dialogic® DM3 device, Dialogic® HMP software device, Dialogic® HMP Interface Boards device, Dialogic® Multimedia Accelerator Boards for PCIe (MMA Boards) device, bridge-capable device, and TDM-capable device.

MMP for ATCA information is provided as a reference for MMP for ATCA users who also use other Dialogic® products described in this document.

Table 5. CLI Conf Command Reference by Device

Device	conf system	conf hardware	conf interface	conf controller
MMP for ATCA	pstn-trunks	amc rtm	media-ethernet ds1	ds1
Dialogic® PCI device		dev		
Dialogic® DM3 device		dm3		
Dialogic® HMP software device	hmp-rtp-address			
Dialogic® HMP Interface Board device	pstn apply	pstn (ds1)		
MMA Board device		mma	media-ethernet	
Bridge-capable device		bridge		
TDM-capable device	tdmbus (ctbus)			

Table 6. CLI Show Command Reference by Device

Device	show system	show hardware	show interface	show controller
MMP for ATCA			media-ethernet ds1	ds1
PCI device		dev		
Dialogic® DM3 device		dm3		
Dialogic® HMP software device				

Command Line Interface (CLI) Reference

Table 6. CLI Show Command Reference by Device

Device	show system	show hardware	show interface	show controller
Dialogic® HMP Interface Board device		pstn (ds1)	ds1	ds1
MMA Board device		mma	media-ethernet	
Bridge-capable device		bridge		
TDM-capable device	tdmbus (ctbus)			

Configuration Procedures Using CLI

6

This chapter provides detailed procedures for each major step in the configuration process using the Command Line Interface (CLI) software to configure Dialogic® HMP software and Dialogic® hardware. Some steps may not apply to your system configuration.

- Assumptions and Prerequisites 43
- Order of Procedures 44
- Showing Current Configuration Settings 44
- Stopping Media Services 45
- Configuring Start Mode for Media Services 46
- Activating a Single License File 46
- Configuring Dialogic® MMA Boards 48
- Configuring Dialogic® HMP Interface Boards 52
- Restarting Media Services 59

6.1 Assumptions and Prerequisites

The following assumptions and prerequisites exist regarding the configuration procedures using the CLI:

- All required software, including prerequisites, have been installed and Dialogic® services have been started according to the procedures in the software installation guide supplied with your release.
- The release was installed in the default directory under INTEL_DIALOGIC_DIR, the environment variable for the directory in which the software is installed. Command instructions, directory paths and environment variable are shown relative to the default installation directory.
- All required Dialogic® hardware has been installed; this can include Dialogic® Multimedia Accelerator Boards for PCIe (MMA Boards) and Dialogic® HMP Interface Boards (Dialogic® DNI boards).
- You have accessed the CLI agent and logged in with the appropriate user account (such as administrator). For more information on the CLI, see [Chapter 4, “Command Line Interface \(CLI\) Basics”](#) and [Chapter 5, “Command Line Interface \(CLI\) Reference”](#).
- See [Chapter 2, “Feature Support by Platform”](#) for information on features and boards supported by platform (software release).
- If applicable, the Dialogic® Global Call protocols have been installed. The Dialogic® Global Call protocols are provided as part of the release. For information about country dependent

Configuration Procedures Using CLI

parameters associated with a protocol, see the *Dialogic® Global Call Country Dependent Parameters (CDP) for PDK Protocols Configuration Guide*.

Note: If a Dialogic® DNI Board or a Dialogic® MMA Board is removed from the system and reinserted, you will need to reconfigure the board using the CLI or SNMP utility.

6.2 Order of Procedures

The following is a suggested order for performing configuration procedures. Procedures that are required when configuring any system are noted as such. Additional procedures may be required depending on your system.

1. [Showing Current Configuration Settings](#)
2. [Stopping Media Services \(required\)](#)
3. [Configuring Start Mode for Media Services](#)
4. [Activating a Single License File \(required\)](#)
5. For Dialogic® MMA Boards, these additional procedures are applicable:
 - 5a. [Selecting an Ethernet Interface](#)
 - 5b. [Setting the IP Address for Each DSP](#)
 - 5c. [Configuring the Switch Port Interfaces](#)
 - 5d. [Configuring the Ethernet Interface](#)
6. For Dialogic® DNI boards, these additional procedures are applicable:
 - 6a. [Configuring PSTN Network Interfaces](#)
 - 6b. [Configuring the TDM Bus](#)
 - 6c. [Configuring System-Level Bridging and Streaming](#)
 - 6d. [Configuring Device-Level Bridging and Streaming](#)
 - 6e. [Configuring Status Change Events on a Trunk](#)
7. [Restarting Media Services \(required\)](#)

6.3 Showing Current Configuration Settings

Default configuration settings are provided with the software according to the license obtained for your system. You can modify these settings as needed to suit your environment.

Use the **show** command to view configuration settings. See [Section 5.3, “CLI Show Command Reference”](#), on page 39 for a list of all show commands.

For example, to show all devices in your system, enter the following command:

```
CLI> show hardware
```

The device ID obtained from this command is required in some configuration steps.

To show MMA Board devices, enter the following command:

```
CLI> show hardware mma
```

Information about ethernet interfaces, DSP interfaces, switch ports is displayed. This command also displays the current board temperature and board temperature characteristics. If the temperature reaches the upper critical temperature, upper non-recoverable temperature, lower critical temperature, or lower non-recoverable temperature, an appropriate event is generated by the CLI to inform the user.

6.4 Stopping Media Services

Media services must be stopped before configuring most components or subsystems. Attempting to configure components or subsystems in a system where media services are not stopped will result in this message:

```
Media service is not in the proper state for operation
```

If media services are started, follow this procedure to stop media services (and boards that are enabled) before configuring the system:

1. Get the system run status found in the system group. Verify that the run status is active.

```
CLI> show system
```

2. Stop media services.

```
CLI> conf system ipmedia stop
updated- This action can take a few minutes to complete. Please wait.
```

The updated message is displayed and indicates that the command has been accepted.

Stopping the media services results in a number of events being generated by the system and displayed to any user logged on the CLI (these include system events). Shutdown event notification messages are displayed. Once the media services are stopped, the following message is displayed:

```
ipmedia stop complete
```

Continue with any additional configuration procedures that are applicable to your system. When you are satisfied with all configuration information, proceed with [Section 6.10, “Restarting Media Services”](#), on page 59.

6.5 Configuring Start Mode for Media Services

You can specify whether the `dlstart` command starts the system in manual mode or in automatic mode.

Manual mode starts all Dialogic® services but doesn't start media services. Automatic mode starts all Dialogic services **and** media services. The default mode on Dialogic® Multimedia Kit for PCIe is manual. The default mode on Dialogic HMP Software 3.1LIN is automatic. The default mode on Dialogic HMP Software 4.1LIN is manual.

In order to configure most components or subsystems, media services must be stopped. Manual mode allows you to configure components after the Dialogic® software installation is completed. This avoids the added step of stopping media services. Once the initial configuration is completed, you may choose to set start mode for media services to automatic.

To configure the start mode for media services, enter the following command, where valid values are `auto` and `manual`:

```
CLI> conf system ipmedia start-mode <value>
```

For example, to set the start mode to automatic:

```
CLI> conf system ipmedia start-mode auto
```

6.6 Activating a Single License File

This step is typically performed as part of software installation and is described in detail in the software installation guide. It is included here for completeness.

Activate the verification license supplied with the software or another license you have obtained using this procedure:

1. Verify that the media services and boards are stopped. See [Section 6.4, “Stopping Media Services”](#), on page 45.

2. Get the current license information for your system.

```
show license
```

Information about active license, selected license, license directory, and more is displayed.

3. Specify the path to the license file; that is, the directory where you downloaded the license. The default directory for license files is `/usr/dialogic/data`. If the license file is not found, the message “Entry not found” is returned.

```
conf license directory <license directory>
```

4. Specify the license file name and activate the license. The license will be activated on the next media services restart.

```
conf license activate <license file name>
```

Configuring a license file from the CLI involves the license file validation. It may take a few seconds to complete. Upon successful completion, a message similar to the following is displayed:

```
CLI> License verification is in progress. Please wait
updated - will be effective on the next ipmedia start
```

In case of an invalid license, the following error message is displayed:

```
License activation failed. Reverted to last selected license
```

Continue with any additional configuration procedures that are applicable to your system. When you are satisfied with all configuration information, proceed with [Section 6.10, “Restarting Media Services”](#), on page 59.

6.7 Activating a License File Directory

This section provides license activation procedures for more than one license file found under a directory. Dialogic® Services must be stopped before activating a license. See [Section 6.4, “Stopping Media Services”](#), on page 45.

1. Get the current license information for your system by entering the following command to show the license files:

```
CLI> show license
```

The following information is displayed:

```
Selected License: /usr/dialogic/data/lr1v0e0c0s0f1i_ver.lic
License Type:      Verification
License Category:  Node locked specific
License Seed:      3000000000000
Expiration Date:   permanent
License Options:   RTP_G_711 1, Voice 1, IP_Call_Control 1,
OEM License
Function:
Library:
License Directory: /download/dialogic/license/
File Name:         30r30v30c30i_pur.lic
License Type:      Purchased
License Category:  Node locked specific
Expiration Date:   permanent
License Options:   RTP_G_711 30, Voice 30, Conferencing 30,
IP_Call_Control 30,
File Name:         20r20v20c20i_pur.lic
License Type:      Purchased
License Category:  Node locked heb
Expiration Date:   permanent
License Options:   RTP_G_711 20, Voice 20, Conferencing 20,
IP_Call_Control 20,
```

Configuration Procedures Using CLI

```
File Name:          ALL
License Type:       Purchased
License Category:   Node locked heb
Expiration Date:    permanent
License Options:    RTP_G_711 50, Voice 50, Conferencing 50,
IP_Call_Control 50, (estimated)
HMP and HMP Interface Boards
Serial Number:      LK333333
Description:        Host Media Processor
```

Note: See the special license file named “ALL”. This special license file enables you to choose all license files found in the current license directory. The sum of all features found is used. The “ALL” file name will only appear if all license files are of the same category and are all purchased files. Also, the license files must be HMP 4.1LIN license files

2. At the CLI prompt, enter the following command to activate all license files found in the license directory. For example:

```
CLI> conf license activate ALL
CLI>
```

Configuring a license file from the CLI involves the license file validation. It may take a few seconds to complete. Upon successful completion, a message similar to the following is displayed:

```
CLI>License verification is in progress. Please wait
updated - will be effective on the next ipmedia start"
```

In case of an invalid license, the following error message is displayed:

```
"License activation failed. Reverted to last selected license"
```

To view the current selected license file name, enter the command:

```
CLI> show license
```

3. When you are satisfied with all configuration information, proceed with the section [Section 6.10, “Restarting Media Services”](#), on page 59.

6.8 Configuring Dialogic® MMA Boards

For systems that contain Dialogic® Multimedia Accelerator Boards for PCIe (MMA Boards), additional procedures may be applicable as follows:

- [Selecting an Ethernet Interface](#)
- [Setting the IP Address for Each DSP](#)
- [Configuring the Switch Port Interfaces](#)
- [Configuring the Ethernet Interface](#)

6.8.1 Selecting an Ethernet Interface

The MMA Board provides two ethernet interfaces. The ethernet interfaces are configured by operating system commands (such as `ifconfig`) after the board is installed. By default, one ethernet interface is selected for use by the software. This ethernet interface is the one that is visible from the host OS to the DSPs on the MMA Board. It is also referred to as the media interface or “ethY” in the Software Installation Guide.

Note: The selected ethernet interface must be on the same subnet as the DSPs on the MMA Board; see [Section 6.8.2, “Setting the IP Address for Each DSP”](#), on page 49.

Follow this procedure to select an ethernet interface:

1. Verify that the media services and boards are stopped. See [Section 6.4, “Stopping Media Services”](#), on page 45.

2. Get the device ID for the MMA Board.

```
CLI> show hardware
```

Information about Dialogic® devices is displayed including device ID, technology, device name, slot ID, and more.

3. Get the current settings for the MMA Board.

```
CLI> show hardware mma
```

Information about ethernet interfaces, DSP interfaces, switch ports, and more is displayed. The ethernet interface name is also displayed; this name is assigned by the operating system during MMA Board installation and is used in [Step 4](#).

4. Select an ethernet interface to be used.

```
CLI> conf hardware mma <devID> interface-select <interfaceName>
```

Example:

```
CLI> conf hardware mma 1 interface-select eth2
```

This example selects eth2 as the ethernet interface to be used.

Continue with any additional configuration procedures that are applicable to your system. When you are satisfied with all configuration information, proceed with [Section 6.10, “Restarting Media Services”](#), on page 59.

6.8.2 Setting the IP Address for Each DSP

An MMA Board has two or four DSPs depending on the model. Default IP addresses are provided for each DSP on the MMA Board.

Note: The DSPs on the MMA Board must be on the same subnet as the selected ethernet interface; see [Section 6.8.1, “Selecting an Ethernet Interface”](#), on page 49.

Configuration Procedures Using CLI

Follow this procedure to modify the default IP address for each DSP to fit your network layout.

1. Verify that the media services and boards are stopped. See [Section 6.4, “Stopping Media Services”](#), on page 45.

2. Get the device ID for the MMA Board.

```
CLI> show hardware
```

Information about Dialogic® devices is displayed including device ID, technology, device name, slot ID, and more.

3. Get the current settings for the MMA Board.

```
CLI> show hardware mma
```

Information about ethernet interfaces, DSP interfaces, switch ports, and more is displayed. The current IP address for each DSP is also displayed.

4. Specify the IP address for each DSP on the MMA Board to fit your network layout.

```
CLI> conf hardware mma <devID> dsp <dspID> ipaddress <ipaddress>
```

For boards with two DSPs, available DSP IDs are 0 to 1. For boards with four DSPs, available DSP IDs are 0 to 3.

Example:

```
CLI> conf hardware mma 1 dsp 0 ipaddress a.b.c.d
```

5. Repeat [Step 4](#) to modify the IP address for each DSP on the MMA Board.

Continue with any additional configuration procedures that are applicable to your system. When you are satisfied with all configuration information, proceed with [Section 6.10, “Restarting Media Services”](#), on page 59.

6.8.3 Configuring the Switch Port Interfaces

The MMA Board provides two switch ports which are connected to Ethernet Connector 1 and Ethernet Connector 2 on the rear bracket. (On the rear bracket, these ports are labeled ETH1 and ETH2. Do not confuse these ports with the ethernet interfaces discussed in [Section 6.8.1, “Selecting an Ethernet Interface”](#), on page 49.) By default, one switch port is chosen by the software to be enabled.

Each switch port interface is paired with an ethernet interface (see [Section 6.8.1, “Selecting an Ethernet Interface”](#), on page 49). The first switch port is paired with the first ethernet interface. The second switch port is paired with the second ethernet interface.

For example, to use the first switch port (Port ID 1), set its adminstatus to UP (enabled), and make sure the first ethernet interface (MAC ID 1) is selected. Similarly, to use the second switch port (Port ID 2), set its adminstatus to UP (enabled), and make sure the second ethernet interface (MAC ID 2) is selected.

Follow this procedure to configure the adminstatus for a switch port:

1. Verify that the media services and boards are stopped. See [Section 6.4, “Stopping Media Services”](#), on page 45.

2. Get the current settings for the MMA Board.

```
CLI> show hardware mma
```

Information about ethernet interfaces, DSP interfaces, switch ports, and more is displayed.

3. Set the adminstatus for a switch port. Values for adminstatus are UP (enable the device for use) and DOWN (disable the device). Available switch port IDs are 1 to 2.

```
CLI> conf hardware mma <devID> switchport <portID> adminstatus  
<up/down>
```

Example:

```
CLI> conf hardware mma 1 switchport 2 adminstatus up
```

Continue with any additional configuration procedures that are applicable to your system. When you are satisfied with all configuration information, proceed with [Section 6.10, “Restarting Media Services”](#), on page 59.

6.8.4 Configuring the Ethernet Interface

If you are not using the default configuration for the ethernet interface (“ethY”) and DSPs as described in the Software Installation Guide, you may need to configure the ethernet interface to the MMA Board. This ethernet interface is the one that is visible from the host OS to the DSPs on the MMA Board.

Follow this procedure to modify the default IP address for the ethernet interface to fit your network layout.

1. Verify that the media services and boards are stopped. See [Section 6.4, “Stopping Media Services”](#), on page 45.

2. Get the current settings for the MMA Board.

```
CLI> show hardware mma
```

Information about ethernet interfaces, DSP interfaces, and more is displayed. The current IP address for the ethernet interface selected is also displayed.

3. Specify the IP address for the ethernet interface as entered during the OS installation.

```
CLI> conf system hmp-rtp-address <IP address>
```

Note: The ethernet interface and the DSPs on the MMA Board must be on the same subnet.

Continue with any additional configuration procedures that are applicable to your system. When you are satisfied with all configuration information, proceed with [Section 6.10, “Restarting Media Services”](#), on page 59.

6.9 Configuring Dialogic® HMP Interface Boards

For systems that contain Dialogic® HMP Interface Boards (Dialogic® DNI boards), additional procedures may be applicable as follows:

- [Configuring PSTN Network Interfaces](#)
- [Configuring the TDM Bus](#)
- [Configuring System-Level Bridging and Streaming](#)
- [Configuring Device-Level Bridging and Streaming](#)
- [Configuring Status Change Events on a Trunk](#)

6.9.1 Configuring PSTN Network Interfaces

Follow this procedure to configure PSTN network interfaces for Dialogic® HMP Interface Boards:

1. Verify that the media services and boards are stopped. See [Section 6.4, “Stopping Media Services”](#), on page 45.

Note: You can configure PSTN network interface settings while media services are active. The configuration is **updated**; however, the configuration is only **applied** (1) after media services are stopped, (2) the **conf system pstn apply** command is issued (see [Step 6](#)), and (3) media services are restarted. Thus, it is recommended that you stop media services before performing the procedure.

2. Get the device ID for the hardware in your system.

```
CLI> show hardware
```

Information about Dialogic® devices is displayed including device ID, technology, device name, slot ID and more.

3. Get the current settings for the PSTN network interfaces.

```
CLI> show hardware pstn
```

Information about device ID, trunk ID, interface ID, protocol, and more is displayed.

4. Modify a current PSTN network interface setting for a specific device and trunk; for example, modify protocol.

Note: This step must be repeated for each trunk; entering a range of trunk IDs is not allowed.

Depending on the board, you may assign the same protocol or different protocols to each trunk on the board, with some limitations.

For the Dialogic® DNI/310TEPEHMP and DNI/300TEPHMP boards, you may assign an ISDN protocol or the CAS protocol to the trunk.

For the Dialogic® DNI/610TEPEHMP, DNI/1210TEPEHMP, and DNI/1200TEPHMP boards, you may assign an ISDN protocol or the CAS protocol to any trunk.

For the Dialogic® DNI/601TEPHMP board, you may assign an ISDN, CAS, or R2MF protocol to either trunk.

See [Protocol Guidelines for Dialogic® DNI/2410TEPEHMP Boards](#) for specific protocol support on the DNI/2410TEPEHMP boards.

```
CLI> conf hardware pstn <device ID> <trunk ID> protocol <protocol value>
```

You can leave out the <protocol value> to display all supported protocols. Sample command and sample output are:

```
CLI> conf hardware pstn 2 1 protocol
missing option - expected

<integer>          1 - 4ESS
<integer>          2 - 5ESS
<integer>          3 - CAS
<integer>          4 - DMS
<integer>          5 - E1CC
<integer>          6 - NET5
<integer>          7 - NI2
<integer>          8 - NTT
<integer>          9 - QSIG1
<integer>         10 - QSIG1
<integer>         11 - R2MF
<integer>         12 - T1CC
<integer>         13 - DASS2
<integer>         14 - DPNSS
```

The following example sets the protocol for device 2 trunk 1 to QSIG1 (9).

```
CLI> conf hardware pstn 2 1 protocol 9
updated
```

The updated message is displayed.

5. Verify the new settings.

```
CLI> show hardware pstn
```

Information about device ID, trunk ID, interface ID, protocol, and more is displayed in two columns: User Defined Table and Resolved Table. The protocol value will show QSIG1 (the value “9” is translated) in the User Defined Table and 4ESS (the value “1” is translated) in the Resolved Table. The user defined value takes effect after the setting has been applied.

Configuration Procedures Using CLI

6. Apply the new settings. This step validates that the protocol is supported on this board. The setting takes effect on the next media services restart.

```
CLI> conf system pstn apply
updated
```

7. Verify that the User Defined Table and Resolved Table values match, indicating that the new value has been applied.

```
CLI> show hardware pstn
```

Information about device ID, trunk ID, interface ID, protocol, and more is displayed in two columns: User Defined Table and Resolved Table. In this example, after you have restarted media services, the protocol value will show QSIG1 (the value “9” is translated) in the User Defined Table and QSIG1 (the value “9” is translated) in the Resolved Table. Any errors are displayed in the Error Description for each device.

8. Repeat steps 4 through 7 for each PSTN network interface setting to be modified.

Protocol Guidelines for Dialogic® DNI/2410TEPEHMP Boards

The protocols supported on the DNI/2410TEPEHMP are as follows (the protocols are shown as “Group 1” and “Group 2”, which is explained below):

Group 1 Protocol Values	Group 2 Protocol Values
4ESS (T1)	DPNSS (E1)
5ESS (T1)	DASS2 (E1)
CAS (T1)	
DMS (T1)	
NI2 (T1)	
NTT (T1)	
QSIG1 (T1)	
T1CC (T1)	
E1CC (E1)	
NET5 (E1)	
QSIG1 (E1)	

You may assign the same protocol or different protocols to each trunk on the board, providing they all belong to the same group (Group 1 or Group 2). Within the same group, you may assign the same protocol or different protocols to each trunk on the board, but all of the protocols on trunks 1-4 must be of the same line type (T1 or E1), and all of the protocols on trunks 5-8 must have the same line type.

The FCD file, PCD file, and media load values are updated appropriately after you configure the protocol for the PSTN network interface.

Continue with any additional configuration procedures that are applicable to your system. When you are satisfied with all configuration information, proceed with [Section 6.10, “Restarting Media Services”](#), on page 59.

6.9.2 Configuring the TDM Bus

Follow this procedure to modify default values for the TDM bus:

1. Verify that the media services and boards are stopped. See [Section 6.4, “Stopping Media Services”](#), on page 45.

2. Get the device ID for the hardware in your system.

```
CLI> show hardware
```

Information about Dialogic® devices is displayed including device ID, technology, device name, slot ID and more.

3. Get the current settings for the TDM bus.

```
CLI> show system tdmbus
```

Information about primary line, primary board, secondary board, clock source, and more is displayed. For the initial configuration, this command shows the default settings such as primary line type (CTA), primary line clock source (NetRef), and net reference clock speed (8 kHz).

4. Modify a current TDM bus setting for a specific device and trunk; for example, modify primary board to be device ID 3.

```
CLI> conf system tdmbus primary-board 3  
updated
```

The `updated` message is displayed. The setting takes effect on the next media services restart.

As another example, modify TDM bus primary clock source to line B (2).

```
CLI> conf system tdmbus primary-line-clock 2  
updated
```

The `updated` message is displayed. The setting takes effect on the next media services restart.

5. Repeat step 4 as needed to modify other TDM bus parameters.

6. Verify the new settings.

```
CLI> show system tdmbus
```

Continue with any additional configuration procedures that are applicable to your system. When you are satisfied with all configuration information, proceed with [Section 6.10, “Restarting Media Services”](#), on page 59.

6.9.3 Configuring System-Level Bridging and Streaming

Dialogic® HMP Interface Boards have a bridge device that enables communication and media streaming between Dialogic® HMP software and the boards on the CT Bus. The **conf hardware bridge sys** command is used to set bridging and streaming characteristics at the system level, while the **conf hardware bridge dev** command is used to set bridging and streaming characteristics at the board (device) level. The media stream connections are managed by the bridge controller.

Follow this procedure to modify default values for bridging and streaming at the system level:

1. Verify that the media services and boards are stopped. See [Section 6.4, “Stopping Media Services”](#), on page 45.

2. Get the current settings for bridging and streaming.

```
CLI> show hardware bridge
```

Information about system-level and device-level bridging is displayed.

3. If desired, modify the idle pattern for system A-law that applies equally to all system TDM buses (CT bus and Dialogic® HMP software soft CT bus). While these are not configured directly for bridge devices, this information is included as part of the configuration that is forwarded on to the bridge device during the startup process and must be provided to the bridge controller in the same manner.

```
CLI> conf hardware bridge sys a-law
```

Valid values: 84, 85, 213. Default is 84.

4. If desired, modify the idle pattern for system mu-law that applies equally to all system TDM buses (CT bus and Dialogic® HMP software soft CT bus). While these are not configured directly for bridge devices, this information is included as part of the configuration that is forwarded on to the bridge device during the startup process and must be provided to the bridge controller in the same manner.

```
CLI> conf hardware bridge sys mu-law
```

Valid values: 127, 255. Default is 127.

5. If desired, modify the number of hold buffers used by the host streaming interface. The greater the number of hold buffers specified, the greater the round trip media stream latency incurred between the host and the board.

```
CLI> conf hardware bridge sys nbrhsi-buffer
```

Valid values: 3 to 32. Default is 3.

6. Verify the new settings.

```
CLI> show hardware bridge
```

Continue with any additional configuration procedures that are applicable to your system. When you are satisfied with all configuration information, proceed with [Section 6.10, “Restarting Media Services”](#), on page 59.

6.9.4 Configuring Device-Level Bridging and Streaming

Dialogic® HMP Interface Boards have a bridge device that enables communication and media streaming between Dialogic® HMP software and the boards on the CT Bus. The **conf hardware bridge sys** command is used to set bridging and streaming characteristics at the system level, while the **conf hardware bridge dev** command is used to set bridging and streaming characteristics at the board (device) level. The media stream connections are managed by the bridge controller.

Follow this procedure to modify default values for bridging and streaming per device:

1. Verify that the media services and boards are stopped. See [Section 6.4, “Stopping Media Services”](#), on page 45.

2. Get the current settings for bridging and streaming.

```
CLI> show hardware bridge
```

Information about system-level and device-level bridging is displayed.

3. If desired, modify the setting for bridge device enabled or disabled.

```
CLI> conf hardware bridge dev <device ID> dev-enable <value>
```

Valid values: 1 (enabled), 2 (disabled). Default is enabled.

4. If desired, modify the setting for Dialogic® HMP software Clock Master Fallback number (user-defined) of the bridge device. The bridge device assigned the lowest number is the primary master. The bridge device assigned the next lowest number is the secondary master, and so on. The user defined (requested) fallback numbers are sent to the bridge controller. Since duplicates are allowed in the fallback number, the actual fallback number assigned (resolved) by the bridge controller may not be the same as the requested one. The assigned fallback number is called “Resolved”.

```
CLI> conf hardware bridge dev <device ID> nbr-usrdef <value>
```

Valid values: 0 to 15. Default is 3.

The setting for the Dialogic® HMP software Clock Master Fallback number (resolved) of the bridge device is updated to reflect the resolved fallback number. The resolved setting cannot be modified directly.

5. When using transparent data routing for 3G-324M, modify the **maximum board to host data streams** to suit your needs. This parameter specifies the maximum number of data streams from the board to the host for the device.

```
CLI> conf hardware bridge dev <device ID> bh-datastreams <value>
```

Valid values: 0, 1, 2, 4, 8, 16, 32, 64, 96, 124, 155, 186, 217, 248, 253, 255, 372, 496.

Default value is 0.

Note: The values 372 and 496 are not currently supported.

Note: The data streams value combined with the associated voice streams value (in [Step 6](#)) must not exceed the maximum streams for the device. For Dialogic® DNI boards (Universal PCI form factor), the maximum streams value is 253. For Dialogic® DNI

Configuration Procedures Using CLI

boards (PCI Express form factor), the maximum streams value is 255. For example, for DNI/2410TEPEHMP, if bh-datastreams=0, bh-voicestream must not exceed 255; if bh-datastreams=127, bh-voicestream must not exceed 128.

6. When using transparent data routing for 3G-324M, modify the **maximum board to host voice streams** to suit your needs. This parameter specifies the maximum number of voice streams from the board to the host for the device.

```
CLI> conf hardware bridge dev <device ID> bh-voicestream <value>
```

Valid values: 0, 1, 2, 4, 8, 16, 32, 64, 96, 124, 155, 186, 217, 248, 253, 255, 372, 496.

Default value for Dialogic® DNI boards, Universal PCI form factor: 253.

Default value for Dialogic® DNI boards, PCI Express form factor: 255.

Note: See notes in [Step 5](#) on maximum streams for the device.

7. When using transparent data routing for 3G-324M to suit your needs, modify the **maximum host to board data streams**. This parameter specifies the maximum number of data streams from the host to the board for the device.

```
CLI> conf hardware bridge dev <device ID> hb-datastreams <value>
```

Valid values: 0, 1, 2, 4, 8, 16, 32, 64, 96, 124, 155, 186, 217, 248, 253, 255, 372, 496.

Default value is 0.

Note: The values 372 and 496 are not currently supported.

Note: The data streams value combined with the associated voice streams value (in [Step 8](#)) must not exceed the maximum streams for the device. For Dialogic® DNI boards (Universal PCI form factor), the maximum streams value is 253. For Dialogic® DNI boards (PCI Express form factor), the maximum streams value is 255. For example, for DNI/2410TEPEHMP, if hb-datastreams=0, hb-voicestream must not exceed 255; if hb-datastreams=127, hb-voicestream must not exceed 128.

8. When using transparent data routing for 3G-324M to suit your needs, modify the **maximum host to board voice streams**. This parameter specifies the maximum number of voice streams from the host to the board for the device.

```
CLI> conf hardware bridge dev <device ID> hb-voicestream <value>
```

Valid values: 0, 1, 2, 4, 8, 16, 32, 64, 96, 124, 155, 186, 217, 248, 253, 255, 372, 496.

Default value for Dialogic® DNI boards, Universal PCI form factor: 253.

Default value for Dialogic® DNI boards, PCI Express form factor: 255.

Note: See note in [Step 7](#) on maximum streams for the device.

9. Verify the new settings. The setting takes effect on the next media services restart.

```
CLI> show hardware bridge
```

Note: The voice and data streams parameters mentioned in [Step 5](#) through [Step 8](#) are used to support transparent data routing. For more information on transparent data routing, see [Section 3.5](#), “Transparent Data Routing for 3G-324M”, on page 25.

Continue with any additional configuration procedures that are applicable to your system. When you are satisfied with all configuration information, proceed with [Section 6.10, “Restarting Media Services”](#), on page 59.

6.9.5 Configuring Status Change Events on a Trunk

The DS1 adaptor sends an event each time the status of a DS1 trunk changes. Examples of status changes include near end loss of signal, red alarm, and yellow alarm. If needed, you can disable these events.

Note that the DS1 adaptor disables status change events automatically when a trunk is in a bad state. The bad state thresholds are 50 line state toggles on a trunk or 50 instances of at least one active alarm during state changes. The DS1 adaptor generates an event to indicate that state change events are disabled on a trunk. The alarm trap state changes from user defined to threshold exceeded.

When status change events are disabled due to the threshold exceeded condition, status change events are re-enabled on the next media services startup.

Follow this procedure to enable or disable status change events on a trunk. The default setting is enabled.

1. Get the trunk ID and check the alarm trap status.

```
CLI> show interface ds1
```

Information about DS1 is displayed including alarm trap (enabled or disabled) and alarm trap last change reason (user defined or threshold exceeded).

2. Disable line status change events on the specified trunk, such as trunk 1.

```
CLI> conf interface ds1 1 no alarmtrap
```

To enable line status events on trunk 1, specify:

```
CLI> conf interface ds1 1 alarmtrap
```

The change takes effect immediately. An event is generated each time the alarm trap status is changed.

6.10 Restarting Media Services

Media services, which include boards, must be stopped before performing any configuration procedures. To activate new configuration settings, restart media services.

Follow this procedure to restart media services:

1. Get the system run status found in the system group. Verify that the run status is inactive.

```
CLI> show system
```

Configuration Procedures Using CLI

2. Start media services.

```
CLI> conf system ipmedia start  
updated
```

The updated message is displayed and indicates that the command has been accepted.

Starting or restarting the media services results in a number of events being generated by the system and displayed to any user logged on the CLI (these include system events). Restart event notification messages are displayed. Once the media services are started, the following message is displayed:

```
ipmedia start complete
```

This chapter provides information about using the Simple Network Management Protocol (SNMP) agent software for local or remote monitoring and configuration of the Dialogic® system software and hardware. It is assumed that the reader of this chapter has SNMP knowledge:

- [SNMP Overview](#) 61
- [MIBs](#) 62
- [System Requirements](#) 64
- [Starting and Stopping the SNMP Agent](#) 66
- [Username and Password](#) 67
- [Troubleshooting](#) 68


7.1 SNMP Overview

SNMP is a standard IP network management mechanism for exchanging management information between SNMP agents that typically reside on a managed device. The main job of SNMP is to manage network devices.

The SNMP agent provides remote (or local) monitoring and configuration. There are two types of security that the SNMP agent is governed by, namely, V2 and V3 securities. Security is discussed in [Section 7.5, “Username and Password”](#), on page 67.

Figure 2 shows the three types of SNMP users that exist in the SNMP framework: craftsperson, administrator, and account manager. These various user roles are covered in [Section 7.5, “Username and Password”](#), on page 67. It also shows that the SNMP framework relies on the IP network and therefore, the network has to be properly set up before using SNMP.

Figure 2. General SNMP Architecture

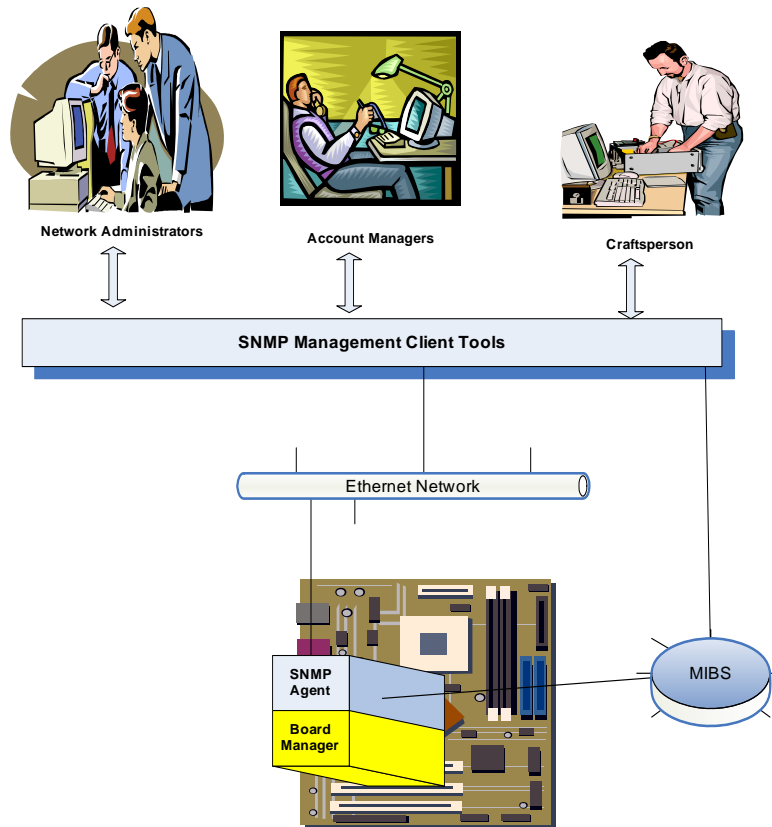

7.2 MIBs

This section lists, defines, and gives the location of the supported MIBs. For specific information about each MIB, refer to the MIBs reference in [Chapter 8, “SNMP MIB Reference”](#).

A MIB is a specification containing definitions of management information so that networked systems can be remotely monitored, configured, and controlled.

A MIB resides on a managed node. The MIB definition sets the limits on what can be managed. The MIB defines which variables or parameters will be accessed, as well as how each value will be identified, encoded, and interpreted. A MIB contains objects (units of management information) divided into scalars and tables, which are identified by object identifiers (OIDs). These objects are exchanged between the managed node and the SNMP manager. Each MIB defines three types of OIDs: read-only OID, read-write OID, and traps.

MIBs can be either private (enterprise) MIBs or public (standard) MIBs. SNMP agent software currently supports both public and private MIBs. You can find all supported MIBs in the following directory in a given system: `/usr/dialogic/mibs/`.

Note: Any public MIB can be obtained from the Internet or other sources. Public MIBs have been included in the MIB directory as a convenience. Also, note that all groups in a given MIB module may not be fully supported. For more information, see the MIBs reference in [Chapter 8, “SNMP MIB Reference”](#).

Table 7 lists the MIB modules that the SNMP agent software supports. The table does not include all the MIB modules that are included by the described MIB files. For all MIBs, view `/usr/dialogic/mibs/`.

Table 7. Supported MIBs

MIB Module	File Name (<code>/usr/dialogic/mibs</code>)	Private/ Public	Description
AGENT-CONFIG-MIB	AGENT-CONFIG-MIB.mib	Public	Trap sink configuration
AGENT-SNMP-CONFIG-MIB	AGENT-SNMP-CONFIG-MIB.mib	Public	Trap sink configuration
RFC1213	RFC1213-MIB.mib	Public	MIB-2 - IP based information
RFC2495	RFC2495DS1-MIB.mib	Public	DS1 trunks
snmpUsmMIB	SNMP-USER-BASED-SM-MIB.mib	Public	SNMP V3 Security - user authentication
snmpVacmMIB	SNMP-VIEW-BASED-ACM-MIB.mib	Public	SNMP V3 Security- user authorization.
DLGC-GLOBAL-REG	DLGC-GLOBAL-REG.mib	Private	Identifiers' branch typically contains objects. Use for setting OID branch.
Dialogic-Prod-Tel-MediaServer-Root	Dialogic-Prod-Tel-MediaServer-Root.mib	Private	Identifiers' branch typically contains objects
ipmsBridge	ipms-bridge.mib	Private	Configuration and status information for bridging and streaming
ipmsctBus	ipms-ct-bus.mib	Private	Configuration of TDM bus; device list information
ipmsExtIf	ipms-ext-if.mib	Private	Configuration and status information for all other types of connections not covered by standard publicly defined MIB, such as interface IP address assignment
ipmsHwDev	ipms-hardware-dev.mib	Private	Media service related hardware information and configuration
ipmsHwDM3Dev	ipms-hardware-dm3-dev.mib	Private	Dialogic® DM3 device information and configuration
ipmsHwDM3Trunk	ipms-hardware-dm3trunk.mib	Private	Media service related DM3 trunk information and configuration
ipmsHwMMADev	ipms-hardware-mm-dev.mib	Private	Dialogic® Multimedia Accelerator Boards for PCIe (MMA Boards) device information and configuration
ipmsLicense	ipms-license.mib	Private	IP media server license information and configuration

Table 7. Supported MIBs (Continued)

MIB Module	File Name (/usr/dialogic/mibs)	Private/ Public	Description
ipmsMediaCtlProtocol	ipms-media-ctl-protocol.mib	Private	IP media server protocol control information and configuration
ipmsRtpCfg	ipms-rtp-cfg.mib	Private	RTP information and configuration
ipmsSysEnv	ipms-sys-env.mib	Private	Configuration of the IP media server environment variable and media process control

7.3 System Requirements

This section lists the software requirements for using the SNMP agent with the Dialogic® software release. It mainly concentrates on the SNMP client requirements for the management side.

There are two ways to manage the system:

- First, you can manage the system using SNMP client tools. Since SNMP supports remote management, the client manager station exists as separate computer equipment, and the SNMP client tools must be installed in this equipment.
- Second, you can use Secure Shell (ssh) program to log in to the system and execute SNMP command line interface (CLI). This approach may not be suitable for managing a system that includes multiple Dialogic® DNI boards since the ssh operation is required for each managed board. Nevertheless, for managing a board at a time, this approach can be used.

7.3.1 Requirements for Remote Management Stations

The Remote Management Station can be based on either Linux/Unix or Windows® operating system. However, this document focuses on the Linux OS.

If you already have a management SNMP platform, such as your own browsers and SNMP development environment, then you need only load the appropriate Dialogic® software release MIBs. This can be done by either copying the MIBs from the distribution or from the */usr/dialogic/mibs* directory after the Dialogic® software has been installed.

If the Remote Management Station does not contain any SNMP client support, there are many possibilities for purchasing a commercial toolset or obtaining a free version. For example, the Net-SNMP client library is freely available from Open Source and can be downloaded from <http://net-snmp.sourceforge.net/>. Some SNMP management commercial tools include AdventNet (<http://www.adventnet.com/>), HP Openview (<http://h20229.www2.hp.com>), and MG-Soft (<http://www.mg-soft.com>).

These are only potential approaches; there are no restrictions imposed in the selection of any SNMP client toolset. Note that many Linux operating systems already come with the Net-SNMP toolset.

Basic SNMP Client Toolset

A basic SNMP client toolset (or libraries) is composed of the following:

- MIB compiler
- SNMP library such as C/Java binding. These libraries can be used for writing client management applications using the given APIs.
- A set of command line tools such as get, sets, table gets, and trap manager. These command line tools are simple client executables that can be easily called from either the command line or can be embedded in a script language to build very powerful remote or local configuration scripts.
- Other tools may offer GUIs such as SNMP browsers and trap displays.

Examples of SNMP Client Toolsets

The free Net-SNMP is an example of an available client toolset and contains only the following:

- MIB compiler
- SNMP library such as C binding. These libraries can be used for writing client management applications using the given APIs.
- Command line tools

For the Red Hat Advance Server libraries, only the following SNMP client libraries are needed (any version greater than 5.1 is acceptable):

- net-snmp-libs-5.1.2-11.EL4.6
- net-snmp-5.1.2-11.EL4.6

In addition, you will need to build the following Net-SNMP CLI clients. This SNMP CLI allows you to script configuration.

- snmpbulkget
- snmpget
- snmpset
- snmptable
- snmptranslate
- snmptrapd
- snmpvacm
- snmpbulkwalk
- snmpdf
- snmpgetnext
- snmpstatus
- snmptest
- snmptrap
- snmpusm

- [snmpwalk](#)

Consult the Net-SNMP site for obtaining the libraries and the Net-SNMP CLI.

7.3.2 Requirements for Local Managed Nodes

Net-SNMP client libraries are required to use the SNMP CLI. You must install the OS; therefore, you also must install the Net-SNMP client environment.

7.4 Starting and Stopping the SNMP Agent

This section describes how to stop and start the SNMP agent software independently from the media application software, and also includes other related topics.

- [Stopping the SNMP Agent](#)
- [Starting the SNMP Agent](#)
- [Changing the SNMP Listening Port](#)
- [Changing the Trap Listening Port](#)

7.4.1 Stopping the SNMP Agent

The SNMP agent software is automatically started at system reboot and when the media application software suite is started using **dlstart**. It is automatically stopped when the media application suite is terminated using **dlstop**. You can bring the SNMP agent up and down as often as needed while the Dialogic® software is up.

Use the **dlservices** command to stop the SNMP agent:

```
# dlservices snmp stop
Shutting SNMP Agent Service : [ OK ]
```

7.4.2 Starting the SNMP Agent

To restart the SNMP agent, use the **dlservices** command:

```
# dlservices snmp start
Starting SNMP Agent Service : [ OK ]
```

7.4.3 Changing the SNMP Listening Port

The default SNMP listening port is 161. It can be changed during the software installation process. To change it at any other time, use **dlservices**. For example:

```
# dlservices snmp port 2005
```

This changes the SNMP listening port to the specified port, 2005 in this example. (Typically ports 1-2000 are for system use.) Port changes take effect on the next **dlstart** or **dlservices snmp start**.

Note: No range checking is done, so you are responsible for providing a usable address for the SNMP listening port if you are not using the default address.

7.4.4 Changing the Trap Listening Port

The default trap listening port is 162. To change this port, use the **dlservices** command:

```
# dlservices snmp trapport <value>
```

7.5 Username and Password

The SNMP agent handles both SNMP protocol Version 1/2c and Version 3. The Dialogic® system software has been preconfigured with various default users and passwords.

The following subsections explain each default user role and the respective username and passwords. Username and passwords can be changed, added, and deleted.

- [SNMP Version 1 and 2c](#)
- [SNMP Version 3](#)

7.5.1 SNMP Version 1 and 2c

When using SNMP version 1 or 2c, the following SNMP User Community exists (Table 8).

Table 8. Version 1 and 2c Community Names

Community Name	Access
Craftsperson	Read only
Administrator	Read and write

7.5.2 SNMP Version 3

When using SNMP version 3, the following SNMP User Roles exist (Table 9).

Table 9. Version 3 Usernames and Passwords

Role	Username	Password	Auth Protocol	Context	Privacy Protocol	Role Description
Account Manager	AccountManager	AccountManager	MD5	auth	none	Allowed to add, delete, and change usernames and passwords. Allowed to add trap sink.
Administrator	Administrator	Administrator	MD5	auth	none	Allowed to read and write all supported MIBs except for Account Manager operations.
Craftsperson	Craftsperson	Craftsperson	MD5	auth	none	Allowed to read all supported MIBs except for Account Manager operations.
Account Manager (SHA)	AccountManagerSHA1	AccountManagerSHA1	SHA	auth	none	Allowed to add, delete, and change usernames and passwords. Allowed to add trap sink.
Administrator (SHA)	AdministratorSHA1	AdministratorSHA1	SHA	auth	none	Allowed to read and write all supported MIBs except for Account Manager operations.
Craftsperson (SHA)	CraftspersonSHA1	CraftspersonSHA1	SHA	auth	none	Allowed to read all supported MIBs except for Account Manager operations.

Note: All users use security level = authNoPriv

7.6 Troubleshooting

System log files store information, warnings, and errors, and are used to help to identify certain system problems. The system log file can be found in the `/var/log/` directory. The `syslogd` service must be running in order for logging to work.

Example of a log message:

```
Jun  2 15:57:35 mymachine Board Manager: From Component: MIB2-OS-Adaptor :
Dsl empty
```

Notice the format of the log message. All messages have the following generic format:

```
<Date> <machine name> <OA&M component> <Error Message>
```

The configuration entries are automatically configured for the system when the Dialogic® software has been properly installed.

This chapter provides reference information about MIB modules that the SNMP agent software supports. It is assumed that the reader of this chapter has SNMP knowledge:

- [SNMP MIB Reference Overview](#) 69
- [Public MIB 2 Module Reference](#). 70
- [Public DS1 Module Reference](#) 71
- [Private Bridge Device Module Reference](#). 72
- [Private CT Bus Device Module Reference](#) 72
- [Private External Interface Module Reference](#) 72
- [Private Hardware Device Module Reference](#) 72
- [Private Hardware DM3 Device Module Reference](#). 73
- [Private Hardware DM3 Trunk Module Reference](#) 73
- [Private Hardware MMA Device Module Reference](#) 73
- [Private License Module Reference](#) 73
- [Private Media Control Protocol Module Reference](#) 73
- [Private RTP Configuration Module Reference](#) 73
- [Private System Environment Module Reference](#). 74

8.1 SNMP MIB Reference Overview

A MIB is a specification containing definitions of management information so that networked systems can be remotely monitored, configured, and controlled.

MIBs can be either private (enterprise) MIBs or public (standard) MIBs. SNMP agent software currently supports both public and private MIBs. The user can find all supported MIBs in the following directory in a given system: `/usr/dialogic/mibs/`.

Note: Any public MIB can be obtained from the Internet or other sources. Public MIBs have been included in the MIB directory as a convenience to the user. Also, note that all groups in a given MIB module may not be fully supported.

For more information about SNMP, see [Chapter 7, “SNMP Basics”](#) and [Chapter 9, “Configuration Procedures Using SNMP”](#).

8.2 Public MIB 2 Module Reference

Table 10 describes which groups in the given MIB modules are implemented, and describes any deviations from the MIB if taken. It serves as the Module Conformance. Each MIB entry is not described because the MIB itself should be self-descriptive.

Table 10. MIB 2 Conformance Table

RFC1213					
MIB Group	MIB Attribute	Read	Write	Supported	Comments
System(1.3.6.1.2.1.1)	sysDesc (1)	Yes	Yes	Yes	
	sysObjectID (2)	Yes	No	Yes	
	sysUpTime (3)	Yes	No	Yes	
	sysContact(4)	Yes	Yes	Yes	
	sysName(5)	Yes	Yes	Yes	
	sysLocation(6)	Yes	Yes	Yes	
	sysServices(7)	Yes	Yes	Yes	
	sysORLastChange(8)	No	No	No	Never supported
	SysORTable(9)	No	No	No	Never supported
interfaces(1.3.6.1.2.1.2)	ifNumber(1)	Yes	No	Yes	
	ifTable(2)	Yes	Yes	Yes	Table has only one write value
	The only column from this table that is writable is ifAdminStatus (.1.7)	Yes	Yes	Yes	
at (1.3.6.1.2.1.3)	Not supported	No	No	No	Deprecated and never supported
ip (1.3.6.1.2.1.4)	ipForwarding(1)	Yes	No	Yes	Write not supported in backend
	ipDefaultTTL(2)	Yes	No	Yes	Write not supported in backend
	ipInReceives(3)	Yes	No	Yes	
	ipInHdrErrors(4)	Yes	No	Yes	
	ipInAddrErrors(5)	Yes	No	Yes	
	ipForwDatagrams(6)	Yes	No	Yes	
	ipInUnknownProtos(7)	Yes	No	Yes	
	ipInDiscards(8)	Yes	No	Yes	
	ipInDelivers(9)	Yes	No	Yes	
	ipOutRequests(10)	Yes	No	Yes	
	ipOutDiscards(11)	Yes	No	Yes	
	ipOutNoRoutes(12)	Yes	No	Yes	
	ipReasmTimeout(13)	Yes	No	Yes	
	ipReasmReqds(14)	Yes	No	Yes	
	ipReasmOKs(15)	Yes	No	Yes	
	ipReasmFails(16)	Yes	No	Yes	
	ipFragOKs(17)	Yes	No	Yes	
	ipFragFails(18)	Yes	No	Yes	

Table 10. MIB 2 Conformance Table (Continued)

RFC1213					
MIB Group	MIB Attribute	Read	Write	Supported	Comments
	ipFragCreates(19)	Yes	No	Yes	
	ipAddrTable (20)	Yes	No	Yes	All cols supported
	ipRouteTable(21)	Yes	No	Yes	Support for table fields is read-only
	ipNetToMediaTable	Yes	No	Yes	Read-only
icmp (1.3.6.1.2.1.5)	All	Yes	No	Yes	All attributes are read-only and all are supported
tcp (1.3.6.1.2.1.6)	All scalar are read only	Yes	No	Yes	
	tcpConnTable(13) - all read is supported	Yes	No	Yes	tcpConnState (13.1.1) write is not supported
udp (1.3.6.1.2.1.7)	All scalar are supported	Yes	No	Yes	
	udpTable (5.1)	Yes	No	Yes	
egp (1.3.6.1.2.1.8)	Not supported	No	No	No	Never, not supported by backend
snmp (1.3.6.1.2.1.11)	All scalar are supported	Yes	No	Yes	

8.3 Public DS1 Module Reference

Table 11 describes which groups in the given MIB modules are implemented, and describes any deviations from the MIB if taken. It serves as the Module Conformance. Each MIB entry is not described because the MIB itself should be self-descriptive.

On Dialogic® HMP software, this MIB module is read only. To configure DS1 information, use the private **ipmsHwDM3Trunk** MIB module.

Table 11. DS1 MIB Conformance Table

Module	MIB Attribute	Read	Write	Supported	Comments
dsx1configTable (1.3.6.1.2.1.10.18.6)	dsx1LineType (.1.5)	Yes	No	Yes	
	dsx1LineCoding(.1.6)	Yes	No	Yes	
	dsx1CircuitIdentifier(.1.8)	Yes	No	Yes	
	dsx1SendCode(1.7)	Yes	No	Yes	
	dsx1LineLength(1.15)	Yes	No	Yes	
	dsx1LoopbackConfig(1.9)	Yes	No	Yes	
	dsx1TransmitClockSource	Yes	No	Yes	
	dsx1CurrentTable(.18.7)	Yes	No	Yes	
	dsx1IntervalTable(18.8)	Yes	No	Yes	
	dsx1IntervalTable(18.9)	Yes	No	Yes	

Table 11. DS1 MIB Conformance Table (Continued)

Module	MIB Attribute	Read	Write	Supported	Comments
	dsx1LineStatusChangeTrapEnable	Yes	No	Yes	
	Not the far ends, and fact tables are not supported	No	No	No	
	Also dsx1ChanMappingTable not supported	No	No	No	

8.4 Private Bridge Device Module Reference

The **ipmsBridge** MIB module describes the configuration and status of the bridge device which is used to stream data between the boards connected to the CT Bus and Dialogic® HMP software. Consult the MIB for specific definitions.

8.5 Private CT Bus Device Module Reference

The **ipmsctBus** MIB module describes the configuration of the TDM bus and device list, including primary line board, primary line clock source, secondary line board, and more. Consult the MIB for specific definitions.

8.6 Private External Interface Module Reference

The **ipmsExtIf** (1.3.6.1.4.1.343.2.15.2.1.3) MIB module allows you to correlate all Ethernet interfaces available in the hardware. Each interface is uniquely identified by its interface index field. The interface index is associated with the MIB 2 interface table.

This MIB module contains two main tables. The **ipmsExtIfEntry** table associates the various types of Ethernet interfaces to their corresponding types. On Dialogic® HMP software, the possible Ethernet type is **baseInterface(1)**.

The other table mainly allows the user to set the Ethernet IP configuration such as IP address and mask.

8.7 Private Hardware Device Module Reference

The **ipmsHwDev** MIB module describes basic hardware device information such as device ID, device name, device type, and device serial number. Consult the MIB for specific definitions.

8.8 Private Hardware DM3 Device Module Reference

The **ipmsHwDM3Dev** MIB module describes DM3 device information such as DM3 device ID, DM3 device logical ID, media load, PCD file, FCD file, and PCM encoding. Consult the MIB for specific definitions.

8.9 Private Hardware DM3 Trunk Module Reference

The **ipmsHwDM3Trunk** MIB module describes network interface information for the DM3 device such as PSTN protocol, line type, and line coding. Consult the MIB for specific definitions.

8.10 Private Hardware MMA Device Module Reference

The **ipmsHwMMADev** MIB module describes device information for Dialogic® Multimedia Accelerator Boards for PCIe (MMA Boards). Device information includes device ID, part number, current temperature, switch port administrative status, DSP IP address, MAC address, and more. Consult the MIB for specific definitions.

8.11 Private License Module Reference

The **ipmsLicense** MIB module describes the IP media server licensing information such as license file directory and license file name. Consult the MIB for specific definitions.

8.12 Private Media Control Protocol Module Reference

The **ipmsMediaCtlProtocol** MIB module describes the IP media server protocol control information such as MSML remote access protocol stack. Consult the MIB for specific definitions.

Note: Future MSML features requiring configuration will not be supported using CLI or SNMP. You will need to manually edit the MSML media server configuration file. For MSML support, see the *MSML Media Server User's Guide*.

8.13 Private RTP Configuration Module Reference

The **ipmsRtpCfg** MIB module describes the configuration of the RTP. Consult the MIB for specific definitions.

8.14 Private System Environment Module Reference

The **ipmsSysEnv** MIB module (1.3.6.1.4.1.343.2.15.2.1.1) contains basic information about the system environment such as the vendor, serial number, form factor, run status, and the attribute to start and stop the media service. Consult the MIB for specific definitions.

Configuration Procedures Using SNMP

9

This chapter describes the procedures in the configuration process when using the Simple Network Management Protocol (SNMP).

- [Assumptions and Prerequisites](#) 75
- [Order of Procedures](#) 76
- [Configuring Traps](#) 77
- [Stopping Media Services](#) 78
- [Configuring Start Mode for Media Services](#) 79
- [Activating a License](#) 79
- [Configuring Dialogic® MMA Boards](#) 80
- [Configuring Dialogic® HMP Interface Boards](#) 82
- [Restarting Media Services](#) 85

9.1 Assumptions and Prerequisites

The following assumptions and prerequisites exist regarding the configuration procedures using SNMP:

- All required software, including prerequisites, have been installed and Dialogic® services have been started according to the procedures in the software installation guide supplied with your release.
- The release was installed in the default directory under INTEL_DIALOGIC_DIR, the environment variable for the directory in which the software is installed. Command instructions, directory paths and environment variable are shown relative to the default installation directory.
- All required Dialogic® hardware has been installed; this can include Dialogic® Multimedia Accelerator Boards for PCIe (MMA Boards) and Dialogic® HMP Interface Boards (Dialogic® DNI boards).
- You have prior knowledge of SNMP and are familiar with SNMP browsers or command line tools.
- You have accessed the SNMP agent and logged in as administrator. For more information on SNMP, see [Chapter 7, “SNMP Basics”](#) and [Chapter 8, “SNMP MIB Reference”](#).
- See [Chapter 2, “Feature Support by Platform”](#) for information on features and boards supported by platform (software release).
- If applicable, the Dialogic® Global Call protocols have been installed. The Dialogic® Global Call protocols are provided as part of the release. For information about country dependent

Configuration Procedures Using SNMP

parameters associated with a protocol, see the *Dialogic® Global Call Country Dependent Parameters (CDP) for PDK Protocols Configuration Guide*.

- Default configuration settings are provided with the software according to the license obtained for your system. Modify these settings as needed to suit your environment.
- When a private SNMP table is changed, for example the **ipmsLicenseFileList** table in the **ipmsLicense** MIB, it may take several seconds for the changes to be reflected in the table.

Note: If a Dialogic® DNI Board or a Dialogic® MMA Board is removed from the system and reinserted, you will need to reconfigure the board using the CLI or SNMP utility.

9.2 Order of Procedures

The following is a suggested order for performing configuration procedures. Procedures that are required when configuring any system are noted as such. Additional procedures may be required depending on your system. A system may consist of Dialogic® Host Media Processing (HMP) Software only or Dialogic® HMP software with Dialogic® HMP Interface Boards (Dialogic® DNI boards).

1. [Configuring Traps](#)
2. [Stopping Media Services \(required\)](#)
3. [Activating a License \(required\)](#)
4. [Configuring Start Mode for Media Services](#)
5. For Dialogic® MMA Boards, these additional procedures are applicable:
 - 5a. [Selecting an Ethernet Interface](#)
 - 5b. [Setting the IP Address for Each DSP](#)
 - 5c. [Configuring the Switch Port Interfaces](#)
 - 5d. [Configuring the Ethernet Interface](#)
6. For Dialogic® DNI boards, these additional procedures are applicable:
 - 6a. [Configuring PSTN Network Interfaces](#)
 - 6b. [Configuring the TDM Bus](#)
 - 6c. [Configuring System-Level Bridging and Streaming](#)
 - 6d. [Configuring Device-Level Bridging and Streaming](#)
7. [Restarting Media Services \(required\)](#)

9.3 Configuring Traps

The purpose of the trap configuration is to register with the SNMP agent all manager stations that are interested in receiving SNMP traps (events).

There are two ways that you can configure the V3 trap forwarding table (the configuration of this table also applies to V1/V2c).

- You can add and remove entries in the `/usr/dialogic/conf/snmp/v3managertable.txt`. This file contains the persistence information that is read by the SNMP agent upon boot up in order to find out the manager stations that have registered for traps.

For example:

```
192.168.99.90 SNMP_VERSION_2c public noAuthUser USM NOAUTHNOPRIV 6
noAuth 5 0 ACTIVE
192.168.99.90 SNMP_VERSION_3 Administrator Administrator USM
NOAUTHNOPRIV 6 noAuth 5 0 ACTIVE
```

Note: Every time you change the `v3managertable.txt` file, the SNMP agent must be restarted in order for the changes to take place. For more information, see [Section 7.4, “Starting and Stopping the SNMP Agent”](#), on page 66.

Note: Make sure that the security values for the trap browser or the Manager Application receiving the trap application, which has been configured to work with SNMP V3, match the V3 user security parameters set in `/usr/dialogic/conf/snmp/v3managertable.txt` file.

- You can manipulate the trap forwarding table using SNMP. In this case, the changes take effect immediately and no restart of the SNMP agent is required.

Supported traps are listed and described in Table 12.

Table 12. Supported Traps

Trap Name	Private/ Public	Description
Dsx1LineStatusChange	Public	Sent when the value of an instance <code>dsx1LineStatus</code> changes. It can be used by a network management system to trigger polls. When the line status change results from a higher level line status change (i.e., <code>ds3</code>), then no traps for the <code>ds1</code> are sent.
coldStart	Public	Signifies that the SNMP entity, supporting a notification originator application, is reinitializing itself and that its configuration may have been altered.
authenticationFailure	Public	Signifies that the SNMP entity has received a protocol message that is not properly authenticated. While all implementations of SNMP entities <i>may</i> be capable of generating this trap, the <code>snmpEnableAuthenTraps</code> object indicates whether this trap will be generated.

Table 12. Supported Traps (Continued)

Trap Name	Private/ Public	Description
ipmsSysEnvRunStatus	Private	Reports the run state of the overall IP Media Server system. The software that comprises the entire IP Media Server is treated as a system. Set to one of the following: ipmsSysEnvStatusUnknown ipmsSysEnvBootingUp ipmsSysEnvStatusInitialize ipmsSysEnvStatusActive ipmsSysEnvStatusInActive ipmsSysEnvStatusFault ipmsSysEnvShutdown Any time there is a state change, an SNMP notification (trap) is sent.
ipmsSysEnvSysReady	Private	Reports when the IPMS application operationally ready is achieved. Sent also as a notification whenever the state changes whether from Active or to Active state. The companion ipmsSysEnvRunStatus should be used by the SNMP client to retrieve a more detailed run status.
ipmsBridgeDeviceNotification	Private	Sent when operational status changes on a bridge device. For example, status changes include starting, started, stopping, stopped, and failed.
ipmsctBusClkNotification	Private	Sent when the TDM bus primary master value changes; for example, on CT_A/B line bad alarm, the previous primary master has stopped providing clock.
ipmsctBusRefClkNotification	Private	Sent when the NetRef provider changes; for example, on LOSS_MASTER_SOURCE_INVALID alarm, the previous NetRef has stopped providing a valid clock source.
ipmsExtIfStatusChangedNotification	Private	Sends an SNMP trap when external interface link status changes (up or down). The SNMP notification message includes an identification of the specific external interface to which the state change applies using the ifIndex value to identify a particular of the ifTable entry.
ipmsTdmClkRefSwitchoverNotification	Private	Sent when clock source switchover situation occurs.
ipmsHwMMADevBoardTempCritical	Private	Sent when a Dialogic® Multimedia Accelerator Board for PCIe (MMA Board) exceeds the critical temperature.
ipmsHwMMADevBoardTempNonRecoverable	Private	Sent when a Dialogic® Multimedia Accelerator Board for PCIe (MMA Board) exceeds the non-recoverable temperature.

9.4 Stopping Media Services

Media services must be stopped before configuring most components or subsystems.

If media services are started, follow this procedure to stop media services (and boards that are enabled) before configuring the system:

1. View the system run status in the **ipmsSysEnv** MIB. Verify that the run status is active.

2. To stop media services, set the **ipmsSysEnvMediaProcCtl** object to **ipmsMediaProcStop** in the **ipmsSysEnv** MIB. If the SNMP client has registered itself to receive traps from the SNMP agent, then the SNMP client should receive the Run Status Trap, which notifies the user that media services have been stopped.

Continue with any additional configuration procedures that are applicable to your system. When you are satisfied with all configuration information, proceed with [Section 9.8.5, “Restarting Media Services”](#), on page 85.

9.5 Configuring Start Mode for Media Services

You can specify whether the `dlstart` command starts the system in manual mode or in automatic mode.

Manual mode starts all Dialogic® services but doesn't start media services. Automatic mode starts all Dialogic services **and** media services. The default mode on Dialogic® Multimedia Kit for PCIe is manual. The default mode on Dialogic HMP Software 3.1LIN is automatic. The default mode on Dialogic HMP Software 4.1LIN is manual.

In order to configure most components or subsystems, media services must be stopped. Manual mode allows you to configure components after the Dialogic® software installation is completed. This avoids the added step of stopping media services. Once the initial configuration is completed, you may choose to set start mode for media services to automatic.

Follow this procedure to configure the start mode for media services:

1. Verify that the media services and boards are stopped; see [Section 9.4, “Stopping Media Services”](#), on page 78.
2. In the **ipmsSysEnv** MIB, set the **ipmsSysEnvMediaProcStartMode** object. Valid values are 1 (automatic) and 2 (manual).

Continue with any additional configuration procedures that are applicable to your system. When you are satisfied with all configuration information, proceed with [Section 9.8.5, “Restarting Media Services”](#), on page 85.

9.6 Activating a License

Follow this procedure to activate a license you have obtained (the verification license supplied with the software is activated by default):

1. Verify that the media services and boards are stopped; see [Section 9.4, “Stopping Media Services”](#), on page 78.
2. In the **ipmsLicense** MIB, specify the path to the license file (that is, the directory where you downloaded the license) in the **ipmsLicenseFileDirectory** object. The default directory for license files is `/usr/dialogic/data`.

Configuration Procedures Using SNMP

3. In the **ipmsLicense** MIB, specify the license file name in the **ipmsLicenseFileSelected** object. The license will be effective on the next media services restart.

Alternatively, the license file also can be changed by setting **ipmsLicenseFileSelect** object to 1 in the **ipmsLicenseFileListEntry** table.

Note: As mentioned in [Section 9.1, “Assumptions and Prerequisites”](#), on page 75, when a private SNMP table is changed, for example the **ipmsLicenseFileList** table, it may take several seconds for the changes to be reflected in the table.

Continue with any additional configuration procedures that are applicable to your system. When you are satisfied with all configuration information, proceed with [Section 9.8.5, “Restarting Media Services”](#), on page 85.

9.7 Configuring Dialogic® MMA Boards

For systems that contain Dialogic® Multimedia Accelerator Boards for PCIe (MMA Boards), additional procedures may be applicable as follows:

- [Selecting an Ethernet Interface](#)
- [Setting the IP Address for Each DSP](#)
- [Configuring the Switch Port Interfaces](#)
- [Configuring the Ethernet Interface](#)

9.7.1 Selecting an Ethernet Interface

The MMA Board provides two ethernet interfaces. The ethernet interfaces are configured by operating system commands (such as `ifconfig`) after the board is installed. By default, one ethernet interface is selected for use by the software. This ethernet interface is the one that is visible from the host OS to the DSPs on the MMA Board. It is also referred to as the media interface or “ethY” in the Software Installation Guide.

Note: The selected ethernet interface must be on the same subnet as the DSPs on the MMA Board; see [Section 9.7.2, “Setting the IP Address for Each DSP”](#), on page 81.

Follow this procedure to select an ethernet interface:

1. Verify that the media services and boards are stopped. See [Section 9.4, “Stopping Media Services”](#), on page 78.
2. In the **ipmsHwMMADev** MIB, modify the selected ethernet interface using **ipmsHwMMADevMacAddrTableEthIf** object for the desired device ID. The change takes effect on the next media services restart.

9.7.2 Setting the IP Address for Each DSP

An MMA Board has two or four DSPs depending on the model. Default IP addresses are provided for each DSP on the MMA Board.

Note: The DSPs on the MMA Board must be on the same subnet as the selected ethernet interface; see [Section 9.7.1, “Selecting an Ethernet Interface”](#), on page 80.

Follow this procedure to modify the default IP address for each DSP to fit your network layout:

1. Verify that the media services and boards are stopped. See [Section 9.4, “Stopping Media Services”](#), on page 78.
2. In the `ipmsHwMMADev` MIB, modify the IP address using `ipmsHwMMADevDspTableIpAddr` object for the desired device ID and DSP ID. The change takes effect on the next media services restart.
3. Repeat [Step 2](#) to modify the IP address for each DSP on the MMA Board.

9.7.3 Configuring the Switch Port Interfaces

The MMA Board provides two switch ports which are connected to Ethernet Connector 1 and Ethernet Connector 2 on the rear bracket. (On the rear bracket, these ports are labeled ETH1 and ETH2. Do not confuse these ports with the ethernet interfaces discussed in [Section 9.7.1, “Selecting an Ethernet Interface”](#), on page 80.) By default, one switch port is chosen by the software to be enabled.

Each switch port interface is paired with an ethernet interface (see [Section 9.7.1, “Selecting an Ethernet Interface”](#), on page 80). The first switch port is paired with the first ethernet interface. The second switch port is paired with the second ethernet interface.

For example, to use the first switch port (Port ID 1), set its adminstatus to UP (enabled), and make sure the first ethernet interface (MAC ID 1) is selected. Similarly, to use the second switch port (Port ID 2), set its adminstatus to UP (enabled), and make sure the second ethernet interface (MAC ID 2) is selected.

Follow this procedure to configure the adminstatus for a switch port:

1. Verify that the media services and boards are stopped. See [Section 9.4, “Stopping Media Services”](#), on page 78.
2. In the `ipmsHwMMADev` MIB, modify the adminstatus (enable/disable) for a switch port using `ipmsHwMMADevSwitchPortTableAdminStatus` object for the desired device ID and switch port ID. The change takes effect on the next media services restart.

9.7.4 Configuring the Ethernet Interface

If you are not using the default configuration for the ethernet interface (“ethY”) and DSPs as described in the Software Installation Guide, you may need to configure the ethernet interface to

Configuration Procedures Using SNMP

the MMA Board. This ethernet interface is the one that is visible from the host OS to the DSPs on the MMA Board.

Follow this procedure to modify the default IP address for the ethernet media interface to fit your network layout.

1. Verify that the media services and boards are stopped. See [Section 9.4, “Stopping Media Services”](#), on page 78.
2. In the **ipmsRtpCfg** MIB using the **ipmsRtpCfgIpAddr** object, specify the IP address for the ethernet interface as entered during the OS installation.

Note: The ethernet interface and the DSPs on the MMA Board must be on the same subnet.

9.8 Configuring Dialogic® HMP Interface Boards

For systems that contain Dialogic® HMP Interface Boards (Dialogic® DNI boards), additional procedures may be applicable as follows:

- [Configuring PSTN Network Interfaces](#)
- [Configuring the TDM Bus](#)
- [Configuring System-Level Bridging and Streaming](#)
- [Configuring Device-Level Bridging and Streaming](#)

9.8.1 Configuring PSTN Network Interfaces

Follow this procedure to configure PSTN network interfaces for Dialogic® HMP Interface Boards:

1. Verify that the media services and boards are stopped. See [Section 9.4, “Stopping Media Services”](#), on page 78.
2. In the **ipmsHwDM3Trunk** MIB, modify a current PSTN network interface setting for a specific device and network interface (trunk). For example, modify the protocol using **ipmsctHwDM3TrunkProtocol** object. The change takes effect on the next media services restart.

Depending on the board, you may assign the same protocol or different protocols to each trunk on the board, with some limitations. For the Dialogic® DNI/310TEPEHMP and DNI/300TEPHMP boards, you may assign an ISDN protocol or the CAS protocol to the trunk. For the Dialogic® DNI/610TEPEHMP, DNI/1210TEPEHMP, and DNI/1200TEPHMP boards, you may assign an ISDN protocol or the CAS protocol to any trunk. For the Dialogic® DNI/601TEPHMP board, you may assign an ISDN, CAS, or R2MF protocol to either trunk.

See [Protocol Guidelines for Dialogic® DNI/2410TEPEHMP Boards](#) in [Chapter 6, “Configuration Procedures Using CLI”](#) for more information on assigning protocols to the DNI/2410TEPEHMP board.

Continue with any additional configuration procedures that are applicable to your system. When you are satisfied with all configuration information, proceed with [Section 9.8.5, “Restarting Media Services”](#), on page 85.

9.8.2 Configuring the TDM Bus

Follow this procedure to modify default values for the TDM bus:

1. Verify that the media services and boards are stopped. See [Section 9.4, “Stopping Media Services”](#), on page 78.
2. In the **ipmsctBus** MIB, modify TDM bus settings as needed. For example, modify primary line using the **ipmsctBusPrimaryLineBoard** object or the primary line clock source using the **ipmsctBusPrimaryLineClock** object. The changes take effect on the next media services restart.

Continue with any additional configuration procedures that are applicable to your system. When you are satisfied with all configuration information, proceed with [Section 9.8.5, “Restarting Media Services”](#), on page 85.

9.8.3 Configuring System-Level Bridging and Streaming

Dialogic® HMP Interface Boards have a bridge device that enables communication and media streaming between Dialogic® HMP software and the boards on the CT Bus. You can set bridging and streaming characteristics at the system level or at the board (device) level. The media stream connections are managed by the bridge controller.

Follow this procedure to modify default values for bridging and streaming at the system level:

1. Verify that the media services and boards are stopped. See [Section 9.4, “Stopping Media Services”](#), on page 78.
2. In the **ipmsBridge** MIB, using the **ipmsBridgeSysAlawIdlePattern** and **ipmsBridgeSysMulawIdlePattern** objects, modify the system law (A-law or mu-law) and idle pattern that apply equally to all system TDM buses (CT bus and HMP soft CT bus). While these are not configured directly for bridge devices, this information is included as part of the configuration that is forwarded on to the bridge device during the startup process and must be provided to the bridge controller in the same manner. The change takes effect on the next media services restart.
3. In the **ipmsBridge** MIB, using the **ipmsBridgeSysHsiHoldBuffer** object, modify the number of hold buffers used by the host streaming interface. The greater the number of hold buffers specified, the greater the round trip media stream latency incurred between the host and the board. The change takes effect on the next media services restart.

Continue with any additional configuration procedures that are applicable to your system. When you are satisfied with all configuration information, proceed with [Section 9.8.5, “Restarting Media Services”](#), on page 85.

9.8.4 Configuring Device-Level Bridging and Streaming

Dialogic® HMP Interface Boards have a bridge device that enables communication and media streaming between Dialogic® HMP software and the boards on the CT Bus. You can set bridging and streaming characteristics at the system level or at the board (device) level. The media stream connections are managed by the bridge controller.

Follow this procedure to modify default values for bridging and streaming per device:

1. Verify that the media services and boards are stopped. See [Section 9.4, “Stopping Media Services”](#), on page 78.
2. In the **ipmsBridge** MIB, using the **ipmsBridgeDevEnabled** object, modify the setting for bridge device enabled or disabled.
3. In the **ipmsBridge** MIB, using the **ipmsBridgeDevUsrDefFallback** object, modify the setting for HMP Clock Master Fallback number (user-defined) of the bridge device. The bridge device assigned the lowest number is the primary master. The bridge device assigned the next lowest number is the secondary master, and so on. The user defined (requested) fallback numbers are sent to the bridge controller. Since duplicates are allowed in the fallback number, the actual fallback number assigned (resolved) by the bridge controller may not be the same as the requested one. The assigned fallback number is called “Resolved”.

The setting for the HMP Clock Master Fallback number (resolved) of the bridge device is updated to reflect the resolved fallback number. The resolved setting cannot be modified directly.

4. In the **ipmsBridge** MIB, using the **ipmsBridgeBHDataStreams** object, modify the maximum board to host data streams. This parameter specifies the maximum number of data streams from the board to the host for the device. This parameter is used for transparent data routing.

Valid values: 0, 1, 2, 4, 8, 16, 32, 64, 96, 124, 155, 186, 217, 248, 253, 255, 372, 496.

Default value is 0.

Note: The values 372 and 496 are not currently supported.

Note: The data streams value combined with the associated voice streams value (in [Step 5](#)) must not exceed the maximum streams for the device. For Dialogic® DNI boards (Universal PCI form factor), the maximum streams value is 253. For Dialogic® DNI boards (PCI Express form factor), the maximum streams value is 255. For example, for Dialogic® DNI/2410TEPEHMP, if bh-datastreams=0, bh-voicestream must not exceed 255; if bh-datastreams=127, bh-voicestream must not exceed 128.

5. In the **ipmsBridge** MIB, using the **ipmsBridgeBHVoiceStreams** object, modify the maximum board to host voice streams. This parameter specifies the maximum number of voice streams from the board to the host for the device. This parameter is used for transparent data routing.

Valid values: 0, 1, 2, 4, 8, 16, 32, 64, 96, 124, 155, 186, 217, 248, 253, 255, 372, 496.

Default value for Dialogic® DNI boards, Universal PCI form factor: 253.

Default value for Dialogic® DNI boards, PCI Express form factor: 255.

Note: See notes in [Step 4](#) on maximum streams for the device.

6. In the **ipmsBridge** MIB, using the **ipmsBridgeHBDataStreams** object, modify the maximum host to board data streams. This parameter specifies the maximum number of data streams from the host to the board for the device. This parameter is used for transparent data routing.

Valid values: 0, 1, 2, 4, 8, 16, 32, 64, 96, 124, 155, 186, 217, 248, 253, 255, 372, 496.

Default value is 0.

Note: The values 372 and 496 are not currently supported.

Note: The data streams value combined with the associated voice streams value (in [Step 7](#)) must not exceed the maximum streams for the device. For Dialogic® DNI boards (Universal PCI form factor), the maximum streams value is 253. For Dialogic® DNI boards (PCI Express form factor), the maximum streams value is 255. For example, for Dialogic® DNI/2410TEPEHMP, if hb-datastreams=0, hb-voicestream must not exceed 255; if hb-datastreams=127, hb-voicestream must not exceed 128.

7. In the **ipmsBridge** MIB, using the **ipmsBridgeHBVoiceStreams** object, modify the maximum host to board voice streams. This parameter specifies the maximum number of voice streams from the host to the board for the device. This parameter is used for transparent data routing.

Valid values: 0, 1, 2, 4, 8, 16, 32, 64, 96, 124, 155, 186, 217, 248, 253, 255, 372, 496.

Default value for Dialogic® DNI boards, Universal PCI form factor: 253.

Default value for Dialogic® DNI boards, PCI Express form factor: 255.

Note: See notes in [Step 6](#) on maximum streams for the device.

For more information on transparent mode or transparent data routing, see [Section 3.5](#), “Transparent Data Routing for 3G-324M”, on page 25.

Continue with any additional configuration procedures that are applicable to your system. When you are satisfied with all configuration information, proceed with [Section 9.8.5](#), “Restarting Media Services”, on page 85.

9.8.5 Restarting Media Services

Media services, which include boards, must be stopped before performing any configuration procedures. Restart media services to activate new configuration settings.

Follow this procedure to restart media services:

1. View the system run status in the **ipmsSysEnv** MIB. Verify that the run status is inactive. Media services must be inactive before starting.
2. To start media services, set the **ipmsSysEnvMediaProcCtl** object to ipmsMediaProcStart in the **ipmsSysEnv** MIB. If the SNMP client has registered itself to receive traps from the SNMP agent, then the SNMP client and all registered stations should receive the Run Status Trap, which notifies the user that media services have been started.

This chapter provides guidelines and recommendations for tuning a system that has Dialogic® software or a system that also contains Dialogic® hardware:

- [Tuning a System with Dialogic® Software 86](#)
- [Tuning a System with Dialogic® HMP Interface Boards 88](#)

10.1 Tuning a System with Dialogic® Software

The following topics provide information on tuning a system running Dialogic® HMP software on Linux or Dialogic® Multimedia Kit Software for PCIe:

- [High Channel Density Recommendations](#)
- [Optimizing NIC Driver Settings](#)
- [Configuring the Number of Message Queues](#)

10.1.1 High Channel Density Recommendations

The following recommendations are applicable in high channel density environments.

Increasing System Shared Memory Size

Systems using Dialogic® software licenses that have more than 120 instances of a single resource type require an increase in the Linux operating system shared memory size to 64 MB or more.

To display the current shared memory size setting, use the following command:

```
more /proc/sys/kernel/shmmax
```

To increase the size to 64 MB, use the following command:

```
sysctl -w kernel.shmmax=65536000
```

To make the setting persistent across reboots, add the `kernel.shmmax=65536000` variable to the `/etc/sysctl.conf` file.

Memory Recommendations

When running systems with more than 120 channels of multimedia play and record, it is recommended that 4 GB of memory be available.

10.1.2 Optimizing NIC Driver Settings

It is recommended to update network interface card (NIC) driver settings for improved system performance.

By default NIC driver settings are optimized for 100 Base-T NIC. For 1000 Base-T networks, make the following changes manually:

```
sysctl -w net.core.netdev_max_backlog=3000
sysctl -w net.core.rmem_default=16777216
sysctl -w net.core.rmem_max=16777216
sysctl -w net.core.wmem_max=16777216
sysctl -w net.core.wmem_default=16777216
ethtool -G eth0 tx 4096 rx 4096
```

To make the net.core settings persistent across reboots, add the following parameters in the /etc/sysctl.conf file:

```
net.core.netdev_max_backlog=3000
net.core.rmem_default=16777216
net.core.rmem_max=16777216
net.core.wmem_max=16777216
net.core.wmem_default=16777216
```

To make the ethtool setting persistent across reboots, also add the following command to the /etc/profile file:

```
ethtool -G eth0 tx 4096 rx 4096 2> /dev/null
```

10.1.3 Configuring the Number of Message Queues

The number of message queues used by Dialogic® HMP software is dependent on the number of application processes and use of Dialogic® SS7 software. You may need to increase the number of message queues available in your system. Errors may result if the number of available message queues is less than required.

To display the number of message queues currently in use, specify the following command:

```
ipcs -q
```

To display the maximum number of message queues currently set, specify the following command:

```
sysctl kernel.msgmni
```

It is recommended to set the number of available message queues to 128 or higher. This number will usually accommodate the requirements by the Dialogic® software and any additional customer applications. Use the following command to set the available message queue limit:

```
sysctl -w kernel.msgmni=128
```

System Performance Tuning

While the `kernel.msgmni` can be calculated, it is required that the following two parameters be set to the following minimum values, or if the default if it is greater:

```
-max size in bytes of any single message in a queue
sysctl -w kernel.msgmax=65536
-number of total bytes allowed to be queued across all messages..
sysctl -w kernel.msgmnb=65536
```

To make the setting persistent across reboots, add the following parameters to the `/etc/sysctl.conf` file:

```
kernel.msgmni=128
kernel.msgmax=65536
kernel.msgmnb=65536
```

1. To calculate the number of message queues used by the Dialogic® software, follow these guidelines:
2. The Dialogic® software uses 4 message queues by default in one application process.
3. Each additional application process which uses Dialogic® software requires an additional message queue. For example, if you are running 8 application processes, you will need 8 message queues for the application processes and 4 message queues for Dialogic® software, or a total of 12 message queues.
4. If using SS7, additional message queues are required.
 - Each module defined in the SS7 system environment configuration file (*system.txt*) requires one message queue. A module is defined using the LOCAL command in the *system.txt* file. This file is used by the GCTLOAD program to create message queues and spawn appropriate child processes.
 - In addition, the GCTLOAD program requires one message queue.

For example, if the *system.txt* file contains 13 modules as defined by the LOCAL commands, you will need 14 (13 + 1) message queues.

Thus, following through on the example, in an SS7-based system with 8 application processes and 13 modules, you will need at least 26 message queues (4 + 8 + 14). As described earlier however, it is recommended that you set the number of available message queues to 128.

10.2 Tuning a System with Dialogic® HMP Interface Boards

The following topics provide more information on tuning a system with Dialogic® HMP Interface Boards:

- [Disabling Driver Status Messages](#)

10.2.1 Disabling Driver Status Messages

In a system with Dialogic® HMP Interface Boards, several driver status messages may be printed to your console screen during installation and during runtime, which may be distracting.

To prevent these driver status messages from being displayed on the console screen, use the following command:

```
sysctl -w kernel.printk=0
```

To make this setting persistent across reboots, add the `kernel.printk=0` parameter to the `/etc/sysctl.conf` file.

Note: Be aware that this command stops **all** driver and kernel messages from printing to the console screen, not just messages related to the Dialogic® HMP Interface Boards and Dialogic® software. All messages are still printed to `/var/log/messages`.

This chapter discusses echo cancellation support and configuration in the Dialogic® Host Media Processing (HMP) Software. The following topics are covered:

- [Echo Cancellation Background Information](#) 90
- [Echo Cancellation Features](#) 92
- [Using Echo Cancellation](#) 93
- [Configuring Host-Based Echo Cancellation](#) 94
- [Host-Based Echo Cancellation Sample Scenarios](#). 98
- [Configuring On-Board Echo Cancellation](#) 101

11.1 Echo Cancellation Background Information

This section provides background information on echo cancellation:

- [Overview](#)
- [Acoustic Echo](#)
- [Electrical Echo](#)

11.1.1 Overview

The presence of echo on a media stream can negatively impact user satisfaction with voice quality. The degree to which echo is objectionable depends on both the loudness of the echo and the total round-trip delay. The impact of an echo increases as round-trip delays increase, affecting the user's perception of echo. If the delay is small (less than 20 ms), the user hears nothing or at most a reverberant sounding side-tone. Larger delays, however, lead to a subjective annoyance perceived as echo. The larger the delay, the less masking there is by the direct speech and the more annoying the echo becomes.

The presence of echo on a media stream can also negatively impact the reliability of automated media processing such as voice recognition or digit detection when voice prompts, for example, are played to a caller. In this case, a round-trip echo delay of less than 20 ms makes the returned echo unacceptable. For media processing algorithms, it is the loudness of the echo that is most problematic. Media processing algorithms typically function much better when echo is removed, or at a minimum suppressed to very low levels.

There are two basic types of echo to consider: acoustic echo and electrical echo.

11.1.2 Acoustic Echo

Acoustic echo occurs when sound waves emitted from the receiver of an analog or digital handset (telephone) are reflected back, or coupled back, into the microphone of that handset. If the echo is not sufficiently cancelled or suppressed within the handset or elsewhere, the echo will return to the source of the sound waves, such as the remote caller, and can result in unacceptable voice quality.

Acoustic echo is typically cancelled at the handset. This is true for analog, digital, wireless, as well as IP handsets. Acoustic echo, however, can be an issue if low quality handsets are involved in a call or, in some cases, when a caller is using the hands-free mode of a handset that also does not do a proper job in canceling the acoustic echo.


The public switched telephone network (PSTN) has no special provision to compensate for acoustic echo.

11.1.3 Electrical Echo

Electrical echo typically occurs when a call traverses between a 2-wire and 4-wire physical transport. On the 4-wire transport, the transmit signal and the receive signal travel on separate wire pairs. On the 2-wire transport, the transmit signal and the receive signal share the same wire pair. The interface between the 2-wire transport and the 4-wire transport is known as the **hybrid**. Since the 2-wire transport carries both the signal being sent to the 2-wire transport from the 4-wire transport (signal A) and the signal being sent from the 2-wire transport to the 4-wire transport (signal B), the hybrid must subtract signal A from the combined signal A+B on the 2-wire transport to obtain signal B to forward on to the 4-wire transport.

Let's examine the example where a 2-wire local analog loop from a subscriber's handset is connected via the hybrid to a 4-wire transport deeper within the PSTN, Figure 3. The hybrid attempts to subtract the signal that is being transmitted from the 4-wire transport to the 2-wire local loop from the combined signals on the 2-wire local loop to obtain the desired signal being sent toward the PSTN from the handset. Ideally, the signal being subtracted would match exactly the signal being sent to the 2-wire local loop from the 4-wire transport, so that the received data on the 4-wire side of the hybrid would contain only the signal sent to the PSTN by the handset. It would not contain any reflected signal or echo.

Figure 3. Electrical Echo and the Hybrid

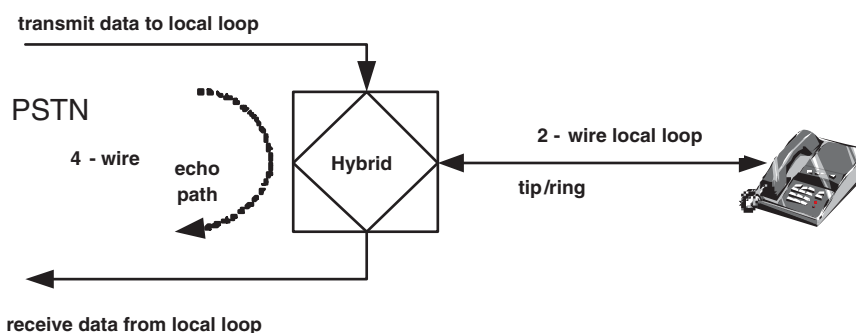

Echo Cancellation

However, in the real world, the ability of the hybrid to remove the transmitted signal is imperfect. The term hybrid balance refers to the ratio (expressed in dB) of the signal being transmitted from the 4-wire side to the apparent (reflected) signal received back at the 4-wire side. If the hybrid balance is not perfect due to impedance mismatches, for instance, then a fraction of the signal being sent is reflected back to the sender. If a delay in the network occurs, the sender hears an echo, which can be objectionable.

The PSTN compensates for electrical echo created within the PSTN under certain connections by inserting echo suppressors or cancellation devices in the path of the call. This is done when a hybrid is included within the route of the call and when the round-trip echo delay exceeds a limit, typically less than 25 ms, above which the echo is deemed to be objectionable. This would be the case, for example, for some long distance calls as well as calls using a satellite link. For the majority of calls, including local calls and also many long distance calls, the round-trip delays are well below 25 ms and, therefore, echo compensation is not provided by the PSTN.

The criteria used to determine when or when not to insert echo compensation in the PSTN, however, assumes that terminal devices such as handsets and combinations of PBX's with handsets behind them add relatively small additional delays beyond the delays resulting from the PSTN connection. When echo exists on the received media stream and additional delays are introduced into the call connection beyond those budgeted by the PSTN, echo cancellation is required if these additional delays cause the total round-trip delay to exceed approximately 25 ms. If echo cancellation is not provided under these circumstances, callers may experience objectionable echo.

An example of when echo cancellation is not provided is for call connections that span PSTN and IP networks. While the round-trip delay may be small (a few milliseconds on the PSTN side) the delays introduced by the IP network portion of the connection may be in the order of 100 ms. IP networks can also introduce lost or replaced packets, as well as packet jitter, making for a non-linear environment in which it is very difficult to identify and cancel all echoes at the point where media leaves the packet network. Due to these significant delays and potential impairments, gateways which interface between the PSTN and IP network are required to remove any echo received from the PSTN side prior to transmitting audio onto the IP network. Likewise, IP phones must also remove echo before transmitting audio onto the IP network. Conferencing is another example where additional delays are added into the connection path. Therefore, conference bridges typically provide echo cancellation, removing the echo received from each conference party prior to summing the received audio.

11.2 Echo Cancellation Features

Echo cancellation support is available for circuit-switched connections that may contain electrical echo on the received media stream. This feature is applicable to Dialogic® HMP Interface Boards that provide public switched telephone network (PSTN) connectivity for Dialogic® HMP software when on-board echo cancellation is not available or is not used. This feature is also referred to as host-based echo cancellation; that is, the echo canceller is in the host software.

Echo cancellation support is in compliance with ITU-T G.168 recommendation and can be controlled using runtime API functions or CONFIG file parameters. It is recommended that you control echo cancellation on a channel by channel basis using runtime API functions when they are available.

Echo cancellation capability is provided on the following devices in Dialogic® Host Media Processing (HMP) Software:

- IP media device
- signal detector of the voice device
- conferencing device
- CSP/voice device

11.3 Using Echo Cancellation

Enabling the echo cancellation feature in certain devices (IP media, voice, conferencing, and continuous speech processing) in Dialogic® HMP software is typically required when these devices receive media streams from the public switched telephone network (PSTN) via the DTI devices on the Dialogic® HMP Interface Boards.

Note: DTI devices refer to digital network interface devices, which is used interchangeably with digital trunk interface devices.

While T1/E1 interfaces are digital interfaces, analog links may be part of the end-to-end connections. When this is the case, electrical echo may be present unless the PSTN provides echo cancellation on the connection, which it does not normally do. The echo cancellation feature only addresses electrical echo. It does not address acoustic echo which is typically handled by the handsets (telephones) where acoustic echo could potentially be introduced into the network. See [Section 11.1, “Echo Cancellation Background Information”](#), on page 90 for an overview of echo cancellation and the types of echo.

Enabling the echo cancellation feature in the devices mentioned earlier in this section is **not required** for the following:

- Media streams received from PSTN connections via Dialogic® HMP Interface Boards that have on-board echo cancellation that is available and enabled. Echo cancellation is provided as part of the DTI resources.
For information about enabling and disabling echo cancellation on these boards, see [Section 11.6, “Configuring On-Board Echo Cancellation”](#), on page 101.
For information about board support on a platform or software release, see [Chapter 2, “Feature Support by Platform”](#).
- Media streams received from the IP packet network via IP media devices. Due to the delays associated with the packet network, echo must be removed prior to transmitting voice (audio) onto the packet network. This is the responsibility of IP endpoints such as gateways and IP phones. Therefore, it is assumed that the media streams received from the IP packet network are free of any objectionable echo.

Since the echo cancellation feature consumes CPU resources, echo cancellation should only be applied when needed. For this reason, runtime application control is available to enable and disable host-based echo cancellation on a per connection or per channel basis. See [Section 11.4, “Configuring Host-Based Echo Cancellation”](#), on page 94 for more information.

11.4 Configuring Host-Based Echo Cancellation

Host-based echo cancellation can be configured on one or more devices as needed. The following topics provide more information about configuring host-based echo cancellation:

- [Echo Cancellation on IP Media Devices](#)
- [Echo Cancellation on Voice Devices](#)
- [Echo Cancellation on Conferencing Devices](#)
- [Echo Cancellation on CSP/Voice Devices](#)

Note: The information in the following subsections does not apply to Dialogic® HMP Interface Boards. For information about enabling and disabling echo cancellation settings on these boards, see [Section 11.6, “Configuring On-Board Echo Cancellation”](#), on page 101.

11.4.1 Echo Cancellation on IP Media Devices

The IP media device supports echo cancellation on tail lengths up to 64 ms. The default echo cancellation settings on IP media devices are as follows: echo cancellation is disabled, non-linear processing (NLP) is enabled, and the tail length is 16 ms.

Echo cancellation features of the IP media device can be managed using the Dialogic® IP Media Library API or the Dialogic® Global Call API library.

Dialogic® IP Media Library API

Echo cancellation features of the IP media device can be controlled and monitored using Dialogic® IP Media Library API functions.

Echo cancellation can be turned on or off on a per channel (device) basis using **ipmSetParm()** in conjunction with **PARMCH_ECACTIVE** in the **IPM_PARM_INFO** structure.

The echo cancellation tail length can be set using **ipmSetParm()** in conjunction with **PARMCH_ECHOTAIL** in the **IPM_PARM_INFO** structure.

The echo cancellation NLP feature can be turned on or off using **ipmSetParm()** in conjunction with **PARMCH_ECNLP_ACTIVE** in the **IPM_PARM_INFO** structure.

Echo cancellation settings can be monitored using **ipm_GetParm()** in conjunction with the following in the **IPM_PARM_INFO** structure: **PARMCH_ECACTIVE**, **PARMCH_ECHOTAIL**, and **PARMCH_ECNLP_ACTIVE**.

The following usage rules apply:

- NLP can only be disabled after echo cancellation has been enabled and the **ipm_StartMedia()** function has been invoked.
- Disabling echo cancellation, invoking the **ipm_Stop()** function, or invoking the **ipm_ModifyMedia()** function will cause NLP to be reset to the enabled state. Therefore, if NLP needs to be disabled, you must invoke **ipm_SetParm()** to disable NLP each time the

ipm_StartMedia() or **ipm_ModifyMedia()** is invoked. This assumes that echo cancellation was previously enabled.

- If echo cancellation was also disabled, echo cancellation must be re-enabled either before or after invoking **ipm_StartMedia()** or **ipm_ModifyMedia()**. In either case, echo cancellation must also be enabled before **ipm_SetParm()** is invoked to disable NLP.

For more information, see the Dialogic® IP Media API Library documentation.

Dialogic® Global Call API Library

Alternatively, echo cancellation features of the IP media device can be controlled using the Dialogic® Global Call API Library.

Echo cancellation settings can be modified using the **gc_SetUserInfo()** function to set Dialogic® IP Media Library parameters via the GC_PARM_BLK structure. You can set any IP media parameter in the GC_PARM_BLK structure by using **gc_util_insert_parm_ref()** with a set id of IPSET_CONFIG and parameter IDs of IPPARM_IPMPARM with a value as a pointer to the IPM_PARM_INFO structure.

The echo cancellation parameters that may be modified include PARMCH_ECACTIVE, PARMCH_ECHOTAIL, and PARMCH_ECNLP_ACTIVE.

The following usage rule applies:

- NLP can only be disabled after echo cancellation has been enabled and an active call has been established. Upon termination of a call, NLP will be reset to the enabled state. Therefore, if NLP needs to be disabled, the **gc_SetUserInfo()** function will need to be invoked to disable NLP each time a new call is established with echo cancellation enabled.

For more information, refer to the Dialogic® Global Call API Library documentation.

11.4.2 Echo Cancellation on Voice Devices

The signal detector of the voice resource supports echo cancellation on tail lengths up to 8 ms. By default, echo cancellation is disabled. The echo cancellation tail length cannot be modified.

Dialogic® Voice API Library

Echo cancellation features of the voice device can be controlled and monitored using the Dialogic® Voice API library.

Echo cancellation can be turned on or off on a per channel (device) basis using **dx_setparm()** in conjunction with DXCH_EC_ACTIVE.

Echo cancellation settings can be monitored using **dx_getparm()** in conjunction with DXCH_EC_ACTIVE.

For more information, refer to the Dialogic® Voice API library documentation.

11.4.3 Echo Cancellation on Conferencing Devices

The conferencing device supports echo cancellation on a per party basis for tail lengths up to 64 ms. By default, echo cancellation is disabled, and the default tail length is set to 16 ms.

Echo cancellation features of the conferencing device can be managed using the Dialogic® Conferencing (CNF or DCB) API library and the CONFIG file for Dialogic® HMP software.

Dialogic® Conferencing (CNF) API Library

Echo cancellation features of the CNF conferencing device can be controlled using the **cnf_SetAttributes()** function. For more information, see the Dialogic® Conferencing (CNF) API Library documentation.

Dialogic® Conferencing (DCB) API Library

Echo cancellation features of the DCB conferencing device can be controlled using Dialogic® Conferencing (DCB) API library functions.

Echo cancellation is disabled by default but can be enabled on a per party basis when establishing a conference using the **dcb_estconf()** function or, when adding a party to a conference using the **dcb_addtoconf()** function.

The **dcb_estconf()** function uses an array of MS_CDT data structures which define the attributes of the conference parties. The **dcb_addtoconf()** function uses a single MS_CDT structure to define the attributes of the party that is being added to the conference.

The **chan_attr** field in the MS_CDT structure is a bitmask that specifies the party's properties within the conference. The bit that enables echo cancellation is **MSPA_ECHOXCLEN**.

The conferencing device echo cancellation tail length and NLP capability cannot be controlled by the conferencing API, but can be controlled using the CONFIG (*.config*) file. For more information, see [CONFIG File for Dialogic® HMP software](#).

For more information on conferencing functions and data structures, refer to the Dialogic® Conferencing (DCB) API Library documentation.

CONFIG File for Dialogic® HMP software

You can modify the conferencing device echo cancellation tail length by editing the CONFIG (*.config*) file. The tail length setting, however, applies globally to all conferencing channels (devices). The setting also modifies the default value for continuous speech processing (CSP) devices, but the CSP values can be changed on a per channel basis using CSP APIs.

The following line in the CONFIG file allows the echo cancellation tail length to be modified:


```
[0x2c]
```

```
SetParm=0x2c03,128 ! Set EC tail length to 64(8ms), 80(10ms),
128(16ms),192(24ms), 256(32ms), 512(64ms). Default: 128(16ms)
```

You can enable or disable the conferencing device echo cancellation non-linear processing (NLP) feature by editing the CONFIG file. The NLP setting, however, applies globally to all conferencing channels (devices). The setting also modifies the default value for CSP, but the CSP values can be changed on a per channel basis using CSP APIs.

The following line in the CONFIG file allows the echo cancellation NLP feature to be enabled or disabled:

```
[0x2c]
```

```
SetParm=0x2c01, 0x1 ! Enable Echo Canceller NLP (0x1 (enable-default),
0x0 (disable))
```

To create and save custom settings, use the *HMP.Uconfig* file. For more information, see Section 3.6, “Preserving Data in User Configuration Files”, on page 26.

11.4.4 Echo Cancellation on CSP/Voice Devices

The CSP/voice device supports echo cancellation on tail lengths up to 64 ms. By default, echo cancellation is disabled, and the default tail length is 16 ms.

Note: Modifying echo cancellation related conferencing parameters in the CONFIG file will change corresponding default CSP echo cancellation parameter values.

Dialogic® Continuous Speech Processing API Library

Echo cancellation features of the CSP/voice device can be controlled and monitored using Dialogic® CSP API library functions.

Echo cancellation can be turned on or off on a per channel (device) basis using **ec_setparm()** in conjunction with ECCH_ECHOCANCELLER.

The echo cancellation tail length can be set on a per channel (device) basis using **ec_setparm()** in conjunction with DXCH_EC_TAP_LENGTH.

The echo cancellation non-linear processing (NLP) feature can be turned on or off on a per channel (device) basis using **ec_setparm()** in conjunction with ECCH_NLP.

Echo cancellation settings can be monitored using **ec_getparm()** in conjunction with the following parameters: ECCH_ECHOCANCELLER, DXCH_EC_TAP_LENGTH, and ECCH_NLP.

For more information, refer to the Dialogic® Continuous Speech Processing API Library documentation.

11.5 Host-Based Echo Cancellation Sample Scenarios

The following examples illustrate the digital network interface (DTI) devices connected to various Dialogic® HMP software resources as well as IP only connections.


- [DTI and IP Gateway Example](#)
- [DTI and IP Conferencing Example](#)
- [DTI and CSP/Voice Example](#)
- [DTI and Voice Example](#)
- [IP and IP Connection Example](#)
- [IP and CSP/Voice Example](#)
- [IP and Voice Example](#)

Note: These examples do not apply to Dialogic® HMP Interface Boards that have on-board echo cancellation that is available and enabled. For information about board and feature support on a platform or software release, see [Chapter 2, “Feature Support by Platform”](#).

11.5.1 DTI and IP Gateway Example

Figure 4 shows an example of a T1/E1 and IP Gateway connection formed by connecting the DTI device to an IP media device, also called an IPM device. In this example, the echo cancellation feature (EC) of the IP media device is enabled, to handle echo on the media stream received from the PSTN via the DTI device.

Figure 4. T1/E1 Gateway Example

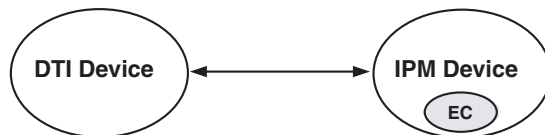


11.5.2 DTI and IP Conferencing Example

Figure 5 shows a four-party conferencing example where two DTI devices are connected to the conference as parties A and B, and two IP media devices are connected to the conference as parties C and D.

The echo cancellation feature (EC) of the conference device is enabled for parties A and B, to handle echo on the media stream received from the PSTN via the DTI devices. The EC feature is disabled for parties C and D, and also for both IP media devices.


Figure 5. DTI and IP Conferencing Example

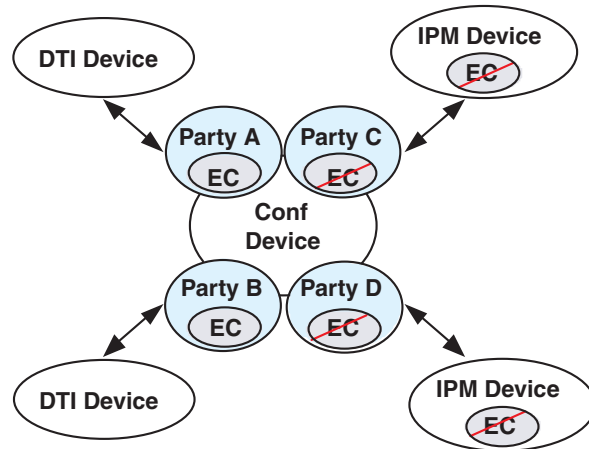

11.5.3 DTI and CSP/Voice Example

Figure 6 shows an example where the DTI device is connected to a CSP/voice device. The echo cancellation feature (EC) of the CSP/voice device is enabled, to handle echo on the media stream from the PSTN received via the DTI device.


Figure 6. DTI and CSP/Voice Example

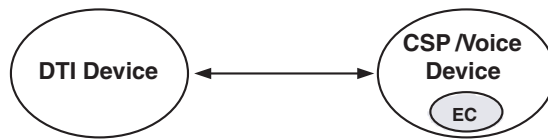

11.5.4 DTI and Voice Example

Figure 7 shows an example where the DTI device is connected to a voice device. The echo cancellation feature (EC) of the voice device is enabled, to handle echo on the media stream from the PSTN received via the DTI device.

Figure 7. DTI and Voice Example

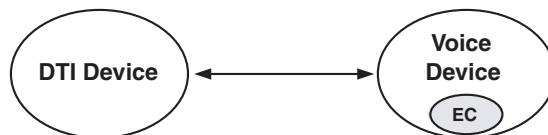

11.5.5 IP and IP Connection Example

Figure 8 shows an IP to IP connection example. The echo cancellation feature (EC) is disabled for both IP media devices. As discussed in [Section 11.1.3, “Electrical Echo”](#), on page 91, echo must be removed from the media stream prior to its transmission on the IP packet network.


Figure 8. IP and IP Connection Example



11.5.6 IP and CSP/Voice Example

Figure 9 shows an example where the IP media device is connected to a CSP/voice device. The echo cancellation feature (EC) of both the CSP/voice device and the IP media device is disabled. As discussed in [Section 11.1.3, “Electrical Echo”](#), on page 91, echo must be removed from the media stream prior to its transmission on the IP packet network.


Figure 9. IP and CSP/Voice Example

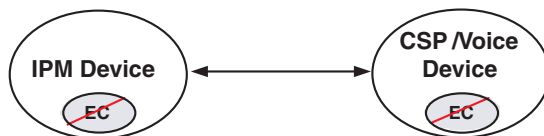

11.5.7 IP and Voice Example

Figure 10 shows an example where the IP media device is connected to a voice device. The echo cancellation feature (EC) of both the voice device and the IP media device is disabled. As discussed in [Section 11.1.3, “Electrical Echo”](#), on page 91, echo must be removed from the media stream prior to its transmission on the IP packet network.

Figure 10. IP and Voice Example

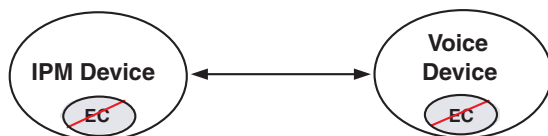

11.6 Configuring On-Board Echo Cancellation

This section applies to Dialogic® HMP Interface Boards that have on-board echo cancellation, where echo cancellation is provided as part of the DTI resources. For board support information, see [Chapter 2, “Feature Support by Platform”](#).

The `gc_SetConfigData()` function in the Dialogic® Global Call API library allows the application to dynamically set echo cancellation parameters, namely enabled/disabled and Non-Linear Processing (NLP), on a per channel basis at run time. Use the `gc_GetConfigData()` function to return the current values for a given line device (channel basis).

The following definitions are used for enabling and disabling echo cancellation:

```
Set ID: CCSET_DM3FW_PARM
Parm Id: CCPARM_ECHOCANCEL
Valid Values: CCDM3FW_PARMECHOCANCEL_DISABLE 0x0
              CCDM3FW_PARMECHOCANCEL_ENABLE 0x1
              CCDM3FW_PARMECHOCANCEL_ENABLE_NLP 0x2
```

The target type is `GCTGT_CCLIB_CHAN`, where the target value is the linedev handle.

Using the `CCSET_DM3FW_PARM` set ID and the echo cancellation defines, you can set up the DTI channels with echo cancellation capability. These echo cancellation values can be combined as a bitmask to create the following modes of echo cancellation:

Parameter ID	Value	Description
<code>CCDM3FW_PARMECHOCANCEL_DISABLE</code>	0x0	No echo cancellation
<code>CCDM3FW_PARMECHOCANCEL_ENABLE</code>	0x1	Echo cancellation enabled
<code>CCDM3FW_PARMECHOCANCEL_ENABLE CCDM3FW_PARMECHOCANCEL_ENABLE_NLP</code>	0x3	Echo cancellation enabled, NLP enabled

Note: The following values are not supported and will return an error if used:

```
CCDM3FW_PARMECHOCANCEL_ENABLE_NLP
CCDM3FW_PARMECHOCANCEL_DISABLE | CCDM3FW_PARMECHOCANCEL_ENABLE_NLP
```

Example

```
...
GC_PARM_BLK echo_blkp = NULL;
int req_id;
...

/* insert parm by value */
if ( gc_util_insert_parm_val( &echo_blkp, CCSET_DM3FW_PARM, CCPARM_ECHOCANCEL, sizeof( char ),
(char)(CCDM3FW_PARMECHOCANCEL_ENABLE | CCDM3FW_PARMECHOCANCEL_ENABLE_NLP)) != GC_SUCCESS )
{
```

Echo Cancellation

```
        sprintf(str, "gc_util_insert_parm_val(CCSET_DM3FW_PARM, CCPARM_ECHOCANCEL, sizeof( char ),
        (char)CCDM3FW_PARMECHOCANCEL_ENABLE) Failed");
        printandlog(index, GC_APIERR, NULL, str, 0);
        exitdemo(1);
    }

    /* Enable Echo Cancellation */
    if (gc_SetConfigData(GCTGT_CCLIB_CHAN, port[index].ldev, echo_blkp, 0, GCUPDATE_IMMEDIATE,
    &req_id, EV_ASYNC) != GC_SUCCESS) {
        sprintf(str, "gc_SetConfigData(GCTGT_CCLIB_CHAN, targetID:0x%x, mode:EV_ASYNC Failed",
        port[index].ldev);
        printandlog(index, GC_APIERR, NULL, str, 0);
        exitdemo(1);
    }
    /* delete parm blk */
    ...

```


This chapter provides background information about CONFIG (*.config*) files including directory location and formatting conventions. This chapter also includes information to help you set the parameters contained in the CONFIG file.

- CONFIG File Formatting Conventions 104
- CONFIG File Sections 105
- [Encoder] Section 106
- [NFAS] Section 107
- [CHP] Section 108
- [TSC] Section 109

12.1 CONFIG File Formatting Conventions

The CONFIG (*.config*) files, located in the *data* directory under INTEL_DIALOGIC_DIR (the environment variable for the directory in which the software is installed), are ASCII files that contain component configuration information required by Dialogic® boards. When manually editing the CONFIG file, use the following formatting conventions:

Parameters

Many CONFIG file parameters use the SetParm command to assign values. The format is SetParm followed by an equal sign, followed by the hexadecimal parameter number, followed by a comma, followed by the parameter value:

```
SetParm=parameter-number, parameter-value
```

Additional commands used to set parameters include:

- AddNFASInterface (see “GroupID (Group Identifier)”, on page 134)
- Variant (see Section 12.5, “[CHP] Section”, on page 108)
- defineBSet (see Section 12.6, “[TSC] Section”, on page 109).

Sections

Configuration parameters are grouped into sections. In general, each section begins with a section name enclosed in square brackets. (The section names are listed and described in Section 12.2, “CONFIG File Sections”, on page 105.) The parameters for the section immediately follow the section name.

```
[section-name]
```

Some sections group parameters that apply to a specific network interface (trunk) or channel (line). These section names are followed by a period (.) and the trunk number. For sections that group parameters like this, there is a separate section for each trunk.

```
[section-name.trunk-number]
```


Comments

Comments can be added to the CONFIG file. If you use an exclamation point (!) anywhere on a line, all text to the right of the exclamation point until the end of the line is treated as a comment (ignored).

```
! comment
```

For a list of CONFIG file parameters, see [Chapter 13, “CONFIG File Parameter Reference for Dialogic®HMP Software”](#) and [Chapter 14, “CONFIG File Parameter Reference for Dialogic®HMP Interface Boards”](#).

12.2 CONFIG File Sections

CONFIG file parameters are grouped in sections based on the board components and subcomponents being configured. Modifiable CONFIG file sections include the following:

Note: If you use T1, E1CAS, and R2MF protocols in a system with Dialogic® DNI boards, you can configure these protocols using Protocol Development Kit (PDK) parameters. For more information, see the *Dialogic® Global Call Country Dependent Parameters (CDP) for PDK Protocols Configuration Guide*.

[0x2c]

Defines parameters used to set the tail length, or tap length, of the enhanced echo canceller.

[encoder]

Defines parameters used during the encoding process that utilize the Automatic Gain Control (AGC) and Silence Compressed Record (SCR) algorithms. For details about setting algorithm parameters, see [Section 12.3, “\[Encoder\] Section”](#), on page 106.

[lineAdmin.x]

Defines line device parameters applicable to each trunk on a board that has T1 or E1 trunks.

[NFAS] and [NFAS.x]

Non-Facility Associated Signaling (NFAS). Defines the Primary D channel and NFAS trunk parameters. The [NFAS] section defines the number of NFAS groups on a board. The [NFAS.x] sections define the parameters specific to each group. For details about setting the NFAS parameters, see [Section 12.4, “\[NFAS\] Section”](#), on page 107.

[CCS] and [CCS.x]

Common Channel Signaling (CCS). Defines common channel signaling parameters applicable to technologies such as ISDN. The [CCS] section defines board-based parameters and the [CCS.x] section defines the line-based parameters.

[CHP]

Channel Protocol (CHP). Defines the telephony communication protocol that is used on each network interface using the Variant Define *n* command. For details about setting [CHP] parameters using the Variant Define *n* command, see [Section 12.5, “\[CHP\] Section”](#), on page 108.

[TSC]

Telephony Service Component (TSC). Defines sets of B channels and associated characteristics using the defineBSet command. For details about setting [TSC] parameters using the defineBSet command, see [Section 12.6, “\[TSC\] Section”](#), on page 109.

12.3 [Encoder] Section


The encoder parameters are used to perform an encoding process on a media stream. Automatic Gain Control (AGC) and Silence Compressed Record (SCR) are two algorithms used as part of this encoding process.

The AGC is an algorithm for normalizing an input signal to a target record level. The target record level should be chosen to be the optimum level for an encoder and, at the same time, produce a suitable playback level for a listener.

The AGC algorithm is controlled by three parameters: **PrmAGCk**, **PrmAGCmax_gain**, and **PrmAGClow_threshold**. **PrmAGCk** is a target output level. **PrmAGCmax_gain** is the limit on the possible maximum gain. The ratio, **PrmAGCk/PrmAGCmax_gain** gives the AGC High Threshold value. This is the threshold for which inputs above it produce output level at the **PrmAGCk** level and inputs with a level below it produce outputs which linearly decrease with the input level. The **PrmAGClow_threshold**, on the other hand, is an upper limit for a noise level estimate. That is, a signal with a level above the **PrmAGClow_threshold** is declared speech, independently of whether it is or not. Below the threshold, the AGC algorithm itself tries to discriminate between voiced and unvoiced signals.

Figure 11 is a graphical representation of the AGC gain relative to input average.

Figure 11. AGC Gain vs. Input Average

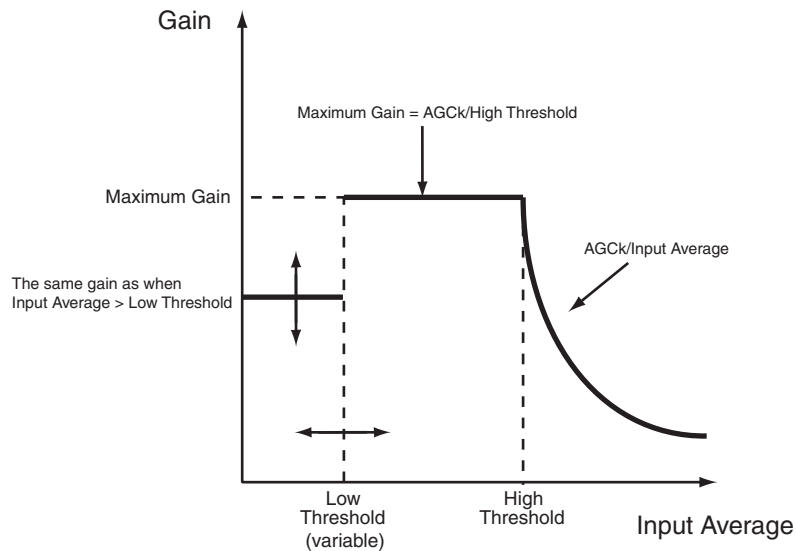

The SCR algorithm operates on 1 millisecond blocks of speech and uses a twofold approach to determine whether a sample is speech or silence. Two Probability of Speech values are calculated using a Zero Crossing algorithm and an Energy Detection algorithm. These values are combined to calculate a Combined Probability of Speech.

The Zero Crossing algorithm counts the number of times a sample block crosses a zero line, thus establishing a rough “average frequency” for the sample. If the count for the sample falls within a predetermined range, the sample is considered speech.

The Energy Detection algorithm allows user input at the component level of a background noise threshold range via the **AEnc_VADHiThr** and **AEnc_VADLoThr** parameters. Signals above the high threshold are declared speech and signals below the low threshold are declared silence.

SCR declares speech or silence for the current 1 millisecond sample based on the following:

- Previous 1 millisecond sample declaration (speech or silence)
- Combined Probability of Speech in relation to the Speech Probability Threshold (**AEnc_VADSpchPrO**)
- Combined Probability of Speech in relation to the Silence Probability Threshold (**AEnc_VADSpchPrC**)
- Trailing Silence (**AEnc_VADSpchHng**) relative to Silence Duration

The logic is as follows:

Previous sample = Silence

```
If Combined Probability of Speech > Speech Probability Threshold
    then Declare Speech
    else Declare Silence
```

Previous sample = Speech

```
If Combined Probability of Speech > Silence Probability Threshold
    then Declare Speech
    else If Silence Duration < Trailing Silence
        then Declare Speech
        else Declare Silence
```

12.4 [NFAS] Section

Non-Facility-Associated Signaling (NFAS) uses a single ISDN PRI D channel to provide signaling and control for up to 10 ISDN PRI lines. Normally, on an ISDN PRI line, one D channel is used for signaling and 23 B channels (bearer channels) are used for transferring information. In an NFAS configuration, therefore, one D channel can support the signaling and control for up to 239 B channels. The trunk that provides the signaling is called the primary D channel. The trunks that use all 24 channels as B channels are called NFAS trunks.

Note the following:

- For a board containing multiple primary D channels, the maximum number of trunks supported by each NFAS group on that board is reduced. This is due to the additional message load on the board’s CPU.
- NFAS is supported on ISDN NI-2, 4ESS, 5ESS, and DMS protocols.

CONFIG File Details

- NFAS D channel backup (DCBU) is supported on ISDN 4ESS, 5ESS, NI-2 protocol.
- When NFAS is used, the **SignalingType** parameter in the [lineAdmin] section of the CONFIG file must be modified. For details about this parameter modification, see [Section 14.2](#), “[lineAdmin.x] Parameters”, on page 124.

The CONFIG file contains an [NFAS] section and multiple [NFAS.x] sections. The [NFAS] section defines the number of NFAS instances created, that is, defines the number of NFAS groups. For each NFAS group, there is an [NFAS.x] section in the CONFIG file. For example, if there are two NFAS groups defined in the [NFAS] section, there will be two [NFAS.x] sections, [NFAS.1] and [NFAS.2].

NFAS parameters are modified by editing the respective lines in the [NFAS] and [NFAS.x] sections of the CONFIG file. For example, to increase the number of NFAS groups per board from one to four, change the value of **NFAS_INSTANCE_MAP** (parameter = 0x3E02) from a value of 1 (one group per board) to a binary value of 1111 (four NFAS groups per board) represented by 0xF.

Following is an excerpt from the [NFAS] section of a CONFIG file that illustrates that part of the file before and after editing.

Before editing:

```
[NFAS]
SetParm=0x3e02,0x1 !INSTANCE MAP, default = 1 (1 group/board)
```

After editing:

```
[NFAS]
SetParm=0x3e02,0xf !INSTANCE MAP - 4 NFAS groups/board
```

12.5 [CHP] Section

The Channel Protocol (CHP) component implements the telephony communication protocol that is used on each network interface. There are different versions of this component for handling different signaling types as well as different protocol types on different B channels. There is one CHP instance created for each B channel in the system.

The [CHP] section of the CONFIG file is a subset of the [TSC] section. Protocol-specific parameters, primarily in the form of variants, are defined in the [CHP] section. The selection of which of these protocol variants to use on which line (span) is determined in the [TSC] section. For more information on protocol variants selection, see [Section 12.6](#), “[TSC] Section”, on page 109.

A number of protocol variants are defined in the [CHP] section of the CONFIG file. Variants are defined by the Variant Define *n* command, where *n* is the variant identifier. The Variant Define *n* command defines variant “*n*” as all of the parameter definitions in the [CHP] section preceding the command.

Note: If a parameter is defined multiple times prior to the Variant Define *n* command, then only the last definition of the parameter is used for that variant.

[CHP] T1 Protocol variants are configured using Protocol Development Kit (PDK) parameters. For more information, see the *Dialogic® Global Call Country Dependent Parameters (CDP) for PDK Protocols Configuration Guide*.

Although protocol variants are defined in the [CHP] section, protocol variants are assigned in the [TSC] section of the CONFIG file. Selecting a particular Variant Define n is accomplished by changing the values of the **Inbound** and **Outbound** parameters for a particular line. The **Inbound** and **Outbound** parameters are the sixth and seventh parameters respectively in the defineBSet command in the [TSC] section of the CONFIG file.

For information about the defineBSet command and setting TSC parameters, see [Section 12.6, “\[TSC\] Section”](#), on page 109.

For information about each CHP parameter, see the following sections:

- [Section 14.6, “\[CHP\] Parameters”](#), on page 140
- [Section 14.7, “\[CHP\] ISDN Protocol Variant Definitions”](#), on page 141

12.6 [TSC] Section

The [TSC] section of the CONFIG file defines a set of B channels and associated characteristics using the defineBSet command. The syntax of the defineBSet command is:

```
defineBSet = SetId, LineId, StartChan, NumChans, BaseProtocol, Inbound, OutBound, DChanDesc,
Admin, Width, BChanId, SlotId, Direction, Count, [BChanId, SlotId, Direction, Count,] 0
```

To change a [TSC] parameter, you change the value of the applicable defineBSet parameter in the CONFIG file. For example, to change the protocol variant from 2 to 4 for both inbound and outbound call processing on all 30 channels of line 2, you would change the value of the **Inbound** and **Outbound** parameters for line 2 (**SetId=20**) from 2 to 4. For information on defining protocol variants, see [Section 12.5, “\[CHP\] Section”](#), on page 108.

Following is an excerpt from the [TSC] section of a CONFIG file that illustrates that part of the file before and after editing.

Before editing:

```
defineBSet=10,1,1,30, 0,1,1,1,20,1, 1,1,3,15, 16,17,3,15,0
defineBSet=20,2,1,30, 0,2,2,1,20,1, 1,1,3,15, 16,17,3,15,0
```

After editing:

```
defineBSet=10,1,1,30, 0,1,1,1,20,1, 1,1,3,15, 16,17,3,15,0
defineBSet=20,2,1,30, 0,4,4,1,20,1, 1,1,3,15, 16,17,3,15,0
```

For information about each TSC parameter, see [Section 14.9, “\[TSC\] defineBSet Parameters”](#), on page 149.

CONFIG File Parameter Reference 13 for Dialogic® HMP Software

This chapter lists and describes parameters contained in the CONFIG file for Dialogic® Host Media Processing (HMP) Software. Parameters are grouped according to the CONFIG file sections.

- [0x2c] Echo Cancellation Parameters 110
- [encoder] Parameters 112
- [0x3b] Conferencing Parameters 113
- [IPVSC] IP Media Parameters 115
- [decoder] Speed Control Parameter 120
- [sigDet] Parameters 120

Note: Not all parameters are included in each CONFIG file, as this depends on the license purchased. CONFIG file parameters that **should not be modified** by the user are omitted from this document.

Note: Modified CONFIG file parameters can be preserved and re-applied whenever a Dialogic® HMP software license is changed or re-activated by using the user configuration file, *Hmp.Uconfig*. For more information, see [Section 3.6, “Preserving Data in User Configuration Files”](#), on page 26.

13.1 [0x2c] Echo Cancellation Parameters

The [0x2c] section of the CONFIG file includes the following parameters used to adjust echo cancellation settings for specific devices in Dialogic® HMP software:

- EC Enablement
- EC Filter Length
- Echo Canceller NLP

EC Enablement

Number: 0x2c00

Description: The **EC Enablement** parameter allows control of the echo canceller used in conferencing, continuous speech processing (CSP) and other applications requiring echo cancellation.

Values:

- 0x0: EC disabled
- 0x1 [default]: EC enabled

Guidelines: This parameter is not included in the configuration file. To modify the parameter value, you must add this parameter manually in the configuration file in the [0x2c] section.

The **EC Enablement** parameter can be set in the CONFIG file for Dialogic® HMP software or for certain DNI Boards that have an echo canceller on the board itself. When set in the CONFIG file for the board, it affects EC on the DTI device of the board only. When set in the CONFIG file for the Dialogic® HMP software, it affects EC for the conferencing and CSP devices. For more information on configuring echo cancellation features, see [Section 11.4, “Configuring Host-Based Echo Cancellation”](#), on page 94. For more information about setting EC on DNI Boards, see [Section 14.1, “\[0x2c\] Echo Cancellation Parameters”](#), on page 123.

EC Filter Length

Number: 0x2c03

Description: The **EC Filter Length** parameter specifies the tail length, or tap length, of the enhanced echo canceller used by a conferencing device and by a continuous speech processing (CSP) device.

Note: The CSP API library provides a parameter, through `ec_setparm()`, for setting the tap length. The audio conferencing (DCB) API library does not. When available, the API library method is preferable for setting parameters. Be aware that setting the tap length using this CONFIG file parameter affects both the conferencing device and the CSP device. For more information on configuring echo cancellation features, see [Section 11.4, “Configuring Host-Based Echo Cancellation”](#), on page 94.

Values:

- 64: 8 ms
- 80: 10 ms
- 128 [default]: 16 ms
- 192: 24 ms
- 256: 32 ms
- 512: 64 ms

Guidelines: When determining the tail length value, consider the length of the echo path delay your system will encounter as well as your overall system configuration. Longer tail lengths are provided to handle echo with longer path delays. To achieve better performance (that is, faster convergence and less noise), use the shortest tail length setting that is consistent with the expected echo path delay. The tail length setting should be at least as long as the expected echo path delay, if not longer.

Echo Canceller NLP

Number: 0x2c01

Description: The **Echo Canceller NLP** parameter specifies whether non-linear processing (NLP) is enabled or not for all conferencing devices and for all continuous speech processing (CSP) devices.

Note: The CSP API library also provides a parameter, through `ec_setparm()`, for setting NLP. The audio conferencing (DCB) API library does not. When available, the API library method is preferable for setting parameters. Be aware that setting the NLP using this CONFIG file parameter affects both the conferencing device and the CSP device. For more information on configuring echo cancellation features, see [Section 11.4, “Configuring Host-Based Echo Cancellation”](#), on page 94.

Values:

- 0x0: NLP disabled
- 0x1 [default]: NLP enabled

Guidelines: The **Echo Canceller NLP** parameter must be turned off for automatic speech recognition applications. This parameter is not included in the configuration file. To modify the parameter value, you must add this parameter manually in the configuration file in the [0x2c] section.

13.2 [encoder] Parameters

The [encoder] section of the CONFIG file can include the following parameters:

- [RM_ISCR \(VAD Silence Compression\)](#)

RM_ISCR (VAD Silence Compression)

Number: 0x416

Description: The `dx_reciottdata()` function, used to record voice data, has two modes:

- `RM_VADNOTIFY` - generates a `TDX_VAD` event on detection of VAD during the recording operation.
- `RM_ISCR` - adds initial silence compression to the VAD detection capability.

Note: The `RM_ISCR` mode can only be used in conjunction with `RM_VADNOTIFY`.

Guidelines: The `RM_ISCR` parameter is used to add initial silence compression to the VAD capability. Initial silence refers to the amount of silence on the line *before* voice activity is detected. When using `RM_ISCR`, the default value for the amount of initial silence allowable is 3 seconds. Any initial silence longer than that is truncated (eliminated) to the default allowable

amount. This default value can be changed, however, by adding the RM_ISCR parameter to the [encoder] section of the CONFIG file.

For example, to change the default value for the amount of allowable silence to 6 seconds when using RM_ISCR, you would add the following to the [encoder] section:

```
SetParm=0x416,6
```

For more information about the **dx_reciottdata()** function and the VAD feature, see the *Dialogic® Voice API Library Reference* and the *Dialogic® Voice API Programming Guide*.

13.3 [0x3b] Conferencing Parameters

The [0x3b] section of the CONFIG file includes the following parameters associated with the conferencing device in Dialogic® HMP software:

- [Comfort Noise Generation in Conferencing](#)
- [CSUMS_AGC_low_threshold](#) (Conferencing AGC Noise Level Threshold)
- [NotifyAddToneLevel](#)
- [NotifyAddToneFreq](#)
- [NotifyAddToneLength](#)

Comfort Noise Generation in Conferencing

Number: 0x3b38

Description: Comfort noise generation can be generated on the outputs of a conference whenever the conference output drops below the no-talker level across the board. The comfort noise generation parameter is used to enable or disable comfort noise generation (CNG).

Values:

- 0 [default]: comfort noise generation disabled
- 1: comfort noise generation enabled

Guidelines: It is recommended that you accept the default values for setting the silence threshold, noise amplitude, and hang time parameters. If it is necessary to modify these values, you must manually add the parameters to the CONFIG file in the [0x3b] section. The parameters are:

```
SetParm=0x3b39,100 ! Silence threshold, default is 100 (-43dbm), 1630  
(-18.5dbm) is maximum
```

```
SetParm=0x3b3a,200 ! Noise amplitude, default is 200 (-43dbm), 3270  
(-18.5dbm) is maximum
```

```
SetParm=0x3b3b,25 ! Hang time, default is 25 (25 gives 12msx25=300ms,  
but actually results in 620 ms due to exponential averaging)
```

CSUMS_AGC_low_threshold (Conferencing AGC Noise Level Threshold)

Number: 0x3b1f

Description: The **CSUMS_AGC_low_threshold** parameter defines the upper threshold for noise level estimates. Any signal above this threshold is considered speech. Thus, this threshold should be set quite high in order to let the AGC algorithm determine when there are voiced and unvoiced periods. The parameter is given in terms of the average level.

CSUMS_AGC_low_threshold is defined as: $10^{(\text{outputlevel in dB}/20) * 223}$. Multiplying by 2^{23} converts the value into a linear 24-bit value that accommodates the 24-bit DSPs used on the DM3 boards.

Values: 0x0020c5 to 0x0732ae (-60 dB_{avg} to -25 dB_{avg}).
The default value is 0x0147ae (-40 dB_{avg}).

Guidelines: The default value of -40 dB is the best setting for most applications. To modify the parameter value, you must add this parameter manually in the configuration file in the [0x3b] section.

The following example sets the AGC noise level to a value of -50 dB_{avg}:

```
SetParm=0x3b1f,0x00679f
```

The calculation to get the hexadecimal value for an AGC noise threshold level of -50 dB_{avg} is:

$$10^{(-50/20) * 223} = 0x00679f$$

It is recommended that the value be set in the range of -60 dB to -40 dB. Do not exceed the AGC high level threshold which is set to -34.6 dB in the current DM3 system.

NotifyAddToneLevel

Number: 0x3b24

Description: The NotifyAddToneLevel parameter specifies the amplitude of the conference notification tone.

Values:

- 1673747 [default]: this is equivalent to -14dB
- User-specified range: This field accepts any value, and it is the responsibility of the user application to ensure that the values are within an acceptable range for the market environment for which it is deployed.

Guidelines: The format of the parameter value in the CONFIG file represents the equivalent natural number of the target decibel. For example, when setting the value of the amplitude to -14dB, the entry in the file would be:

```
SetParm= 0x3b24, 1673747
```

The conversion formula used is as follows:

$$\text{Natural number} = 10^{\text{dB}/20} * 223$$

where dB is the desired decibel and 223 is a normalization factor.

NotifyAddToneFreq

Number: 0x3b25

Description: The NotifyAddToneFreq parameter specifies the frequency of the conference notification tone (in 1 Hz units).

Values: 50 to 3500 Hz

Default: 975 Hz

Guidelines: The format of the parameter value in the CONFIG file should be entered in units of 1 Hz. For example, to specify a 110 Hz frequency, the entry would be:

```
SetParm= 0x3b25, 110
```

If the value entered is outside the valid range, the default is set.

NotifyAddToneLength

Number: 0x3b26

Description: The NotifyAddToneLength parameter specifies the length of the conference notification tone (in 10 ms units).

Values:

- 30 ms:
- User-specified range: The user-specified range field accepts any value, and it is the responsibility of the user application to ensure that the values are within an acceptable range for the market environment for which it is deployed.

Guidelines: The format of the parameter value in the CONFIG file should be entered in units of 10 ms. For example, to specify a 50 ms length, the entry would be:

```
SetParm= 0x3b26, 5
```

Note: The conference tone definition applies to all conferences. To avoid tone conflicts between conferences, only a single tone specification is applicable for all active conferences.

Note: Enabling and disabling the conference notification tone behaves in the same way as currently supported when a conference is established. That is, notification is either ON or OFF. It is applicable to both conference party addition and removal. For example, this feature does not support enabling party addition (entry) while disabling party removal (exit) notification. The conference notification setting for both operations is either enabled (ON) or disabled (OFF).

13.4 [IPVSC] IP Media Parameters

The [IPVSC] section of the CONFIG file includes the following parameters associated with the IP media device in Dialogic® HMP software:

- [UDP Port Base for Audio RTP](#)
- [UDP Port Base for Video RTP](#)

CONFIG File Parameter Reference for Dialogic®HMP Software

- [EC Enablement](#)
- [EC Tail Length](#)
- [PrmPlr_LatencyAlg_Audio \(Latency Mode\)](#)
- [PrmRxLatencyFrameInit_Audio \(PLR Initial Latency\)](#)
- [PrmRxLatencyFrameMax_Audio \(PLR Maximum Latency\)](#)
- [Receive-only RFC 2833 Mode](#)
- [RTCP Enhanced Reporting](#)
- [RTCP Event Frequency](#)

UDP Port Base for Audio RTP

Number: 0x4005

Description: This parameter specifies the UDP port base for audio RTP. Two ports (1 RTP, 1 RTCP) are used for each instance of an IP media device. The default value for the base port is 49152. For example, in a configuration with 400 instances of IP media devices, the range of values would be 49152 to 49951. RTP and RTCP use paired ports; the even one is for RTP and the odd one is for RTCP. The first instance used would get 49152 for RTP and 49153 for RTCP. This parameter allows you to set the range used by Dialogic® HMP software in order to avoid conflicts with other entities that use UDP ports.

Values: 0 to 0xffff. Default value for base port is 49152.

Guidelines: Although the range of values is 0 to 0xffff, the UDP standard may specify a more restricted range. Additionally, the range of values varies depending on the number of instances of IP media devices being used.

UDP Port Base for Video RTP

Number: 0x4006

Description: This parameter specifies the UDP port base for video RTP. Two ports (1 RTP, 1 RTCP) are used for each instance of an IP media device. The default value for the base port is 57344. For example, in a configuration with 400 instances of IP media devices, the range of values would be 57344 to 58143. RTP and RTCP use paired ports; the even one is for RTP and the odd one is for RTCP. The first instance used would get 57344 for RTP and 57345 for RTCP. This parameter allows you to set the range used by Dialogic® HMP software in order to avoid conflicts with other entities that use UDP ports.

Values: 0 to 0xffff. Default value for base port is 57344.

Guidelines: Although the range of values is 0 to 0xffff, the UDP standard may specify a more restricted range. Additionally, the range of values varies depending on the number of instances of IP media devices being used.

EC Enablement

Number: 0x1b12

Description: The **EC Enablement** parameter specifies whether echo cancellation is enabled or not in Dialogic® HMP software.

Values:

- 0 [default]: echo cancellation disabled
- 1: echo cancellation enabled

Guidelines: Use the **ipm_SetParm()** function to turn on echo cancellation on a per-channel basis. See [Section 11.4.1, “Echo Cancellation on IP Media Devices”](#), on page 94 for more information.

EC Tail Length

Number: 0x1b13

Description: The **EC Tail Length** parameter specifies the tail length of the echo canceller in Dialogic® HMP software.

Values:

- 128 [default]: 16 ms
- 512: 64 ms

Guidelines: Use the **ipm_SetParm()** function to modify the echo canceller tail length on a per-channel basis. See [Section 11.4.1, “Echo Cancellation on IP Media Devices”](#), on page 94 for more information.

PrmPlr_LatencyAlg_Audio (Latency Mode)

Number: 0x1b95

Description: This parameter defines the mode of operation for the jitter buffer. By default, the jitter buffer uses the adaptive mode, which means latency can grow until the available number of frames (defined by the **PrmRxLatencyFrameMax_Audio** parameter) is depleted. Using the fixed mode, the number of frames buffered can grow up to 2 times the starting value (defined by the **PrmRxLatencyFrameInit_Audio** parameter). If the “Initial Latency” value is greater than or equal to 2 times frames per packet, then the maximum number of frames buffered is 2 times the “Initial Latency” value.

Values:

- 0 [default]: adaptive mode enabled
- 1: fixed mode enabled

Guidelines: Use the adaptive mode to minimize audio loss due to abnormal packet reception conditions. Use the fixed mode to minimize latency growth by sacrificing audio quality. This parameter is not included in the configuration file. To modify the parameter value, you must add this parameter manually in the configuration file in the [IPVSC] section.

PrmRxLatencyFrameInit_Audio (PLR Initial Latency)

Number: 0x1b07

Description: This parameter specifies the amount of packet loss recovery (PLR) latency (delay) that can be introduced by defining the initial number of frames that can be buffered. This parameter defines the starting value for initial latency.

Note: When the fixed mode is enabled (see **PrmPlr_LatencyAlg_Audio** parameter), the number of frames buffered can grow up to 2 times the starting value. If the initial latency value is less than 2 times frames per packet (FPP), then the maximum number of frames buffered is 2 times FPP. If the initial latency value is greater than or equal to 2 times FPP, then the maximum number of frames buffered is 2 times the initial latency value. For example, if the parameter value is 6, the maximum number of frames that can be buffered is 12.

The packet loss recovery module attempts to restore packets arriving at the receive end as close as possible to their original time-stamped positions. Arriving packets are decomposed into individual frames, each with a unique time stamp.

Each new frame is then stored in a jitter buffer before being sent to the decoder. This is done to allow packets arriving out of order to be inserted in the queue in the correct order. The size of this jitter buffer is defined by the number of frames stored and is controlled by the **PrmRxLatencyFrameInit_Audio**, **PrmRxLatencyFrameMax_Audio**, and **PrmPlr_LatencyAlg_Audio** parameters.

Values: 1 to **PrmRxLatencyFrameMax_Audio** value (frames). Default value is 6.

Guidelines: This parameter is not included in the configuration file. To modify the parameter value, you must add this parameter manually in the configuration file in the [IPVSC] section.

PrmRxLatencyFrameMax_Audio (PLR Maximum Latency)

Number: 0x1b08

Description: This parameter defines the maximum number of frames to be buffered in the Packet Loss Recovery (PLR) frame list. This parameter adds latency only when the buffer is already filled and additional frames arrive before there is space in the buffer. This provides for bursts of packets to arrive, which would have to be discarded otherwise.

The Packet Loss Recovery module attempts to restore packets arriving at the receive end as close as possible to their original time-stamped positions. Arriving packets are decomposed into individual frames, each with a unique time stamp.

Each new frame is then stored in a jitter buffer before sending it to the decoder. This is done to allow packets arriving out of order to be inserted in the queue in the correct order. The size of this jitter buffer is defined by the number of frames stored and is controlled by the

PrmRxLatencyFrameInit_Audio, **PrmRxLatencyFrameMax_Audio**, and **PrmPlr_LatencyAlg_Audio** parameters.

Values: 30 to 200 (frames). Default value is 100.

Note: On the Windows® operating system, the upper limit of the value is dependent on channel density and Kernel memory availability.

Guidelines: While the number of frames to be buffered should be set as high as possible for best quality, too high a value will add unnecessary latency to the system. Generally, the number of frames buffered should be the same size or slightly larger than the number of frames per packet.

The coder used and its coder frame slice affects the frames per packet or PLR frames per packet. The coders and their coder frame slices are: G.711 (10 ms frame slice), G.723 (30 ms frame slice), G.729 (10 ms frame slice), G.726 (20 ms frame slice). For example, the G.711 coder with 30 ms frame size uses 1 frame per packet but the PLR module stores this data as three 10 ms frames.

Not all coders are supported in all libraries. For more information on coder support in the Global Call API, see the *Dialogic® Global Call IP Technology Guide*. For more information on coder support in the IP media library (IPML) API, see the *Dialogic® IP Media Library API Programming Guide and Library Reference*.

This parameter is not included in the configuration file. To modify the parameter value, you must add this parameter manually in the configuration file in the [IPVSC] section.

Receive-only RFC 2833 Mode

Number: 0x4019

Description: This parameter specifies whether receive-only RFC 2833 mode is set or not on a board basis.

Values:

- 0: receive-only RFC 2833 mode disabled
- 1: receive-only RFC 2833 mode enabled

Guidelines: This parameter is not included in the configuration file. To modify the parameter value, you must add this parameter manually in the configuration file in the [IPVSC] section. For more information on receive-only RFC 2833 mode, see the *Dialogic® IP Media Library API Programming Guide and Library Reference*.

RTCP Enhanced Reporting

Number: 0x401f

Description: Enables transmission of the RTCP-XR (extended) and RTCP-HR (high resolution) blocks in RTCP packets.

Values: 0 (off) and 1 (on). Default value is 0.

Guidelines: The following example shows how to add this parameter in the *HMP.Uconfig* file. For more information on RTCP reporting, see the *Dialogic® IP Media Library API Programming Guide and Library Reference*.

CONFIG File Parameter Reference for Dialogic®HMP Software

```
SetParm=0x401f, 1 ! turn on RTCP-XR/HR reporting
```

RTCP Event Frequency

Number: 0x4020

Description: Controls how often RTCP reporting events are sent to the application. For example, when set to 5, every fifth RTCP reporting event is sent to the application.

Values: Values: 0 to 255. Default value: 0 (don't send reporting event).

Guidelines: The following example shows how to add this parameter in the *HMP.Uconfig* file. For more information on RTCP reporting, see the *Dialogic® IP Media Library API Programming Guide and Library Reference*.

```
SetParm=0x4020, 2 ! receive an event on every second RTCP message
```

13.5 [decoder] Speed Control Parameter

The [decoder] section of the CONFIG file includes the following parameter associated with the voice device in Dialogic® HMP software:

- [Speed Control Enablement](#)

Speed Control Enablement

Number: 0x31e

Description: The **Speed Control Enablement** parameter specifies whether the speed control feature in the voice API library is enabled or not.

Values:

- 0 [default]: speed control disabled
- 1: speed control enabled

Guidelines: For more information on speed control, see the *Dialogic® Voice API Library Reference* and the *Dialogic® Voice API Programming Guide*.

13.6 [sigDet] Parameters

The signal detector section of the CONFIG file may include qualification templates for positive answering machine detection (PAMD) and positive voice detection (PVD) used in call progress analysis.

A tech note was written to provide instructions for modifying the PAMD and PVD qualification template parameters on Dialogic® DM3 boards to accomplish higher successful PAMD and PVD rates. For further information about these parameters, see the tech note at <http://www.dialogic.com/support/helpweb/dxall/tnotes/legacy/2000/tm030.htm>. Although the tech

CONFIG File Parameter Reference for Dialogic®HMP Software

note was written for Dialogic® System Software Release 5.1.1 Feature Pack 1 for Windows®, the information applies to subsequent releases.

The modified parameters have now become the default in the firmware, so it is no longer necessary to tune the PAMD and PVD parameters as explained in the tech note. Operating with these new default values should result in improved accuracy of call progress analysis on Dialogic® DM3 boards. However, although these values are the most commonly used, they may not be suitable for every application environment. If needed, the PAMD and PVD templates are still tunable, as explained in the tech note, to achieve even better results based on the individual application environment.

The default PAMD qualification template ID is 106561 (0x1a041), but other valid PAMD qualification template IDs that can be defined in the CONFIG file are:

- 106564 (0x1a044)
- 106565 (0x1a045)
- 106566 (0x1a046)
- 106567 (0x1a047)

The default PVD qualification template ID is 128193 (0x1f4c1), but other valid PVD qualification template IDs that can be defined in the CONFIG file are:

- 128194 (0x1f4c2)
- 128195 (0x1f4c3)
- 128196 (0x1f4c4)
- 128197 (0x1f4c5)

CONFIG File Parameter Reference 14

for Dialogic® HMP Interface Boards

This chapter lists and describes the parameters contained in the CONFIG files used by Dialogic® HMP Interface Boards (also known as Dialogic® DNI boards). Parameters are grouped according to the CONFIG file sections.

- [0x2c] Echo Cancellation Parameters 123
- [lineAdmin.x] Parameters 124
- [NFAS] Parameters 132
- [NFAS.x] Parameters 133
- [CCS] Parameters 135
- [CHP] Parameters 140
- [CHP] ISDN Protocol Variant Definitions 141
- [TSC] Parameters 149
- [TSC] defineBSet Parameters 149
- [sigDet] Parameters 156

Note: Not all parameters are included in each CONFIG file, as this depends on the board supported by that particular file. CONFIG file parameters that **should not be modified** by the user are omitted from this document. Exceptions are made for parameters that, although they should not be modified by the user, are needed in understanding a particular set of parameters (for example, the [TSC] `defineBSet` **Width** parameter). For these exceptions, the parameter description states that the value should not be modified by the user.

Note: Modified CONFIG file parameters can be preserved and re-applied whenever a Dialogic® HMP software license is changed or re-activated by using the user configuration file, *Hmp.Uconfig*. For more information, see [Section 3.6, “Preserving Data in User Configuration Files”](#), on page 26.

Note: CAS and R2MF protocols are configured using Protocol Development Kit (PDK) parameters. For more information, see the *Dialogic® Global Call Country Dependent Parameters (CDP) for PDK Protocols Configuration Guide*.

14.1 [0x2c] Echo Cancellation Parameters

The [0x2c] section of the CONFIG file defines parameters used to set the echo cancellation feature of the enhanced echo canceller for a digital network interface device (DTI device).

EC Tail Length

Number: 0x2c03

Description: The **EC Tail Length** parameter specifies the tail length, or tap length, of the enhanced echo canceller for a digital network interface device (DTI device).

Note: The **EC Tail Length** parameter only applies to DNI Boards that have an echo canceller on the board itself, such as the Dialogic® DNI/601TEPHMP and the DNI/310TEPEHMP boards. See [Table 1, “High-Level Feature Support by Platform”](#), on page 20.

Values:

- 0x80: 16 ms
- 0xC0: 24 ms
- 0x100: 32 ms
- 0x200 [default]: 64 ms

Guidelines: When determining the tail length value, consider the length of the echo path delay your system will encounter as well as your overall system configuration. Longer tail lengths are provided to handle echo with longer path delays. To achieve better performance (that is, faster convergence and less noise), use the shortest tail length setting that is consistent with the expected echo path delay. The tail length setting should be at least as long as the expected echo path delay, if not longer.

EC Enablement

Number: 0x2c00

Description: The **EC Enablement** parameter specifies whether echo cancellation is enabled or not on the board.

Note: The **EC Enablement** parameter only applies to DNI Boards that have an echo canceller on the board itself, such as the Dialogic® DNI/601TEPHMP and the DNI/310TEPEHMP boards. See [Table 1, “High-Level Feature Support by Platform”](#), on page 20. The preferred method for enabling and disabling echo cancellation is to do so on a per call basis in real time using the `gc_SetConfigData()` function. For more information, see [Section 11.6, “Configuring On-Board Echo Cancellation”](#), on page 101.

Values:

- 0x0: Echo cancellation disabled
- 0x1 [default]: Echo cancellation enabled

Guidelines: None

EC NLP

Number: 0x2c01

Description: The **EC NLP** parameter specifies whether non-linear processing (NLP) is enabled or not on the board.

Note: The **EC NLP** parameter only applies to DNI Boards that have an echo canceller on the board itself, such as the Dialogic® DNI/601TEPHMP and the DNI/310TEPEHMP boards. See [Table 1, “High-Level Feature Support by Platform”](#), on page 20. The preferred method for enabling and disabling echo cancellation with NLP is to do so on a per call basis in real time using the **gc_SetConfigData()** function. For more information, see [Section 11.6, “Configuring On-Board Echo Cancellation”](#), on page 101.

Values:

- 0x0: EC NLP disabled
- 0x1 [default]: EC NLP enabled

Guidelines: The EC NLP parameter must be turned off for automatic speech recognition applications.

14.2 [lineAdmin.x] Parameters

For DNI boards, the line administration parameters are associated with an individual T1 or E1 trunk. The parameters defined in the [lineAdmin.x] section are associated with line x. For example, parameters in the [lineAdmin.3] section of the CONFIG file are associated with line 3. Line administration parameters include:

- [LineType](#) (Line Type)
- [SignalingType](#) (Signaling Type)
- [Coding](#) (Coding)
- [ZeroCodeSuppression](#) (Zero Code Suppression)
- [FramingAlgorithm](#) (CRC Checking)
- [LOSDeclaredTime](#) (LOS Declared Time)
- [LOSClearedTime](#) (LOS Cleared Time)
- [REDCFADecay](#) (RED CFA Decay)
- [REDCFADeclareTime](#) (RED CFA Declare Time)
- [REDCFAClearedTime](#) (RED CFA Cleared Time)
- [YellowCFADeclareTime](#) (Yellow CFA Declare Time)
- [YellowCFAClearTime](#) (Yellow CFA Clear Time)
- [RAICRCCFADeclareTime](#) (RAI CRC CFA Declare Time)
- [RAICRCCFAClearTime](#) (RAI CRC CFA Clear Time)
- Initial Alarm State
- BPVS Threshold Range
- OOF Threshold Range

- [FERR Threshold Range](#)
- [ECS Threshold Range](#)
- [CECS Threshold Range](#)

LineType (Line Type)

Number: 0x1601

Description: The **LineType** parameter defines the physical line type (T1 or E1) and the framing format (for example, D4 or ESF). Framing formats include:

D4 framing (D4)

For T1 lines, in D4 framing, 12 frames of 193 bits each (2,316 bits total) constitute a superframe. This framing format supports AB signaling.

Extended superframe (ESF)

For T1 lines, in ESF framing, 24 frames of 193 bits each (4,632 bits total) constitute an extended superframe. This framing format supports ABCD signaling.

CEPT E1

For E1 lines, uses CEPT E1 framing.

Cyclic redundancy check 4 (CRC-4) multi-frame

For E1 lines, this provides for CRC error detection. In this framing format, E1 lines have an extra framing that can coexist with the standard framing and the time slot 16 signaling framing. This extra framing is used to compute and check CRC-4 on incoming lines, to detect remote CRC-4 alarms, and to notify the remote line of CRC-4 errors. When CRC-4 framing is enabled, all CRC-related statistics will be collected and reported, and the RAI_CRC_CFA alarm will be detected and reported.

Values:

- 0: T1 D4 (dsx1_D4)
- 1: T1 ESF (dsx1_ESF)
- 2: E1 CEPT E1 (dsx1_E1)
- 3: E1 CRC 4 multi-frame (dsx1_E1_CRC)

SignalingType (Signaling Type)

Number: 0x1602

Description: The **SignalingType** parameter defines the signaling type to be used by the T1 or E1 line. Signaling types include:

Channel associated signaling (CAS)

In CAS, the signaling for each channel is directly associated with that channel. T1 robbed-bit signaling is an example of CAS.

Common channel signaling (CCS)

In CCS, a common channel carries the signaling for all of the channels on that T1 or E1 line. ISDN is an example of CCS, where the D channel is used to carry the signaling for all of the B channels.

CONFIG File Parameter Reference for Dialogic® HMP Interface Boards

Clear channel signaling (Clear)

In this type, none of the channels on the T1 or E1 line are used for signaling purposes. Clear channel signaling is the ability to access telephony channels in the system and configure them to a user-defined call control protocol, or to simply leave the lines 'clear'. The resources should have access to the telephony bus for media routing purposes, as well as signal detection, signal generation, and tone generation capabilities, if desired.

Note: In a clear channel configuration, the CT Bus does not preserve frames, so any in-band signaling is lost. That is, T1 CAS robbed bit signaling cannot be performed on a line configured to use clear channel signaling.

Values:

- 4: CAS
- 5: CCS
- 6: Clear

Guidelines: When using Non-Facility-Associated Signaling (NFAS), Signaling Type is dependent on whether the T1 line is a primary, standby (DCBU), or NFAS ISDN trunk. The primary trunk must be set to CCS, and the standby and NFAS trunks must be set to Clear.

Note: NFAS is supported on ISDN NI-2, 4ESS, 5ESS and DMS protocols, and NFAS D channel backup (DCBU) is supported on ISDN 4ESS, 5ESS, NI-2 protocols.

For additional parameters that need to be modified for NFAS, see [Section 14.3, “\[NFAS\] Parameters”](#), on page 132.

Coding (Coding)

Number: 0x1603

Description: The **Coding** parameter defines the coding scheme to be used by a digital line type. Coding schemes include:

Modified alternate mark inversion (B8ZS)

This is a modified AMI code that only applies to T1 lines and is used to preserve one's density on the line. Whenever eight consecutive zeros occur on the line, they are replaced by an 8-bit string that violates the bipolar signaling. If the preceding pulse was positive, the polarity of the substituted eight bits is 000+-0-+. If the preceding pulse was negative, the polarity of the substituted eight bits is 000-+0+-.

Alternate mark inversion (AMI)

This is a bipolar signal conveying binary digits in which each successive 1 (mark) is of the opposite polarity. If the previous mark was a positive pulse, then the next mark will be a negative pulse. Spaces have an amplitude of zero (no pulse).

High density bipolar three zero (HDB3)

High density bipolar three zero is a modified AMI code that only applies to E1 and is used to preserve one's density on the line. Whenever four consecutive zeros appear, the four-zeros group is replaced with an HDB3 code. This could be either of two HDB3 codes, depending on whether there was an odd or even number of ones since the last bipolar violation. If an odd number of ones occurred, the substituted four bits are 000V, where V represents a bipolar

violation. If an even number of ones occurred, the substituted four bits are P00V, where P represents a parity bit and V represents a bipolar violation.

Values:

- 7: B8ZS
- 8: AMI
- 9: HDB3

ZeroCodeSuppression (Zero Code Suppression)

Number: 0x1604

Description: The **ZeroCodeSuppression** parameter is an algorithm used by T1 lines that inserts a 1 bit into a stream to prevent the transmission of eight or more consecutive 0 bits, which could produce timing errors. Instead, this algorithm maintains a minimum one's density to reduce timing errors.

Values:

- 10: Bell - Bell zero code suppression (Jam Bit 7)
- 11: GTE - GTE zero code suppression (Jam Bit 8, except in signaling frames when Jam Bit 7 is used if the signaling bit is 0)
- 12: DDS - Digital Data Service zero code suppression (data byte is replaced with 10011000)
- 13: None - No zero code suppression is used.

Guidelines: The **ZeroCodeSuppression** parameter is used when AMI line-coding is used, that is, when the **Coding** parameter is set to AMI. Since AMI does not perform zero code suppression, the **ZeroCodeSuppression** parameter ensures there are no long strings of consecutive zeros on the line.

If the **Coding** parameter is set to B8ZS or HDB3 (for E1), then zero code suppression is performed by the line-coding and the **ZeroCodeSuppression** parameter is ignored.

FramingAlgorithm (CRC Checking)

Number: 0x1624

Description: A T1 front end can run two different framing algorithms when configured as extended superframe (ESF): a default algorithm and an alternate CRC-6 checking algorithm. The CRC-6 checking algorithm allows the circuit to confirm the CRC-6 bits in the received multiframe, as a guard against mimic framing patterns, before forcing a new frame alignment. The CRC Checking parameter allows you to enable the CRC-6 checking algorithm.

Values:

- 0: Default algorithm
- 1: Alternate CRC-6 checking algorithm

CONFIG File Parameter Reference for Dialogic® HMP Interface Boards

Guidelines: This parameter only applies to T1 trunks whose Line Type parameter (0x1601) is set to 1 (dsx1_ESF). For all other Line Types, this parameter is invalid.

To include this parameter and enable CRC checking, you must edit the applicable CONFIG file by adding the following line at the end of each [lineAdmin] section of the CONFIG file:

```
SetParm=0x1624,1! CRC checking OFF=0 (default), CRC checking ON=1
```

After editing the CONFIG file, you will need to generate a new FCD file. Refer to [Section 3.7](#), “Modifying the FCD File By Editing the CONFIG File”, on page 28 for more information.

LOSDeclaredTime (LOS Declared Time)

Number: 0x160c

Description: The **LOSDeclaredTime** parameter defines the number of milliseconds for which no signal is detected at the input port before a loss of signal (LOS) or carrier-failure alarm (CFA) can be declared.

Values: 0 to 2500 (milliseconds)

LOSClearedTime (LOS Cleared Time)

Number: 0x160d

Description: The **LOSClearedTime** parameter defines the number of milliseconds for which a signal must be detected at the input port before a declared LOS or CFA can be cleared.

Values: 0 to 2500 (milliseconds)

REDCFADecay (RED CFA Decay)

Number: 0x1609

Description: The **REDCFADecay** parameter is the denominator of the fraction used to calculate the decay slope in the integration process when RED CFA condition has not been declared and LOS or LOF is intermittent.

Values: 4 to 15 (1/4 to 1/15)

REDCFADeclareTime (RED CFA Declare Time)

Number: 0x160a

Description: The **REDCFADeclareTime** parameter defines the number of milliseconds that a red alarm condition must be received at the input port before a RED CFA condition can be declared.

Values: 0 to 2500 (milliseconds)

REDCFAClearedTime (RED CFA Cleared Time)

Number: 0x160b

Description: The **REDCFAClearedTime** parameter defines the number of milliseconds that a normal signal must be received at the input port before a declared RED CFA condition can be cleared.

Values: 1000 to 15000 (milliseconds)

YellowCFADeclareTime (Yellow CFA Declare Time)

Number: 0x160e

Description: The **YellowCFADeclareTime** parameter defines the number of milliseconds for which a Remote Alarm Indication (RAI) signal is detected at the input port before a yellow CFA condition can be declared.

Values: 0 to 2500 (milliseconds)

YellowCFAClearTime (Yellow CFA Clear Time)

Number: 0x160f

Description: The **YellowCFAClearTime** parameter defines the number of milliseconds for which a RAI signal is not detected at the input port before a declared yellow CFA condition can be cleared.

Values: 0 to 2500 (milliseconds)

RAICRCCFADeclareTime (RAI CRC CFA Declare Time)

Number: 0x1610

Description: The **RAICRCCFADeclareTime** parameter defines the number of seconds for which a RAI signal and CRC Error is detected at the input port before a RAI CRC CFA can be declared.

Values: 0 to 450 (milliseconds)

RAICRCCFAClearTime (RAI CRC CFA Clear Time)

Number: 0x1611

Description: The **RAICRCCFAClearTime** parameter defines the number of seconds for which a RAI signal and Remote CRC Error is not detected at the input port before a declared RAI CRC CFA can be cleared.

Values: 0 to 450 (milliseconds)

InitialBitPattern (Initial CAS Signaling Bit Pattern)

Number: 0x1625

Description: The **InitialBitPattern** parameter defines the values of the CAS ABCD signaling bits that are transmitted for all channels on the specified line at the time the firmware is downloaded and initialized.

Values: 0x0 to 0xf, where the hexadecimal value represents the binary ABCD bit values. For example, 0xd defines the ABCD bit pattern as 1101.

Guidelines: For a T1 line, the default is 0x0. For an E1 line, the default is 0xd.

Initial Alarm State

Number: 0x1626

Description: Trunk preconditioning allows boards to be placed in an alarm state during board initialization.

While Dialogic® boards are starting up and are connected to network trunks, there is a period where the digital network interface begins transmitting frames and idle CAS signaling. This state can exist for a minute or more before the board and application program are prepared to handle calls. During this time, a service provider (CO) may begin alerting (ringing) for inbound calls, but the calls cannot be answered because the board or application has not finished initializing. This results in lost calls.

The Initial Alarm State parameter allows you to place trunks in an alarm state while the board is being initialized. This prevents the service provider from sending calls. The alarm clears and the trunks go inservice as soon as the first **gc_OpenEx()** (or **gc_Open()**) function for a trunk is executed in the application. (For T1 trunks, alarms clear after a 15-second delay to verify valid signaling.)

Values:

- 0: No alarm is transmitted on the trunk; all trunk time slots signal Out of Service (Default)
- 1: TransmitAIS - An Alarm Indication Signal (AIS) alarm is transmitted on the trunk.
- 2: TransmitRAI - A Remote Alarm Indication (RAI) alarm is transmitted on the trunk.

Note: The default behavior also applies if the Initial Alarm State parameter is not used. The Initial Alarm State parameter setting applies only upon board initialization. After the initial alarm state is cleared (by **gc_OpenEx()** or **gc_Open()**), trunks do not return to the initial alarm state unless you restart the board. Stopping the board or unloading the application does not return a board to its initial alarm state.

Note: An RAI alarm could result from a response to a loss of sync from the network side. If the Initial Alarm State parameter is set to 2, but a loss of sync (or similar condition) persists even after the board is initialized and **gc_OpenEx()** or **gc_Open()** is invoked, the RAI will continue to be transmitted until the network condition is cleared.

Note: A board could transmit other alarms, as a response to a network condition, that are unrelated to this parameter. Those alarms will persist until the network condition is cleared.

Guidelines: To use the Initial Alarm State parameter, it must be manually added to the CONFIG file that was selected for your board. The hexadecimal parameter number 0x1626 must be added in the [lineAdmin] section for each trunk on the board. For example:

```
[lineAdmin.1]
SetParm=0x1626,1      ! IntialAlarmState (None=0, AIS=1, RAI=2)

[lineAdmin.2]
SetParm=0x1626,1      ! IntialAlarmState (None=0, AIS=1, RAI=2)

[lineAdmin.3]
SetParm=0x1626,1      ! IntialAlarmState (None=0, AIS=1, RAI=2)

[lineAdmin.4]
SetParm=0x1626,1      ! IntialAlarmState (None=0, AIS=1, RAI=2)
```

BPVS Threshold Range

Number: 0x1639

Description: To support the Dialogic® Global Call Alarm Management System (GCAMS) enhancements, this parameter allows you to change the default threshold value of the Bipolar Violation Count Saturation (BPVS) alarm (T1 or E1 alarm) by adding a parameter in the CONFIG file (.config) that corresponds to the PCD file in use on your board. The change is made per span. After threshold parameters are added, the FCD file is automatically updated when the new PCD file and modified CONFIG files are downloaded to the board.

Values: 0 to 255

Guidelines: To modify the default threshold for the BPVS alarm, add the following parameter (sample value of 100 shown) to the [lineAdmin.x] section of a CONFIG file:

```
SetParm=0x1639,100 ! BPVS threshold range 0 - 255, default 255
```

OOF Threshold Range

Number: 0x163a

Description: To support the Dialogic® Global Call Alarm Management System (GCAMS) enhancements, this parameter allows you to change the default threshold value of the Out of Frame Error Count Saturation (OOF) alarm (T1 alarm) by adding a parameter in the CONFIG file (.config) that corresponds to the PCD file in use on your board. The change is made per span. After threshold parameters are added, the FCD file is automatically updated when the new PCD file and modified CONFIG files are downloaded to the board.

Values: 0 to 255

Guidelines: To modify the default threshold for the OOF alarm, add the following parameter (sample value of 100 shown) to the [lineAdmin.x] section of a CONFIG file:

```
SetParm=0x163a,100 ! OOF threshold range 0 - 255, default 0
```

FERR Threshold Range

Number: 0x163b

Description: To support the Dialogic® Global Call Alarm Management System (GCAMS) enhancements, this parameter allows you to change the default threshold value of the Two out of

CONFIG File Parameter Reference for Dialogic® HMP Interface Boards

Four Consecutive Frame Bits (F bit) in Error (FERR) alarm (T1 alarm) by adding a parameter in the CONFIG file (.config) that corresponds to the PCD file in use on your board. The change is made per span. After threshold parameters are added, the FCD file is automatically updated when the new PCD file and modified CONFIG files are downloaded to the board.

Values: 0 to 255

Guidelines: To modify the default threshold for the FERR alarm, add the following parameter (sample value of 100 shown) to the [lineAdmin.x] section of a CONFIG file:

```
SetParm=0x163b,100 ! FERR threshold range 0 - 255, default 0
```

ECS Threshold Range

Number: 0x163c

Description: To support the Dialogic® Global Call Alarm Management System (GCAMS) enhancements, this parameter allows you to change the default threshold value of the Frame Bit Error Count Saturation (ECS) alarm (T1 or E1 alarm) by adding a parameter in the CONFIG file (.config) that corresponds to the PCD file in use on your board. The change is made per span. After threshold parameters are added, the FCD file is automatically updated when the new PCD file and modified CONFIG files are downloaded to the board.

Values: 0 to 255

Guidelines: To modify the default threshold for the ECS alarm, add the following parameter (sample value of 100 shown) to the [lineAdmin.x] section of a CONFIG file:

```
SetParm=0x163c,100 ! ECS threshold range 0 - 255, default 0
```

CECS Threshold Range

Number: 0x163d

Description: To support the Dialogic® Global Call Alarm Management System (GCAMS) enhancements, this parameter allows you to change the default threshold value of the CRC4 Error Count Saturation (CECS) alarm (E1 alarm) by adding a parameter in the CONFIG file (.config) that corresponds to the PCD file in use on your board. The change is made per span. After threshold parameters are added, the FCD file is automatically updated when the new PCD file and modified CONFIG files are downloaded to the board.

Values: 0 to 255

Guidelines: To modify the default threshold for the CECS alarm, add the following parameter (sample value of 100 shown) to the [lineAdmin.x] section of a CONFIG file:

```
SetParm=0x163d,100 ! CECS threshold range 0 - 255, default 255
```

14.3 [NFAS] Parameters

Non-Facility-Associated Signaling (NFAS) uses a single ISDN PRI D channel to provide signaling and control for multiple ISDN PRI lines. When using NFAS, modifications also need to be made to other sections of the CONFIG file. For details, see the following:

- “[SignalingType \(Signaling Type\)](#)”, on page 125.

- [Section 14.4, “\[NFAS.x\] Parameters”](#), on page 133.

There is only one NFAS component level parameter.

NFAS_INSTANCE_MAP (NFAS Instance Map)

Number: 0x3E02

Description: The **NFAS_INSTANCE_MAP** parameter defines the number of NFAS groups or NFAS instances created on a particular board. One NFAS group is created for each primary D channel on the board.

Values:

- 0x0: 0 (0000)
- 0x1: 1 (0001)
- 0x3: 2 (0011)
- 0x7: 3 (0111)
- 0xF: 4 (1111)

Guidelines: The **NFAS_INSTANCE_MAP** parameter value is a hexadecimal bitmap that represents the number of NFAS groups that are needed. The bitmap’s least significant bit correlates to the first NFAS instance, the next least significant bit corresponds to the second NFAS instance, and so on. So, starting with the least significant bit and working towards the most significant bit, set each bit’s value to 1 for each NFAS instance needed. For example, to create three NFAS groups, set the value of the **NFAS_INSTANCE_MAP** parameter to 0x07 (0111).

14.4 [NFAS.x] Parameters

Non-Facility-Associated Signaling (NFAS) uses a single ISDN PRI D channel to provide signaling and control for multiple ISDN PRI lines. For each group defined by the **NFAS_INSTANCE_MAP** parameter, there will be an [NFAS.x] section in the CONFIG file. For example, [NFAS.1] corresponds to the NFAS instance for the first group, [NFAS.2] corresponds to the NFAS instance for the second group, and so on.

When using NFAS, modifications also need to be made to other sections of the CONFIG file. For details, see the following parameters:

- [“NFAS_INSTANCE_MAP \(NFAS Instance Map\)”](#), on page 133.
- [“SignalingType \(Signaling Type\)”](#), on page 125

NFAS instance level parameters include:

- [GroupID \(Group Identifier\)](#)
- [NFAS_PrimaryIntID \(Primary Instance Identifier\)](#)
- [NFAS_Standby_IntID \(Standby Instance Identifier\)](#)

GroupID (Group Identifier)

Number: 0x3E00

Description: The **GroupID** parameter is defined for each NFAS group created. This parameter defines the NFAS group including the trunks that are assigned to it.

Values: 1 to 4

Guidelines: When setting this parameter, the trunks assigned to the group must also be defined. For each group, multiple trunks are identified and added in recurring sets of triplets, using the following command:

```
AddNFASInterface(x)= a,b,c, a',b',c', ...
```

Where:

x = GroupID

NFAS group into which the interface needs to be added. For [NFAS.x], this would be “x”.

a = InterfaceID

Unique number for this interface assigned by the user. A maximum of 10 interfaces can be assigned to a single group.

b = BoardNumber

Logical board number (as defined by the **Logical ID** parameter) on which the trunk being assigned to the InterfaceID resides.

c = InstanceNumber

Instance number of the trunk that is being assigned to the InterfaceID. Trunks are numbered sequentially based on their physical location on the boards, from top to bottom.

For example, to add all four trunks on board 2 and the first two trunks on board 3 to the fourth NFAS group, enter the following to the [NFAS.4] section in the CONFIG file:

```
[NFAS.4]
AddNFASInterface(4)=0,2,1, 1,2,2, 2,2,3, 3,2,4, 4,3,1, 5,3,2
SetParm=0x3E04,0
```

NFAS_PrimaryIntID (Primary Instance Identifier)

Number: 0x3E04

Description: The **NFAS_PrimaryIntID** parameter defines the primary D channel used by the NFAS group and is set for every [NFAS.x] group that is created.

Values: 0 to 9 (valid **InterfaceID** value)

Guidelines: The parameter is set to one of the [NFAS.x] InterfaceIDs defined by the **GroupID** parameter’s `AddNFASInterface` command. For details, see “**GroupID (Group Identifier)**”, on page 134.

For example, to define the primary D channel for NFAS group 4 to be the second trunk on board 3, enter the following to the [NFAS.4] section in the CONFIG file:

```
[NFAS.4]
AddNFASInterface(4)=0,2,1, 1,2,2, 2,2,3, 3,2,4, 4,3,1, 5,3,2
SetParm=0x3e04,5
```

NFAS_Standby_IntID (Standby Instance Identifier)

Number: 0x3E05

Description: The **NFAS_Standby_IntID** parameter defines the standby, or backup, D channel used by the NFAS group. This parameter is set for every [NFAS.x] group that implements D channel backup (DCBU).

Note: DCBU is supported on Dialogic® boards using ISDN 4ESS, 5ESS, and NI-2 protocols.

Values: 0 to 9 (valid **InterfaceID** value)

Guidelines: The parameter is set to one of the [NFAS.x] InterfaceIDs defined by the **GroupID** parameter's `AddNFASInterface` command. For details about the `AddNFASInterface` command, see “[GroupID \(Group Identifier\)](#)”, on page 134.

In the example:

```
[NFAS.4]
AddNFASInterface(4)=0,2,1, 1,2,2, 2,2,3, 3,2,4, 4,3,1, 5,3,2
SetParm=0x3e04,5
```

to define the first trunk on board 2 the standby D channel for the fourth NFAS group, add parameter 0x3e05 to the [NFAS.4] section of the CONFIG file and set it to a value of 0:

```
[NFAS.4]
AddNFASInterface(4)=0,2,1, 1,2,2, 2,2,3, 3,2,4, 4,3,1, 5,3,2
SetParm=0x3e04,5
SetParm=0x3e05,0
```

14.5 [CCS] Parameters

Common Channel Signaling (CCS) supports ISDN PRI out-of-band signaling utilizing the Q.931 signaling protocol for messaging. The parameters in the [CCS] and [CCS.x] sections of the CONFIG file define the number of CCS component instances created and configure the parameters associated with each CCS instance.

The CCS parameters include:

- [INSTANCE_MAP \(Instance Map\)](#)
- [CCS_TMR_302 \(Q.931 Timer 302\)](#)
- [CCS_TMR_303 \(Q.931 Timer 303\)](#)
- [CCS_TMR_304 \(Q.931 Timer 304\)](#)
- [CCS_TMR_305 \(Q.931 Timer 305\)](#)
- [CCS_TMR_308 \(Q.931 Timer 308\)](#)
- [CCS_TMR_310 \(Q.931 Timer 310\)](#)
- [CCS_TMR_313 \(Q.931 Timer 313\)](#)
- [CCS_TEI_RETRY \(TEI Retry Timer\)](#)
- [CCS_TEI_STABILITY \(TEI Stability Timer\)](#)
- [SYMMETRICAL_LINK \(Symmetrical Command Response Protocol\)](#)
- [CCS_PROTOCOL_MODE \(ISDN Protocol Mode\)](#)

- **CCS_SWITCH_TYPE** (Switch Type)
- **L2_TRACE** (Layer 2 Access Flag)

INSTANCE_MAP (Instance Map)

Number: 0x05

Description: The **INSTANCE_MAP** parameter is a bitmap that defines the number of CCS instances created. A CCS instance is created for each network interface that supports common channel signaling. The bitmap's least significant bit corresponds to the CCS instance associated with the first network interface on the board. The next least significant bit corresponds to the CCS instance associated with the second network interface on the board, and so on. If the bit associated with a network interface has a value of 1, then a CCS instance is created for that network interface. For example, a value of 0x5 (0101) means that CCS instances 1 and 3 are created allowing for common channel signaling on network interfaces 1 and 3.

Values: 0 to 0xffff

CCS_TMR_302 (Q.931 Timer 302)

Number: 0x14

Description: The **CCS_TMR_302** parameter is an ISDN Layer 3 timer. For exact timer definitions, refer to the Q.931 specification and the switch specifications.

Note: This parameter only applies to E1 boards.

Values:

- 0: Use the default value for the switch (15000 ms)
- -1: Disable the timer (has the same effect as setting the timer value to 0)
- n > 1: Timer value (milliseconds)

CCS_TMR_303 (Q.931 Timer 303)

Number: 0x0b

Description: The **CCS_TMR_303** parameter is an ISDN Layer 3 timer. For exact timer definitions, refer to the Q.931 specification and the switch specifications.

Values:

- 0: Use the default value for the switch (4000 ms)
- -1: Disable the timer (has the same effect as setting the timer value to 0)
- n > 1: Timer value (milliseconds)

CCS_TMR_304 (Q.931 Timer 304)

Number: 0x0c

Description: The **CCS_TMR_304** parameter is an ISDN Layer 3 timer. For exact timer definitions, refer to the Q.931 specification and the switch specifications.

Note: This parameter only applies to E1 boards.

Values:

- 0: Use the default value for the switch (30000 ms)
- -1: Disable the timer (has the same effect as setting the timer value to 0)
- n > 1: Timer value (milliseconds)

CCS_TMR_305 (Q.931 Timer 305)

Number: 0x0d

Description: The **CCS_TMR_305** parameter is an ISDN Layer 3 timer. For exact timer definitions, refer to the Q.931 specification and the switch specifications.

Values:

- 0: Use the default value for the switch (4000 ms for T1, 30000 ms for E1)
- -1: Disable the timer (has the same effect as setting the timer value to 0)
- n > 1: Timer value (milliseconds)

CCS_TMR_308 (Q.931 Timer 308)

Number: 0x0e

Description: The **CCS_TMR_308** parameter is an ISDN Layer 3 timer. For exact timer definitions, refer to the Q.931 specification and the switch specifications.

Values:

- 0: Use the default value for the switch (4000 ms)
- -1: Disable the timer (has the same effect as setting the timer value to 0)
- n > 1: Timer value (milliseconds)

CCS_TMR_310 (Q.931 Timer 310)

Number: 0x0f

Description: The **CCS_TMR_310** parameter is an ISDN Layer 3 timer. For exact timer definitions, refer to the Q.931 specification and the switch specifications.

Values:

- 0: Use the default value for the switch (10000 ms)
- -1: Disable the timer (has the same effect as setting the timer value to 0)
- n > 1: Timer value (milliseconds)

CCS_TMR_313 (Q.931 Timer 313)

Number: 0x10

Description: The **CCS_TMR_313** parameter is an ISDN Layer 3 timer. For exact timer definitions, refer to the Q.931 specification and the switch specifications.

Values:

- 0: Use the default value for the switch (4000 ms)
- -1: Disable the timer (has the same effect as setting the timer value to 0)
- n > 1: Timer value (milliseconds)

CCS_TEI_RETRY (TEI Retry Timer)

Number: 0x15

Description: The **CCS_TEI_RETRY** parameter defines the maximum amount of time that the data link remains in state 4 (TEI_ASSIGNED) before transitioning to state 5 (TEI_WAIT_ESTABLISH).

Values: Time (milliseconds)

CCS_TEI_STABILITY (TEI Stability Timer)

Number: 0x16

Description: The **CCS_TEI_STABILITY** parameter defines the minimum transition time between data link state 4 (TEI_ASSIGNED) and data link state 5 (TEI_WAIT_ESTABLISH).

Values: 0 to 100,000 (milliseconds)

SYMMETRICAL_LINK (Symmetrical Command Response Protocol)

Number: 0x13

Description: The **SYMMETRICAL_LINK** parameter enables or disables symmetrical data link operations.

Values:

- 0: Disable symmetrical data link operations
- 1: Enable symmetrical data link operations

CCS_PROTOCOL_MODE (ISDN Protocol Mode)

Number: 0x17

Description: The **CCS_PROTOCOL_MODE** parameter sets the network user-side protocol. User-side protocol is also known as TE (terminal emulation) protocol and Network-side protocol

is also known as NT (network termination) protocol. This parameter also can be used to configure QSIG Master/Slave.

Note: Master/Slave mode pertains to QSIG protocols only.

Note: With the exception of the QSIG protocol (where the User-side and Network-side protocols are symmetrical), using the CSS_PROTOCOL_MODE parameter to configure a Network-side protocol is supported for back-to-back testing purposes only. The Network-side firmware is not fully qualified for operation in a deployment environment.

Values:

- 0: User or Slave Mode (QSIG)
- 1: Network or Master Mode (QSIG)

CCS_SWITCH_TYPE (Switch Type)

Number: 0x07

Description: The CCS_SWITCH_TYPE parameter defines the network switch type.

Values:

- 1: 4ESS
- 2: 5ESS
- 3: DMS
- 4: NTT
- 6: DASS2
- 7: NET5
- 10: QSIGE1
- 11: QSIGT1
- 12: NI2
- 13: DPNSS

L2_TRACE (Layer 2 Access Flag)

Number: 0x09

Description: The L2_TRACE parameter is the ISDN Layer 2 access flag. When Layer 2 (Data Link layer) access is disabled, ISDN Link Access Protocol for the D channel (LAPD) functionality is obtained by accessing ISDN Call Control and Layer 3 (Network layer). When Layer 2 access is enabled, call control is no longer supported for the channels on this line and ISDN LAPD functionality is obtained by accessing Layer 2 directly.

Values:

- 0: Disable Layer 2 access
- 1: Enable Layer 2 access

14.6 [CHP] Parameters

The Channel Protocol (CHP) component implements the telephony communication protocol that is used on the network interface. The CHP component parameters include:

- **R4Compatibility** (R4 Compatibility Flag)
- **InitialChanState** (Initial Channel State)
- **DisableBlock** (Disable Block)

R4Compatibility (R4 Compatibility Flag)

Number: 0x1310

Description: The **R4Compatibility** parameter enables or disables R4 (Dialogic® Global Call API) compatibility features. This parameter also enables retrieval of DNIS and ANI information in the offered call state.

Values:

- 0 [default]: Disable R4 compatibility (same effect as the value 2)
- 1: Enable R4 compatibility
- 2: Disable R4 compatibility (same effect as the value 0)

InitialChanState (Initial Channel State)

Number: 0x1311

Description: The **InitialChanState** parameter defines the initial B channel state (CHP channel state) at the end of system initialization. The initial state of the ISDN B channel is either InService or OutOfService. Once the board is initialized, this initial state will be set on all channels of the board until a user application is invoked and explicitly modifies the state of the channel.

Values:

- 1: InService
- 2: OutOfService

Guidelines: This parameter must be set to OutOfService for ISDN protocols.

DisableBlock (Disable Block)

Number: 0x1312

Description: The **DisableBlock** parameter defines whether or not a blocking pattern (message) is sent on a channel when the channel is in the OutofService state. When **DisableBlock** is disabled, no pattern is sent (the switch will not present calls to the B channel).

When **DisableBlock** is enabled and a channel is in the InService state (**InitialChanState=1**), the protocol will send a non-blocking pattern on the channel (the switch will present calls to the B channel). When **DisableBlock** is enabled and a channel is in the OutofService state (**InitialChanState=2**), the protocol will send a blocking pattern on the channel (the switch will

present calls to the B channel but these calls will be abandoned by the switch since the application will not respond to the call).

Values:

- 0: Disable blocking
- 1: Enable blocking

14.7 [CHP] ISDN Protocol Variant Definitions

The CHP parameters define line configurations. Within the [CHP] section of the CONFIG file, ISDN protocol variants are defined using the `Variant Define n` command. For a detailed description of the `Variant Define n` command, see [Section 12.5, “\[CHP\] Section”](#), on page 108.

The ISDN protocol variant parameters include:

- `ProtocolType` (Protocol Type)
- `InterCallDelay` (Inter-call Delay)
- `DisconnectTimeout` (Disconnect Timeout)
- `Layer1Protocol` (Layer 1 Protocol)
- `InfoTransferRate` (Information Transfer Rate)
- `InfoTransferCap` (Information Transfer Cap)
- `CalledNumberType` (Called Number Type)
- `CalledNumberPlan` (Called Number Plan)
- `CalledNumberCount` (Called Number Count)
- `CallingNumberType` (Calling Number Type)
- `CallingNumberPlan` (Calling Number Plan)
- `CallingNumberPresentation` (Calling Number Presentation)
- `CallingNumberScreening` (Calling Number Screening)
- `CallingNumberCount` (Calling Number Count)
- `CallProgress` (Call Progress)
- `CaHdgLoHiGl` (Hello Edge/Low Glitch/High Glitch)
- `CaAnsdglPSV` (Answer Deglitcher/PAMD Speed Value)
- `CaHdgLoHiGl` (Hello Edge/Low Glitch/High Glitch)
- `CaBusySet` (Busy Signal)
- `CaSitSet` (SIT Signal)
- `CaFaxSet` (Fax Signal)
- `CaPvdId` (Voice Detection Signal)
- `CaPamdId` (Answering Machine Signal)
- `CaSignalTimeout` (Signal Timeout)
- `CaAnswerTimeout` (Answer Timeout)

- [CaPvdTimeout \(Voice Detection Timeout\)](#)

ProtocolType (Protocol Type)

Description: The **ProtocolType** parameter defines the type of ISDN protocol used on a channel. The value of the parameter is dependent on the firmware being downloaded and the CONFIG files used. For example, when downloading the *ghmp1_hmpdsb_2_4ess.config* file, **ProtocolType** should be set to a value of 1.

Note: The **ProtocolType** parameter is also used when defining T1 protocol variants.

Values:

- 1: 4ESS
- 2: 5ESS
- 3: DMS100 and DMS250
- 4: NTT
- 7: NET5
- 8: DASS2
- 9: DPNSS
- 10: QSIGE1
- 11: QSIGT1
- 12: NI2

InterCallDelay (Inter-call Delay)

Description: The **InterCallDelay** parameter defines the minimum amount of time between outbound calls.

Note: The **InterCallDelay** parameter is also used when defining T1 protocol variants.

Values: $n > 0$ (milliseconds)

DisconnectTimeout (Disconnect Timeout)

Description: The **DisconnectTimeout** parameter defines the time delay between proceeding and alert/connect. The call will transition to idle after this time period (sooner if ClearConf is received).

Note: The **DisconnectTimeout** parameter is also used when defining T1 protocol variants.

Values: $n > 0$ (milliseconds)

Guidelines: None.

Layer1Protocol (Layer 1 Protocol)

Description: The **Layer1Protocol** parameter defines the User Layer 1 Protocol.

Values:

- 0x00: Protocol not present
- 0x01: CCITT
- 0x02: G.711 mu-law
- 0x03: G.711 A-law
- 0x04: G.721 ADPCM
- 0x05: G.721 kHz
- 0x06: 384 kHz Video
- 0x07: NS Rate Adaption
- 0x08: V120 Rate Adaption
- 0x09: X.31 HDLC

InfoTransferRate (Information Transfer Rate)

Description: The **InfoTransferRate** parameter defines the information transfer rate.

Values:

- 0x00: Rate undefined
- 0x10: 64 kbps
- 0x11: 128 kbps
- 0x13: 384 kbps
- 0x15: 1536 kbps
- 0x17: 1920 kbps
- 0x18: Multi-rate

InfoTransferCap (Information Transfer Cap)

Description: The **InfoTransferCap** parameter defines the information transfer capability.

Values:

- 0x00: Speech
- 0x08: Unrestricted digital
- 0x09: Restricted digital
- 0x10: 3 kHz
- 0x11: 7 kHz
- 0x18: Video

CalledNumberType (Called Number Type)

Description: The **CalledNumberType** parameter defines the type of outbound calls (Called Party Numbers).

Values:

- 0x00: Unknown
- 0x01: International
- 0x02: National
- 0x03: Network specific
- 0x04: Network subscriber
- 0x06: Network abbreviated

CalledNumberPlan (Called Number Plan)

Description: The **CalledNumberPlan** parameter defines the numbering plan to use for outbound calls (Called Party Numbers).

Values:

- 0x00: Unknown
- 0x01: ISDN
- 0x02: Telephony
- 0x03: Date X.121
- 0x04: Telex F.69
- 0x08: National standard
- 0x09: Private

CalledNumberCount (Called Number Count)

Description: The **CalledNumberCount** parameter defines the number of digits to collect from an incoming call.

Values:

- 0: Collect all the digits provided
- n: Number of digits to collect

CallingNumberType (Calling Number Type)

Description: The **CallingNumberType** parameter defines the type of outbound call (Calling Party Number).

Values:

- 0x00: Unknown
- 0x01: International
- 0x02: National
- 0x03: Network specific
- 0x04: Network subscriber
- 0x06: Network abbreviated

CallingNumberPlan (Calling Number Plan)

Description: The **CallingNumberPlan** parameter defines the numbering plan to use for outbound calls (Calling Party Numbers).

Values:

- 0x00: Unknown
- 0x01: ISDN
- 0x02: Telephony
- 0x03: Date X.121
- 0x04: Telex F.69
- 0x08: National standard
- 0x09: Private

CallingNumberPresentation (Calling Number Presentation)

Description: The **CallingNumberPresentation** parameter defines the presentation for calling number (outbound calls).

Values:

- 0x00: Allowed
- 0x01: Restricted
- 0x02: Not available

CallingNumberScreening (Calling Number Screening)

Description: The **CallingNumberScreening** parameter defines the screening for calling number (outbound calls).

Values:

- 0x00: User provided
- 0x01: Verified and passed
- 0x02: Verified and failed
- 0x03: Network provided

CallingNumberCount (Calling Number Count)

Description: The **CallingNumberCount** parameter defines the number of Calling Party Number digits to collect from incoming call.

Values:

- 0: Collect all the digits provided
- n: Number of digits to collect

CallProgress (Call Progress)

Description: The **CallProgress** parameter enables or disables call progress detection for call setup.

Note: The **CallProgress** parameter is also used when defining T1 protocol variants.

Values:

- y: Enable call progress detection
- n: Disable call progress detection

CaHdgLoHiGI (Hello Edge/Low Glitch/High Glitch)

The **CaHdgLoHiGI** parameter combines three parameters into one. They include the Hello Edge, Low Glitch, and High Glitch parameters. The values for all three parameters are contained in the **CaHdgLoHiGI** parameter value, 0xFF020F13, where 02 is the default hexadecimal value (2 decimal) for the Hello Edge parameter, 0F is the default hexadecimal value (15 decimal) for the Low Glitch parameter, and 13 is the hexadecimal value (19 decimal) for the High Glitch parameter.

Description: The **Hello Edge** parameter defines the point at which a connect will be returned to the application.

Values:

- 1: Rising edge (immediately when a connect is detected)
- 2: Falling edge (after the end of the salutation)

Description: The **Low Glitch** parameter defines, in intervals of 10 milliseconds, the maximum silence period to ignore. This maximum silence period helps to eliminate spurious silence intervals.

Values: The default value is 15 decimal (150 milliseconds).

Description: The **High Glitch** parameter defines, in intervals of 10 milliseconds, the maximum nonsilence period to ignore. This maximum nonsilence period helps to eliminate spurious nonsilence intervals.

Values: The default value is 19 decimal (190 milliseconds).

CaAnsdgIPSV (Answer Deglitcher/PAMD Speed Value)

The **CaAnsdgIPSV** parameter combines two parameters into one. They include the Answer Deglitcher and PAMD Speed Value parameters. The values for both parameters are contained in

the **CaAnsdglPSV** parameter value, 0xFFFFF01, where 01 is the default hexadecimal value (1 decimal) for the PAMD Speed Value parameter and FF is the default hexadecimal value (-1 decimal) for the Answer Deglitcher parameter, which corresponds to disabling it. This parameter should only be enabled if you are concerned with measuring the length of the salutation.

Description: The **Answer Deglitcher** parameter defines the maximum silence period, in 10 millisecond intervals, allowed between words in a salutation.

Values: The default value is -1 (FFFF), for disabled.

Description: The **PAMD Speed Value** parameter defines the PAMD algorithm: PAMD_ACCU, PAMD_FULLL, and PAMD_QUICK. PAMD_QUICK provides the fastest results based on the connect circumstances, but is the least accurate. PAMD_FULLL performs hiss noise analysis to determine if this is an answer machine response, and then performs a full evaluation of the voice response if the hiss information is not sufficient to make the decision. PAMD_ACCU will not perform hiss noise analysis, since this is not required with today's digital answering systems, but will perform a full answer size voice response to achieve the most accurate result.

Values:

- 1 [default]: PAMD_ACCU
- 2: PAMD_FULLL
- 3: PAMD_QUICK

CaRingingSet (Ringing Signal)

Description: The **CaRingingSet** parameter defines the signal set used to detect ringing for call progress analysis.

Note: The **CaRingingSet** parameter is also used when defining T1 protocol variants.

Values: 0x024940

CaBusySet (Busy Signal)

Description: The **CaBusySet** parameter defines the signal set used to detect busy for call progress analysis.

Note: The **CaBusySet** parameter is also used when defining T1 protocol variants.

Values: 0x004DE0

CaSitSet (SIT Signal)

Description: The **CaSiteSet** parameter defines the signal set used to detect Special Information Tones (SIT) tones for call progress analysis.

Note: The **CaSiteSet** parameter is also used when defining T1 protocol variants.

Values: 0x02F240

CaFaxSet (Fax Signal)

Description: The **CaFaxSet** parameter defines the signal set used to detect fax tones for call progress analysis.

Note: The **CaFaxSet** parameter is also used when defining T1 protocol variants.

Values: 0x014B80

CaPvdId (Voice Detection Signal)

Description: The **CaPvdId** parameter defines the signal to use for positive voice detection in call progress analysis.

Note: The **CaPvdId** parameter is also used when defining T1 protocol variants.

Values: 0x01F4C1

CaPamdId (Answering Machine Signal)

Description: The **CaPamdId** parameter defines the signal to use for positive answering machine detection in call progress analysis.

Note: The **CaPamdId** parameter is also used when defining T1 protocol variants.

Values: 0x01A041

CaSignalTimeout (Signal Timeout)

Description: The **CaSignalTimeout** parameter defines the maximum amount of time to wait to detect a call progress tone from one of the call analysis signal sets. For T1 loop start and ground start protocols, if this time is exceeded, then the outbound call will fail with the reason being NoAnswer.

Note: The **CaSignalTimeout** parameter is also used when defining T1 protocol variants.

Values: $n > 0$ (the value must be a multiple of 10 ms)

CaAnswerTimeout (Answer Timeout)

Description: The **CaAnswerTimeout** parameter defines the maximum amount of time that call analysis will wait for ringback to stop (equivalent to the number of rings). If this time is exceeded, then the outbound call will fail with the reason being NoAnswer.

Note: The **CaAnswerTimeout** parameter is also used when defining T1 protocol variants.

Values: $n > 0$ (the value must be a multiple of 10 ms)

CaPvdTimeout (Voice Detection Timeout)

Description: The **CaPvdTimeout** parameter defines the maximum amount of time that call analysis will wait to detect positive answering machine detection (PAMD) or positive voice detection (PVD) once ringback has ceased. If this time is exceeded, then the call state will

transition to “Connected” with the reason being Normal. If PAMD or PVD is detected within this time period, then the “Connected” reason will be PAMD or PVD respectively.

Note: The **CaPvdTimeout** parameter is also used when defining T1 protocol variants.

Values: $n > 0$ (the value is expressed in multiples of 10 milliseconds. For example, a value of 200 equals 2000 milliseconds, or 2 seconds)

- For digital boards: default = 400

14.8 [TSC] Parameters

The parameter in the [TSC] section of the CONFIG file is associated with the B channel sets.

Encoding (Encoding Method)

Number: 0x1209

Description: The **Encoding** parameter defines the encoding method used on a line.

Values:

- 1: A-law
- 2: mu-law

14.9 [TSC] defineBSet Parameters

The parameters defined by the `defineBSet` command in the [TSC] section of the CONFIG file are associated with the B channel sets. The syntax of the `defineBSet` command is:

```
defineBSet = SetId, LineId, StartChan, NumChans, BaseProtocol, Inbound, OutBound, DChanDesc, Admin, Width, BChanId, SlotId, Direction, Count, [BChanId, SlotId, Direction, Count,] 0
```

Note: The [TSC] `defineBSet` parameters do not have parameter numbers explicitly defined within the CONFIG file.

The `defineBSet` parameters include:

- [SetId \(Set Identifier\)](#)
- [LineId \(Line Identifier\)](#)
- [StartChan \(Start Channel\)](#)
- [NumChans \(Number of B Channels\)](#)
- [BaseProtocol \(Base Protocol\)](#)
- [Inbound \(Inbound Variant\)](#)
- [Outbound \(Outbound Variant\)](#)
- [DChanDesc \(D Channel Identifier\)](#)
- [Admin \(Admin\)](#)
- [Width \(Width\)](#)

- [BChanId \(B Channel Identifier\)](#)
- [SlotId \(Slot Identifier\)](#)
- [Direction \(Direction\)](#)
- [Count \(Count\)](#)

SetId (Set Identifier)

Description: The **SetId** parameter is an arbitrary identifier set by the user that identifies the B channel set in which the B channels are a member.

Values: Number

Guidelines: Each B channel set must have a unique identifier.

For example, for each line on a board, **SetId** can be set sequentially to a value that is a multiple of 10 as follows:

```
defineBSet=10,1,1,23, 0,1,1,1,20,1, 1,1,3,23,0
defineBSet=20,2,1,23, 0,1,1,2,20,1, 1,1,3,23,0
defineBSet=30,3,1,23, 0,1,1,3,20,1, 1,1,3,23,0
defineBSet=40,4,1,23, 0,1,1,4,20,1, 1,1,3,23,0
```

LineId (Line Identifier)

Description: The **LineId** parameter defines the T1 or E1 line that carries all of the B channels in the set.

Values: 1 to 16

Guidelines: For example, on a board with four network interfaces, the value of **LineId** is set to 1 for line 1, 2 for line 2, and so on for each line as follows:

```
defineBSet=10,1,1,23, 0,1,1,1,20,1, 1,1,3,23,0
defineBSet=20,2,1,23, 0,1,1,1,20,1, 1,1,3,23,0
defineBSet=30,3,1,23, 0,1,1,1,20,1, 1,1,3,23,0
defineBSet=40,4,1,23, 0,1,1,1,20,1, 1,1,3,23,0
```

StartChan (Start Channel)

Description: The **StartChan** parameter defines the first B channel in the set. This parameter is used in combination with the **NumChans** parameter to define a contiguous set of B channels.

Values: The value range depends on the technology, because the number of available B channels varies.

- 1 to 24: T1
- 1 to 30: E1
- 1 to 31: E1 clear channel

Guidelines: For example, on a T1 line where 23 of the 24 channels are used as B channels, the value of **StartChan** is set to 1 as follows:

```
defineBSet=10,1,1,23, 0,1,1,1,20,1, 1,1,3,23,0
defineBSet=20,2,1,23, 0,1,1,1,20,1, 1,1,3,23,0
defineBSet=30,3,1,23, 0,1,1,1,20,1, 1,1,3,23,0
defineBSet=40,4,1,23, 0,1,1,1,20,1, 1,1,3,23,0
```

NumChans (Number of B Channels)

Description: The **NumChans** parameter defines the total number of B channels in the set. This parameter is used in combination with the **StartChan** parameter to define a contiguous set of B channels.

Values: The range of values varies with technology because the number of time slots varies.

- 1 to 24: T1
- 1 to 30: E1
- 1 to 31: E1 clear channel

Guidelines: For example, on a T1 line, a value of 1 for **StartChan** and a value of 23 for **NumChans** defines 23 B channels numbered from 1 to 23:

```
defineBSet=10,1,1,23, 0,1,1,1,20,1, 1,1,3,23,0  
defineBSet=20,2,1,23, 0,1,1,2,20,1, 1,1,3,23,0  
defineBSet=30,3,1,23, 0,1,1,3,20,1, 1,1,3,23,0  
defineBSet=40,4,1,23, 0,1,1,4,20,1, 1,1,3,23,0
```

BaseProtocol (Base Protocol)

Description: The **BaseProtocol** parameter defines the base protocol on which the B channel set will run.

Values:

- 0: T1 CAS, ISDN or Dialogic® Global Call protocols (where the default protocol is defined by the firmware) or clear channel

Guidelines: For T1 CAS, ISDN, and Dialogic® Global Call protocols, each firmware load supports only one base protocol, so this parameter will be set to 0 for these protocols. This parameter is also set to 0 for clear channel. Clear channel is the ability to access telephony channels in the system and configure them to a user-defined call control protocol, or to simply leave the lines “clear”. The resources should have access to the telephony bus for media routing purposes, as well as signal detection, signal generation, and tone generation capabilities, if desired.

For example, on T1 ISDN lines, **BaseProtocol** is set to a value of 0 as follows:

```
defineBSet=10,1,1,23, 0,1,1,1,20,1, 1,1,3,23,0  
defineBSet=20,2,1,23, 0,1,1,1,20,1, 1,1,3,23,0  
defineBSet=30,3,1,23, 0,1,1,1,20,1, 1,1,3,23,0  
defineBSet=40,4,1,23, 0,1,1,1,20,1, 1,1,3,23,0
```

Inbound (Inbound Variant)

Description: The **Inbound** parameter selects one of the protocol type variant parameter sets defined in the [CHP] section of the CONFIG file to use for inbound calls. The protocol variant defines the type of protocol running on the set of B channels.

Values:

- 0: Clear channel (disable inbound calls)
- n: Variant identifier as defined in the [CHP] section of the CONFIG file

Guidelines: This parameter is set to 0 for clear channel. Clear channel is the ability to access telephony channels in the system and configure them to a user-defined call control protocol, or to simply leave the lines “clear”. The resources should have access to the telephony bus for media routing purposes, as well as signal detection, signal generation, and tone generation capabilities, if desired.

For example, on T1 ISDN lines, **Inbound** is set to a value of 1 as follows:

```
defineBSet=10,1,1,23, 0,1,1,1,20,1, 1,1,3,23,0
defineBSet=20,2,1,23, 0,1,1,1,20,1, 1,1,3,23,0
defineBSet=30,3,1,23, 0,1,1,1,20,1, 1,1,3,23,0
defineBSet=40,4,1,23, 0,1,1,1,20,1, 1,1,3,23,0
```

Outbound (Outbound Variant)

Description: The **Outbound** parameter selects one of the protocol type variant parameter sets defined in the [CHP] section of the CONFIG file to use for outbound calls. The protocol variant defines the type of protocol running on the set of B channels.

Values:

- 0: Clear channels (disable outbound calls)
- n: Variant identifier as defined in the [CHP] section of the CONFIG file

Guidelines: This parameter is set to 0 for clear channel (disable outbound calls). Clear channel is the ability to access telephony channels in the system and configure them to a user-defined call control protocol, or to simply leave the lines “clear”. The resources should have access to the telephony bus for media routing purposes, as well as signal detection, signal generation, and tone generation capabilities, if desired.

For example, on T1 ISDN lines, **Outbound** is set to a value of 1 as follows:

```
defineBSet=10,1,1,23, 0,1,1,1,20,1, 1,1,3,23,0
defineBSet=20,2,1,23, 0,1,1,1,20,1, 1,1,3,23,0
defineBSet=30,3,1,23, 0,1,1,1,20,1, 1,1,3,23,0
defineBSet=40,4,1,23, 0,1,1,1,20,1, 1,1,3,23,0
```

DChanDesc (D Channel Identifier)

Description: The **DChanDesc** parameter is an ISDN parameter that identifies which trunk the D-channel resides for this B-set. This parameter is ignored for T1 CAS, clear channel, and Dialogic® Global Call protocols.

Values: 1 to 16

Guidelines: For example, on a board with four T1 ISDN lines, **DChanDesc** is set as follows:

```
defineBSet=10,1,1,24, 0,1,1,1,20,1, 1,1,3,24,0
defineBSet=20,2,1,24, 0,1,1,2,20,1, 1,1,3,24,0
defineBSet=30,3,1,24, 0,1,1,3,20,1, 1,1,3,24,0
defineBSet=40,4,1,24, 0,1,1,4,20,1, 1,1,3,24,0
```


Admin (Admin)

Description: The **Admin** parameter is an arbitrary 32-bit value set by the user that is exported to the TSC_AttrAdminGroup attribute of the TSC cluster for each B channel in the set. This attribute can be used to find and/or allocate TSC clusters.

Values: 0 to 0xFFFFFFFF

Guidelines: For example, on a T1 line, **Admin** is set to a value of 20 as follows:

```
defineBSet=10,1,1,23, 0,1,1,1,20,1, 1,1,3,23,0
defineBSet=20,2,1,23, 0,1,1,1,20,1, 1,1,3,23,0
defineBSet=30,3,1,23, 0,1,1,1,20,1, 1,1,3,23,0
defineBSet=40,4,1,23, 0,1,1,1,20,1, 1,1,3,23,0
```

Width (Width)

Description: The **Width** parameter specifies the number of time slots used by each B channel. Currently, only one time slot per channel is used.

Note: This **Width** should not be modified by the user.

Values: 1

Guidelines: For example, on a T1 line, **Width** is set to a value of 1 as follows:

```
defineBSet=10,1,1,23, 0,1,1,1,20,1, 1,1,3,23,0
defineBSet=20,2,1,23, 0,1,1,1,20,1, 1,1,3,23,0
defineBSet=30,3,1,23, 0,1,1,1,20,1, 1,1,3,23,0
defineBSet=40,4,1,23, 0,1,1,1,20,1, 1,1,3,23,0
```

BChanId (B Channel Identifier)

Description: The **BChanId** parameter defines the initial B channel in the set to which the TSC instance is associated. It is also the channel to which the initial time slot, defined by **SlotId**, will be mapped. B channels are then sequentially mapped to time slots for a count of **Count**.

Values: The range of values varies with technology because the number of time slots varies.

- 1 to 24: T1
- 1 to 31: E1

Guidelines: For example, on a T1 board where the D channel is mapped to time slot 24 on all four lines, **BChanId** and **SlotId** are set to a value of 1 and **NumChans** is set to a value of 23. This defines 23 B channels numbered 1 to 23 mapped to time slots 1 to 23.

```
defineBSet=10,1,1,23,0,1,1,1,20,1, 1,1,3,23,0
defineBSet=20,2,1,23,0,1,1,2,20,1, 1,1,3,23,0
defineBSet=30,3,1,23,0,1,1,3,20,1, 1,1,3,23,0
defineBSet=40,4,1,23,0,1,1,4,20,1, 1,1,3,23,0
```

For E1 ISDN lines that usually contain a D channel mapped to time slot 16, the mapping of channels to time slots occurs in two sets of **BChanId**, **SlotId**, **Direction** and **Count** definitions. The first set of definitions maps time slots before the D channel and the second set maps time slots after the D channel.

For example, on an E1 ISDN board with four network interfaces, where time slot 16 is used for signaling on all four lines, **BChanId** would be defined on each line as follows:

CONFIG File Parameter Reference for Dialogic® HMP Interface Boards

```
defineBSet=10,1,1,30, 0,1,1,1,20,1, 1,1,3,15, 16,17,3,15,0
defineBSet=20,2,1,30, 0,1,1,1,20,1, 1,1,3,15, 16,17,3,15,0
defineBSet=30,3,1,30, 0,1,1,1,20,1, 1,1,3,15, 16,17,3,15,0
defineBSet=40,4,1,30, 0,1,1,1,20,1, 1,1,3,15, 16,17,3,15,0
```

In this example, channels 1 to 15 are mapped to time slots 1 to 15 and channels 16 to 30 are mapped to time slots 17 to 31.

For E1 clear channel lines where the time slot 16 is not used for signaling, additional `defineBSet` commands are added to clear channel 31. Both **StartChan** and **BChanId** are set to a value of 31, **NumChans** and **Count** are set to a value of 1, and **SlotId** is set to 16 as follows:

```
defineBSet=50,1,31,1, 0,0,0,1,21,1, 31,16,3,1,0
defineBSet=60,2,31,1, 0,0,0,1,21,1, 31,16,3,1,0
defineBSet=70,3,31,1, 0,0,0,1,21,1, 31,16,3,1,0
defineBSet=80,4,31,1, 0,0,0,1,21,1, 31,16,3,1,0
```

SlotId (Slot Identifier)

Description: The **SlotId** parameter defines the logical time slot the initial B channel, defined by **BChanId**, is using. B channels are then sequentially mapped to time slots for a count of **Count**.

Values: The range of values varies with technology because the number of time slots varies.

- 1 to 24: T1
- 1 to 31: E1 ISDN
- 1 to 31: E1 clear channel

Guidelines: For E1 ISDN, the mapping of channels to time slots occurs in two sets of **BChanId**, **SlotId**, **Direction** and **Count** definitions. The first set of definitions maps the time slots before the D channel, and the second set maps the slots after the D channel.

For example, on an E1 ISDN board with four network interfaces, where time slot 16 is used for signaling on all four lines, **SlotId** for all four lines would be as follows

```
defineBSet=10,1,1,30, 0,1,1,1,20,1, 1,1,3,15, 16,17,3,15,0
defineBSet=20,2,1,30, 0,1,1,1,20,1, 1,1,3,15, 16,17,3,15,0
defineBSet=30,3,1,30, 0,1,1,1,20,1, 1,1,3,15, 16,17,3,15,0
defineBSet=40,4,1,30, 0,1,1,1,20,1, 1,1,3,15, 16,17,3,15,0
```

For all lines in this example, channels 1 to 15 are sequentially mapped to time slots 1 to 15 and channels 16 to 30 are mapped to time slots 17 to 31.

For E1 clear channel lines where time slot 16 is not used for signaling, additional `defineBSet` commands are added to clear channel 31 and to map time slot 16. Both **StartChan** and **BChanId** are set to a value of 31, **NumChans** and **Count** are set to a value of 1, and **SlotId** is set to 16 as follows:

```
defineBSet=50,1,31,1, 0,0,0,1,21,1, 31,16,3,1,0
defineBSet=60,2,31,1, 0,0,0,1,21,1, 31,16,3,1,0
defineBSet=70,3,31,1, 0,0,0,1,21,1, 31,16,3,1,0
defineBSet=80,4,31,1, 0,0,0,1,21,1, 31,16,3,1,0
```

Direction (Direction)

Description: The **Direction** parameter defines the direction in which the data can be sent: inbound, outbound, or both.

Values:

- 1: Inbound
- 2: Outbound
- 3: Both

Guidelines: For example, on an T1 line where data is transferred both inbound and outbound, **Direction** is set to a value of 3 as follows:

```
defineBSet=10,1,1,23, 0,1,1,1,20,1, 1,1,3,23,0
defineBSet=20,2,1,23, 0,1,1,2,20,1, 1,1,3,23,0
defineBSet=30,3,1,23, 0,1,1,3,20,1, 1,1,3,23,0
defineBSet=40,4,1,23, 0,1,1,4,20,1, 1,1,3,23,0
```

Count (Count)

Description: The **Count** parameter defines the number of time slots that are being mapped to B channels. This value is limited to the value of **NumChans** since only the number of channels that exist on a line can be mapped to a time slots.

Values: 1 to **NumChans**

Guidelines: For example, on a T1 line containing two network interfaces, where time slot 24 is used as a D channel on both lines, the **Count** for both lines would be as follows:

```
defineBSet=10,1,1,23, 0,1,1,1,20,1, 1,1,3,23,0
defineBSet=20,2,1,23, 0,1,1,1,20,1, 1,1,3,23,0
```

For an E1 line, **Count** is set to a value of 30 for lines that contain only B channels. For lines that contain a single D channel, the mapping of channels to time slots occurs in two sets of **BChanId**, **SlotId**, **Direction** and **Count** definitions. The first set of definitions maps the time slots before the D channel, and the second set maps the slots after the D channel. For example, on an E1 board with four network interfaces, where time slot 16 is used for signaling on all four lines, the **Count** for all four lines would be as follows:

```
defineBSet=10,1,1,30, 0,1,1,1,20,1, 1,1,3,15, 16,17,3,15,0
defineBSet=20,2,1,30, 0,1,1,1,20,1, 1,1,3,15, 16,17,3,15,0
defineBSet=30,3,1,30, 0,1,1,1,20,1, 1,1,3,15, 16,17,3,15,0
defineBSet=40,4,1,30, 0,1,1,1,20,1, 1,1,3,15, 16,17,3,15,0
```

For all lines in this example, channels 1 to 15 are mapped to time slots 1 to 15 and channels 16 to 30 are mapped to time slots 17 to 31.

For E1 clear channel lines where the time slot 16 is not used for signaling, additional `defineBSet` commands are added to clear channel 31 and to map time slot 16. **Count** is set to a value of 1 (also the value of **NumChans**) as follows:

```
defineBSet=50,1,31,1, 0,0,0,1,21,1, 31,16,3,1,0
defineBSet=60,2,31,1, 0,0,0,1,21,1, 31,16,3,1,0
defineBSet=70,3,31,1, 0,0,0,1,21,1, 31,16,3,1,0
defineBSet=80,4,31,1, 0,0,0,1,21,1, 31,16,3,1,0
```

14.10 [sigDet] Parameters

Note: The information in this section only applies to the Dialogic® DNI/601TEPHMP board.

The signal detector section of the CONFIG file may include qualification templates for positive answering machine detection (PAMD) and positive voice detection (PVD) used in call progress analysis.

A tech note was written to provide instructions for modifying the PAMD and PVD qualification template parameters on Dialogic® DM3 boards to accomplish higher successful PAMD and PVD rates. For further information about these parameters, see the tech note at <http://www.dialogic.com/support/helpweb/dxall/tnotes/legacy/2000/tn030.htm>. Although the tech note was written for Dialogic® System Software Release 5.1.1 Feature Pack 1 for Windows®, the information applies to subsequent releases.

The modified parameters have now become the default in the firmware, so it is no longer necessary to tune the PAMD and PVD parameters as explained in the tech note. Operating with these new default values should result in improved accuracy of call progress analysis on Dialogic® DM3 boards. However, although these values are the most commonly used, they may not be suitable for every application environment. If needed, the PAMD and PVD templates are still tunable, as explained in the tech note, to achieve even better results based on the individual application environment.

The default PAMD qualification template ID is 106561 (0x1a041), but other valid PAMD qualification template IDs that can be defined in the CONFIG file are:

- 106564 (0x1a044)
- 106565 (0x1a045)
- 106566 (0x1a046)
- 106567 (0x1a047)

The default PVD qualification template ID is 128193 (0x1f4c1), but other valid PVD qualification template IDs that can be defined in the CONFIG file are:

- 128194 (0x1f4c2)
- 128195 (0x1f4c3)
- 128196 (0x1f4c4)
- 128197 (0x1f4c5)