



Dialogic® Brooktrout® Fax Service Provider Software

Installation and Configuration Guide for the Microsoft® Fax Server

Copyright and Legal Notice

Copyright © 1998-2010 Dialogic Corporation. All Rights Reserved. You may not reproduce this document in whole or in part without permission in writing from Dialogic Corporation at the address provided below.

All contents of this document are furnished for informational use only and are subject to change without notice and do not represent a commitment on the part of Dialogic Corporation or its subsidiaries ("Dialogic"). Reasonable effort is made to ensure the accuracy of the information contained in the document. However, Dialogic does not warrant the accuracy of this information and cannot accept responsibility for errors, inaccuracies or omissions that may be contained in this document.

INFORMATION IN THIS DOCUMENT IS PROVIDED IN CONNECTION WITH DIALOGIC® PRODUCTS. NO LICENSE, EXPRESS OR IMPLIED, BY ESTOPPEL OR OTHERWISE, TO ANY INTELLECTUAL PROPERTY RIGHTS IS GRANTED BY THIS DOCUMENT. EXCEPT AS PROVIDED IN A SIGNED AGREEMENT BETWEEN YOU AND DIALOGIC, DIALOGIC ASSUMES NO LIABILITY WHATSOEVER, AND DIALOGIC DISCLAIMS ANY EXPRESS OR IMPLIED WARRANTY, RELATING TO SALE AND/OR USE OF DIALOGIC PRODUCTS INCLUDING LIABILITY OR WARRANTIES RELATING TO FITNESS FOR A PARTICULAR PURPOSE, MERCHANTABILITY, OR INFRINGEMENT OF ANY INTELLECTUAL PROPERTY RIGHT OF A THIRD PARTY.

Dialogic products are not intended for use in medical, life saving, life sustaining, critical control or safety systems, or in nuclear facility applications.

Due to differing national regulations and approval requirements, certain Dialogic products may be suitable for use only in specific countries, and thus may not function properly in other countries. You are responsible for ensuring that your use of such products occurs only in the countries where such use is suitable. For information on specific products, contact Dialogic Corporation at the address indicated below or on the web at www.dialogic.com.

It is possible that the use or implementation of any one of the concepts, applications, or ideas described in this document, in marketing collateral produced by or on web pages maintained by Dialogic may infringe one or more patents or other intellectual property rights owned by third parties. Dialogic does not provide any intellectual property licenses with the sale of Dialogic products other than a license to use such product in accordance with intellectual property owned or validly licensed by Dialogic and no such licenses are provided except pursuant to a signed agreement with Dialogic. More detailed information about such intellectual property is available from Dialogic's legal department at 9800 Cavendish Blvd., 5th Floor, Montreal, Quebec, Canada H4M 2V9. ***Dialogic encourages all users of its products to procure all necessary intellectual property licenses required to implement any concepts or applications and does not condone or encourage any intellectual property infringement and disclaims any responsibility related thereto. These intellectual property licenses may differ from country to country and it is the responsibility of those who develop the concepts or applications to be aware of and comply with different national license requirements.***

Dialogic, Dialogic Pro, Brooktrout, Diva, Cantata, SnowShore, Eicon, Eicon Networks, NMS Communications, NMS (stylized), Eiconcard, SIPcontrol, Diva ISDN, TruFax, Exnet, EXS, SwitchKit, N20, Making Innovation Thrive, Connecting to Growth, Video is the New Voice, Fusion, Vision, PacketMedia, NaturalAccess, NaturalCallControl, NaturalConference, NaturalFax and Shiva, among others as well as related logos, are either registered trademarks or trademarks of Dialogic Corporation or its subsidiaries. Dialogic's trademarks may be used publicly only with permission from Dialogic. Such permission may only be granted by Dialogic's legal department at 9800 Cavendish Blvd., 5th Floor, Montreal, Quebec, Canada H4M 2V9. Any authorized use of Dialogic's trademarks will be subject to full respect of the trademark guidelines published by Dialogic from time to time and any use of Dialogic's trademarks requires proper acknowledgement.

Internet Explorer, Microsoft, Windows, Windows NT, and Windows Server, Microsoft Visual Studio, are registered trademarks of Microsoft Corporation in the United States and/or other countries. Other names of actual companies and products mentioned herein are the trademarks of their respective owners.

This document discusses one or more open source products, systems and/or releases. Dialogic is not responsible for your decision to use open source in connection with Dialogic products (including without limitation those referred to herein), nor is Dialogic responsible for any present or future effects such usage might have, including without limitation effects on your products, your business, or your intellectual property rights.

Contents

About this Publication	6
Related Documents	7
Typographical Conventions	7
Chapter 1 – Introduction	8
Microsoft® Exchange 2010 Inbound Routing	8
Overview of Software and Hardware Installation Steps	9
Chapter 2 – Installing Hardware	10
Chapter 3 – Installing Microsoft® Fax Server	11
Operating Systems	12
Installing Microsoft® Fax Server on Windows® 2008 and 2008 R2	13
Installing Microsoft® Fax Server on Windows® XP and Windows® 2003	14
Chapter 4 – Installing Brooktrout Fax Service Provider Software	15
Installing the Brooktrout FSP Software	16
Entering Telephone Information	23
Chapter 5 – Configuring Brooktrout Fax Products	25
Configuring the Dialogic® Brooktrout® Devices on Windows® 2003, 2008, and 2008 R2 ..	26
Configuring the Dialogic® Brooktrout® Devices on Windows® 7 and Windows® XP	27

Chapter 6 – Configuring Microsoft® Fax Server 28

Configuring the Microsoft® Fax Server on Windows® 2003, 2008, and 2008 R2 29

Configuring the Microsoft® Fax Server on
Windows® XP 31

Configuring Microsoft® Fax Server on Windows® 7 32

Chapter 7 – Integrating Microsoft® Exchange 2010. 33

Configuring Incoming Fax Routing to the Exchange UM Partner Email 34

Chapter 8 – Inbound Routing 36

Configuring Incoming Fax Routing Methods on Windows® 2003, 2008, and 2008 R2 37

Configuring Incoming Fax Routing Methods on Windows® XP 39

Configuring Microsoft® Fax Server on Windows® 7 40

About this Publication

Use this guide to install software and optional hardware to support the Microsoft® Fax Server for Microsoft environments using Dialogic® Brooktrout® Fax Service Provider (FSP).

The latest version of the Brooktrout FSP software is available here:

[*http://www.dialogic.com/products/ip_enabled/FoIP/FSP.htm*](http://www.dialogic.com/products/ip_enabled/FoIP/FSP.htm)

Related Documents

This guide, together with the related documents below, explains how to install the Microsoft® Fax Server, Brooktrout FSP Software, and a Brooktrout Fax Board or SR140 software licenses and configure the system.

- ***Dialogic® Brooktrout® Fax Service Provider Software - Release Notes*** (contains the latest information)
- ***Dialogic® Brooktrout® Fax Products Windows® End User Guide***
- ***Microsoft® Exchange 2010 Configuration Guide***

Typographical Conventions

This manual uses the typographical conventions shown in the following table.

Convention	Type of Information
<i>Italic</i> typeface	File, path, directory or program name
Bold monospace typeface	Code or syntax entered by user
Plain monospace typeface	System output of code or syntax
Sans serif typeface	Keys or buttons to press, screen names



The Caution icon is used to indicate an action that could cause harm to the hardware or software.

1 - Introduction

The Microsoft® Fax Server, which is distributed with your Windows® Operating System, provides the ability to fax any printable document and to receive faxes when used with a fax service provider (FSP) and a fax-capable device. The Dialogic® Brooktrout® FSP Software provides these fax processing capabilities when used with the following Brooktrout Fax Products:

- Dialogic® Brooktrout® TruFax® Fax Boards - Analog and BRI ISDN
- Dialogic® Brooktrout® TR1034 Fax Boards - Analog, BRI ISDN, DID, T1, E1, Ethernet
- Dialogic® Brooktrout® TR1034-N Fax Boards - SIP/H.323 T38/G711 Fax over IP
- Dialogic® Brooktrout® SR140 IP Fax Software - SIP/H.323 T38/G711 Fax over IP

Microsoft® Exchange 2010 Inbound Routing

The Microsoft® Fax Server with Brooktrout FSP software and Brooktrout SR140 is also certified as a Microsoft® Exchange Server® 2010 Fax Partner Solution, which allows the Microsoft® Fax Service to receive routing information from Microsoft® Exchange 2010 and send faxes directly to individual user's email inbox.

Overview of Software and Hardware Installation Steps

You must have Administrative privileges prior to installing the software.

1. Install the TR1034/Trifax board. Skip this step if you are using only SR140 fax software.
2. Install the Microsoft® Fax Server if required.
3. Install the Brooktrout FSP software.
4. Enter your telephone dialing information.

2 - Installing Hardware

Refer to ***Installing TR1034 and Trufax® Hardware*** in the *Dialogic® Brooktrout® Fax Products Windows® End User Guide* for basic instructions to install the Dialogic® Brooktrout® TR1034 Series and Dialogic® Brooktrout® TruFax® boards.

This information does not apply to users of the Dialogic® Brooktrout® SR140 Fax Software.

3 - Installing Microsoft® Fax Server

This chapter describes how to install Microsoft® Fax Server when not pre-installed on the system.

By using a Fax Server, you can manage shared fax resources. The procedures in this chapter explain how to install the Fax Server on different Windows® versions.

This chapter contains the following major sections:

- ***Operating Systems on page 12***
- ***Installing Microsoft® Fax Server on Windows® 2008 and 2008 R2 on page 13***
- ***Installing Microsoft® Fax Server on Windows® XP and Windows® 2003 on page 14***

Operating Systems

The following table outlines the number of supported fax channels by Windows® operating system.

Table 1. Channels Supported by the Microsoft® Fax Server

Operating System	Channels	Microsoft Link
Windows Server® 2008 and 2008 R2 Enterprise and Datacenter	Unlimited	http://technet.microsoft.com/en-us/library/cc754175.aspx
Windows Server® 2008 and R2 Standard	4	http://technet.microsoft.com/en-us/library/cc754175.aspx
Windows Server® 2003 Enterprise Server and Datacenter Server	Unlimited	http://support.microsoft.com/kb/555403
Windows Server® 2003 Server and Small Business Server	4	http://support.microsoft.com/kb/555403
Windows® 7	1	http://windows.microsoft.com/en-US/windows7/Set-up-your-computer-to-send-and-receive-faxes
Windows® XP	1	http://support.microsoft.com/kb/555403

If you plan on using third party routing, such as the Dialogic® Brooktrout® Exchange 2010 inbound routing, use a Windows® Server edition of the operating system. Workstation editions of Windows® do not support third party routing, including the following:

- Windows® 7
- Windows® XP

When installing the Dialogic® Brooktrout® Fax Service Provider, on some Windows® operating systems the installation will attempt to install the Fax Server for you. If it is unable it will prompt you to install the Fax Server yourself.

Note: Some Windows® operating systems come with the Fax Server pre-installed. Some known versions are Windows® XP and Windows® 7.

Installing Microsoft® Fax Server on Windows® 2008 and 2008 R2

➤ ***Follow the steps below to install the Fax Server on Windows® 2008 and 2008 R2.***

1. In the left pane of Server Manager, right-click **Roles**, and then click **Add Roles**.
2. In the Add Roles Wizard, on the **Select Server Roles** page, select the **Fax Server** check box. This installs the Fax Server role page, Fax Service Manager, the Fax service, and the Fax printer.
3. Follow the instructions in the wizard to set up the Fax Server service account and fax users.
4. Continue through the wizard until you reach the **Confirm Installation Selections** page and review the choices that you made. Click **Install**.
5. After the wizard closes, to confirm the installation of the Fax printer, click **Start>Run**, and then type: **control printers**.
6. Confirm that a printer named **Fax** exists. If it does not, then restart the computer. (Or, if you cannot restart the computer, stop and restart the Print Spooler service instead. To do this, in Services, in the right pane, right-click **Print Spooler**, and click **Stop**. Then right-click **Print Spooler** again, and click **Start**.)
7. More installation and configuration information is available in the following Microsoft link:

[http://technet.microsoft.com/enus/library/ee791910\(WS.10\).aspx#BKMK_Install_FS](http://technet.microsoft.com/enus/library/ee791910(WS.10).aspx#BKMK_Install_FS)

Installing Microsoft® Fax Server on Windows® XP and Windows® 2003

➤ ***Follow the steps below to install the Fax Server on Windows® XP and Windows® 2003.***

1. Click **Start>Run**.
2. Copy and paste or type the following command in the **Open** box, and then click **OK**:
appwiz.cpl

It may take several seconds for your computer to compile a list of programs. The **Add or Remove Programs** dialog box opens.

3. Click **Add/Remove Windows Components** to the left of the list of programs to start the **Windows Components Wizard**. This takes several seconds.
4. In the **Components** list, click to select the **Fax Services** check box, and then click **Next**. Setup installs the fax services.
5. If you are prompted, insert the Windows® CD, and then click **OK**. If the **Welcome to Microsoft Windows®** window opens, click the **X** in the upper-right corner to close it.
6. Click **Finish**, and then click the **X** in the upper-right corner of the **Add or Remove Programs** dialog box to close it.
7. After the wizard closes, to confirm the installation of the Fax printer, click **Start>Run**, and then type: **control printers**.
8. Confirm that a printer named **Fax** exists. If it does not, then restart the computer. (Or, if you cannot restart the computer, stop and restart the Print Spooler service instead. To do this, in **Services**, in the right pane, right-click **Print Spooler**, and click **Stop**. Then right-click **Print Spooler** again, and click **Start**.)
9. More installation and configuration information is available in the following Microsoft link:
<http://support.microsoft.com/KB/306550>

4 - Installing Brooktrout Fax Service Provider Software

This chapter describes how to install your Brooktrout FSP software and enter dialing information.

If your system is configured with a prior version of Brooktrout FSP software, you must uninstall it before beginning the installation for the new Brooktrout FSP software version.

This chapter contains the following major sections:

- ***Installing the Brooktrout FSP Software on page 16***
- ***Entering Telephone Information on page 23***

Installing the Brooktrout FSP Software




Before installing your Fax Service Provider (FSP) software, log onto your system with full administrative privileges.


➤ **To install the Brooktrout FSP software:**

1. Unzip the **brooktrout_fsp.zip** file. Be sure to maintain the directory structure.
2. Run setup.exe.


The following screen appears.

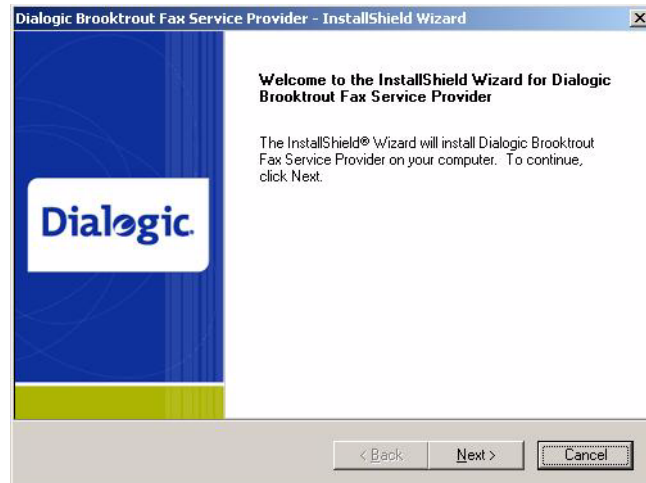


3. Click **Next**.

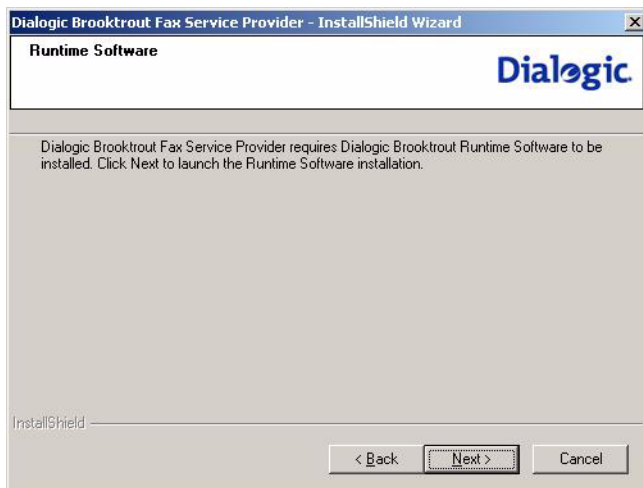


4. This screen above indicates that the Dialogic Runtime Software is required and is installed when you click **Next**. Click **Next**.

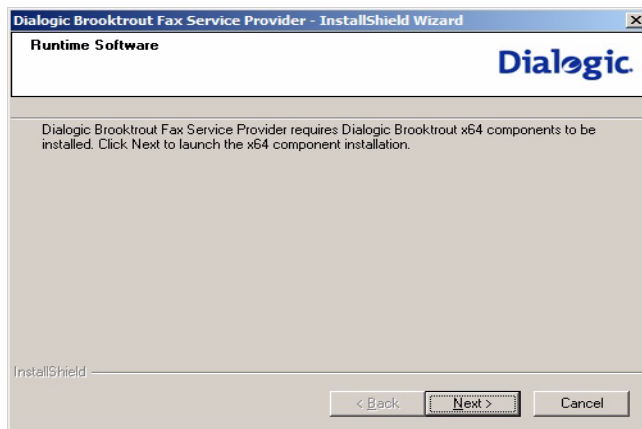


5. The screen above is for x64 systems only and indicates that the Brooktrout x64 Components package is required and is installed when you click **Next**. Click **Next**.

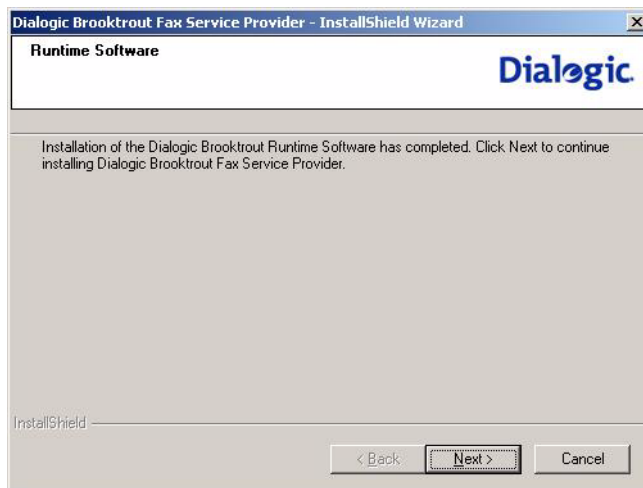


6. The screen above indicates that the Runtime Software installation is complete. Click **Next**.

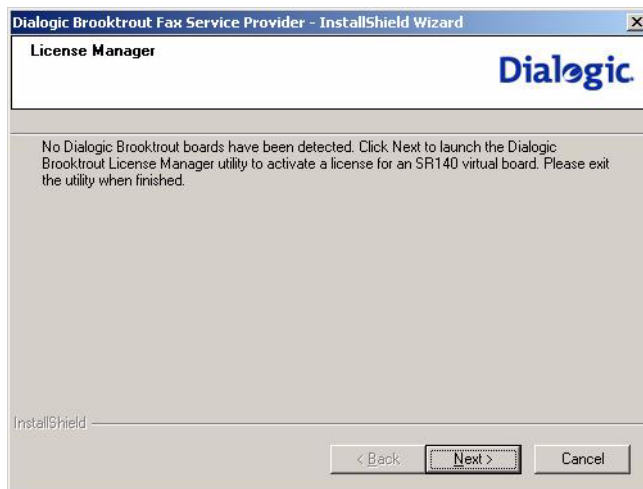


7. The screen above appears only if no Brooktrout boards are detected. When you click **Next**, the License Manager utility is launched to activate an SR140 license. (Refer to ***Using the License Manager*** in the ***Dialogic Brooktrout Fax Products Windows® User Guide***). Click **Next**.
8. Close the License Manager when complete to resume with the Brooktrout FSP installation.

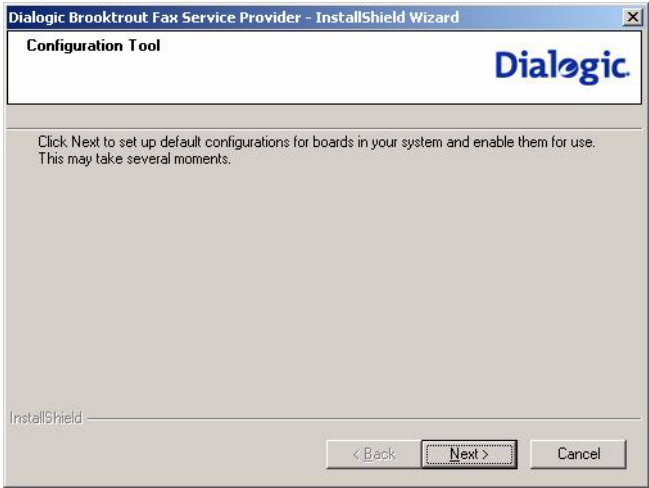


- 9. The screen above indicates the default configurations will be set up and the boards will be enabled for use. Click **Next**.

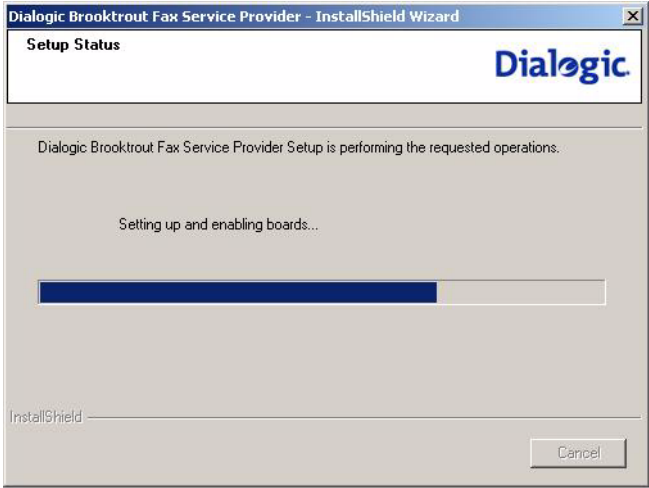


- 10. When the operation above completes, the following screen appears.

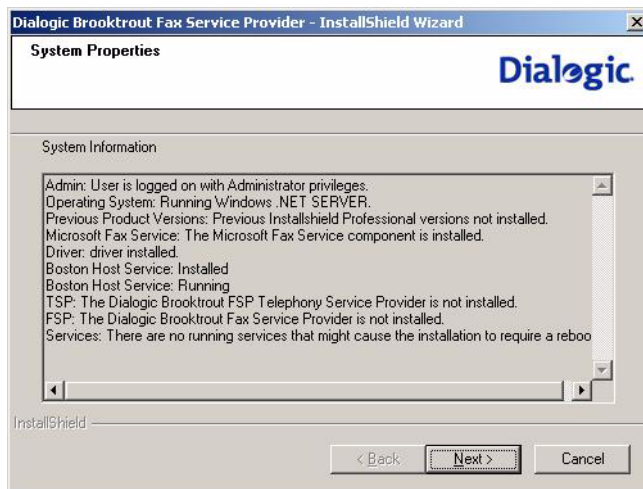


11. Click **Next**.

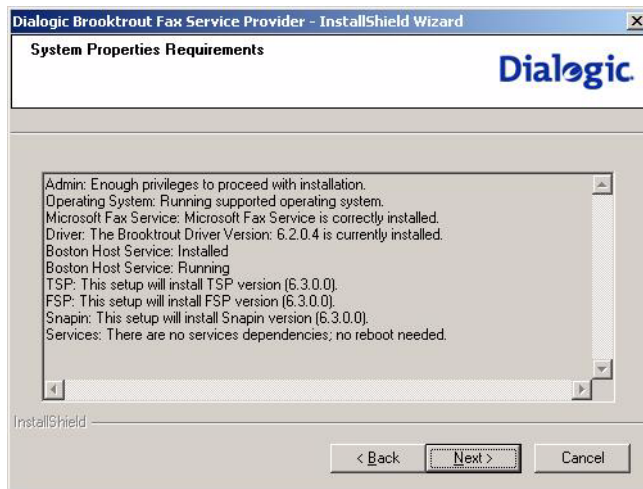


12. The screen above indicates some of the properties of the system. Click **Next**.

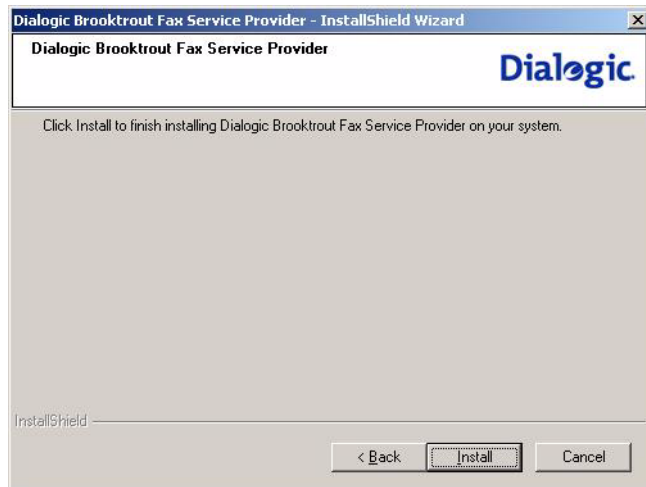

13. The screen above indicates some properties of the system and some possible problems for Brooktrout FSP installation. Click **Next**.

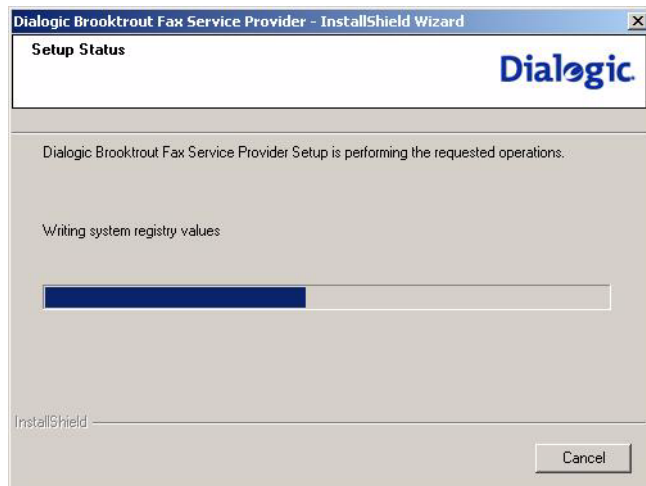


14. When the operation above completes, the following screen appears.

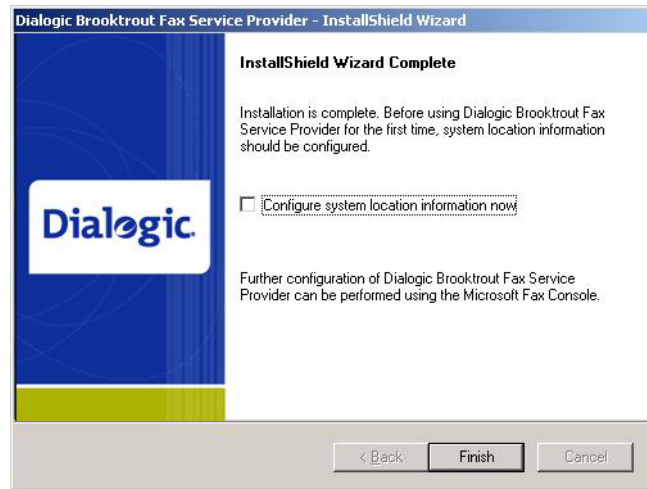

15. The screen above indicates the successful Brooktrout FSP installation. You can select the checkbox if you want to configure the system location information which launches a Microsoft telephony configuration utility. Click **Finish** to exit.


Entering Telephone Information

- If you want to enter or change the dialing information, follow the steps below.
1. Open the **Control Panel** window. This step is skipped if you selected the **Configure system location information now** checkbox at the end of the Brooktrout FSP installation.

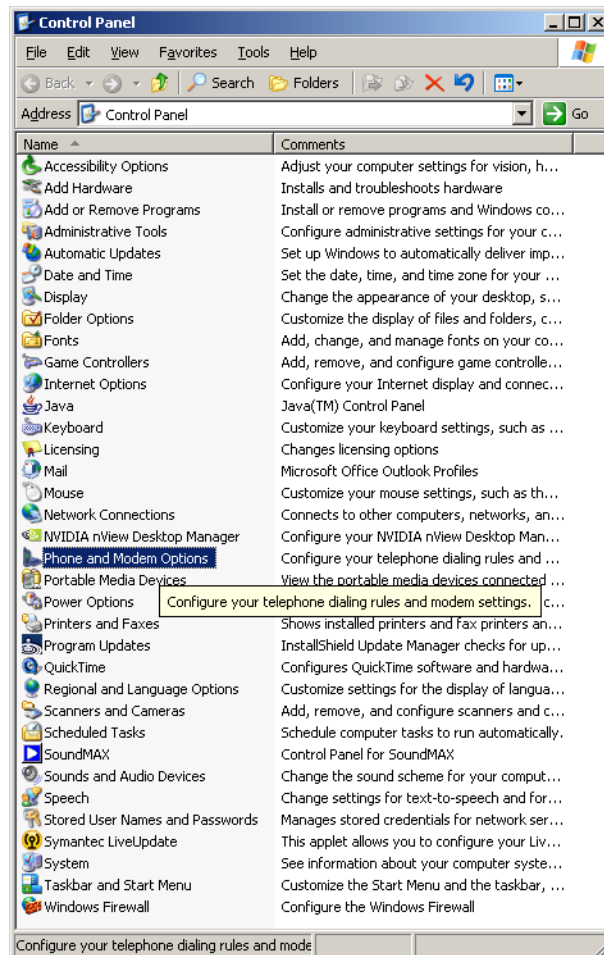


2. Click **Phone and Modem Options**.

The following is a Windows® XP screen. The screens will differ for other Windows® operating systems.

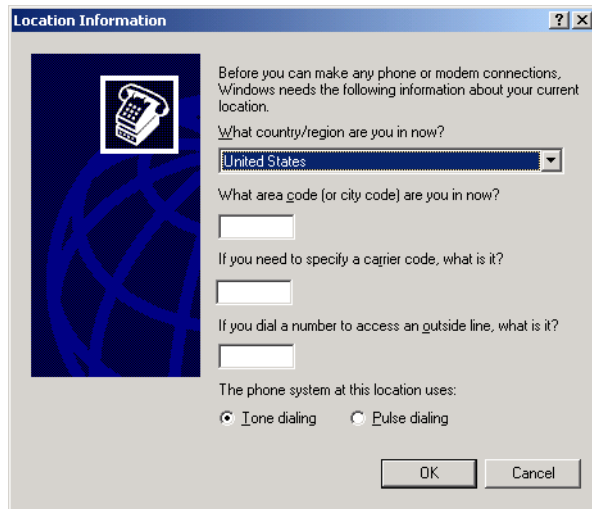

3. Enter your telephone information and press **OK**.
The following window appears:

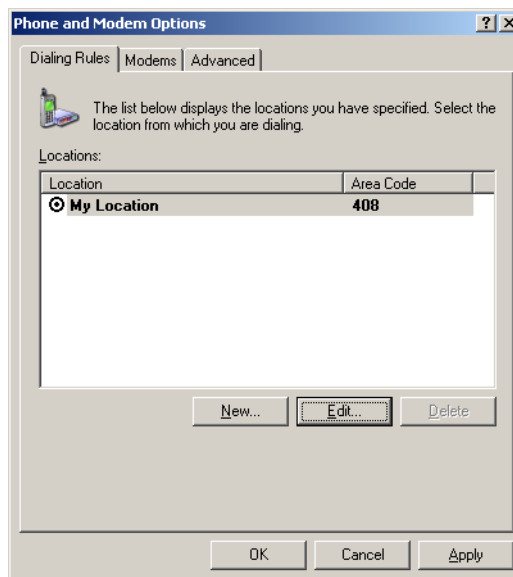

4. Press **OK**.

5 - Configuring Brooktrout Fax Products

After you install the Brooktrout FSP the fax devices may need to be configured if the default settings need to be modified. Run the Configuration Tool from the Fax Service Provider Properties.

On some system configurations the Microsoft® Remote Access Connection Manager service cannot be stopped. This prevents the Telephony service from restarting and can cause some errors when running the Configuration Tool. You can use the Configuration Tool to set the parameters and save them. Reboot for them to take effect.

Note: In cases where you do not require the Remote Access Connection Manager, it can be disabled which would remove the need to re-boot. The following Microsoft Article provides additional guidance:

<http://support.microsoft.com/kb/959041>

This chapter contains the following sections:

- ***[Configuring the Dialogic® Brooktrout® Devices on Windows® 2003, 2008, and 2008 R2 on page 26](#)***
- ***[Configuring the Dialogic® Brooktrout® Devices on Windows® 7 and Windows® XP on page 27](#)***

For more information about the Configuration Tool refer to the ***Dialogic® Brooktrout® Fax Products Windows® End User Guide***.

Configuring the Dialogic® Brooktrout® Devices on Windows® 2003, 2008, and 2008 R2

➤ ***Follow the steps below to configure the Brooktrout Devices on Windows® 2003, 2008, and 2008 R2.***

1. Open the Fax Service Manager.
 - a. On Windows® 2008 and 2008 R2: Click **Start>Administrative Tools>Fax Service Manager**.
 - b. On Windows® 2003: Click **Start**, point to **All Programs>Accessories>Communications>Fax Service Manager**.
2. In the left pane, double-click **Devices *and* Providers**, and then click **Providers**.
3. In the right pane, double-click **Dialogic Brooktrout Fax Service Provider**.
4. In the **Dialogic Brooktrout Fax Service Provider Properties** dialog box, click **Brooktrout Fax Service Provider**.
5. To stop the Fax Server, press the **Stop** button. When complete the **Configuration** button will become enabled.

Note: For Windows® 2003, stopping the Dialogic Corporation Boston Host Service may fail because the service Remote Access Connection Manager cannot be stopped. Proceed but expect some messages from the Configuration Tool related to items being in use. Make your modifications then press **Save** instead of **Apply** on the toolbar. In order for your changes to take effect, restart the system.

6. To configure the Brooktrout devices, press the **Configuration** button. This step starts the Configuration Tool. For information about the Configuration Tool refer to the ***Dialogic® Brooktrout® Fax Products Windows® End User Guide***.
7. After using the Configuration Tool the Fax Server can be restarted by pressing the **Start** button.

Configuring the Dialogic® Brooktrout® Devices on Windows® 7 and Windows® XP

➤ ***Follow the steps below to configure the Brooktrout devices on Windows® 7 and Windows® XP.***

1. Click **Start>Run**, and then type **cmd**. This will open a command window.
2. Stop the Fax and Dialogic Corporation Boston Host Service. Type **net stop bostservice**.

Note: Stopping the Dialogic Corporation Boston Host Service may fail because the service Remote Access Connection Manager cannot be stopped. Proceed but expect some messages from the Configuration Tool related to items being in use. Make your modifications then press **Save** instead of **Apply** on the toolbar. In order for your changes to take effect, restart the system.

3. Type **cd c:\Program Files\Brooktrout\bin** to change directories.
4. Type **configtool.exe** to start the Configuration Tool. For information about the Configuration Tool refer to the **Dialogic® Brooktrout® Fax Products Windows® End User Guide**.

6 - Configuring Microsoft® Fax Server

This chapter describes how to configure the Microsoft® Fax Server. It contains the following sections:

- ***Configuring the Microsoft® Fax Server on Windows® 2003, 2008, and 2008 R2 on page 29***
- ***Configuring the Microsoft® Fax Server on Windows® XP on page 31***
- ***Configuring Microsoft® Fax Server on Windows® 7 on page 32***

Configuring the Microsoft® Fax Server on Windows® 2003, 2008, and 2008 R2

➤ ***Follow the steps below to Enable The Dialogic® Brooktrout® Devices To Receive:***

1. Open the Fax Service Manager.
 - a. On Windows® 2008 and 2008 R2: Click **Start>Administrative Tools>Fax Service Manager**.
 - b. On Windows® 2003: Click **Start>All Programs> Accessories> Communications> Fax>Fax Service Manager**.
2. In the left pane, double-click **Devices>Providers**, and then click **Devices**.
3. In the right pane, right-click the device you want to configure, click **Properties** and then click the **General** tab.
4. To configure whether calls are answered automatically or manually, select the **Receive faxes** check box and then do one of the following:
 - a. Click **Automatic Answer** to enable the fax device to answer calls automatically, and then type a number for the value in **Rings before answering**.

The following are the default rings for each operating system:

- Windows® 2008/2008 R2 - **5**
- Windows® 2003 - **2**

If your fax and telephone do not share a line, you should decrease this number to **2** rings. If your fax and telephone do share a line, and you decide to increase this number, do not increase it so much that the fax sender stops transmission.

- b. Click **Manual Answer** to enable the fax device to answer calls manually.

➤ ***Follow the steps below to enable the Dialogic® Brooktrout® devices to send:***

1. Open the Fax Service Manager.
 - a. On Windows® 2008 and 2008 R2: Click **Start>Administrative Tools> Fax Service Manager**.

- b. On Windows® 2003: Click **Start>All Programs>Accessories>Communications>Fax>Fax Service Manager**.
2. In the left pane, double-click **Devices and Providers** and then click **Devices**.
3. In the right pane, right-click the device you want to configure, click **Properties**, and then click the **General** tab.
4. Select the **Send faxes** check box

Configuring the Microsoft® Fax Server on Windows® XP

➤ ***Follow the steps to configure the Microsoft Fax Server on Windows® XP.***

1. Click **Start>All Programs>Accessories>Communications>Fax>Fax Console**.
2. The first time configuring the Fax Configuration Wizard will start. If the Fax Configuration Wizard does not start, on the **Fax Console**, click **Configure Fax** on the **Tools** menu to start the Fax Configuration Wizard.

Note: You may be prompted to unblock the program. If this is the case, click **Unblock**. The Fax Configuration Wizard starts.

3. If you are prompted, type the area code or city code of your present location, a carrier code, the number that you must dial first to dial out, and the telephone system that you are using (Tone or Pulse), and then click **OK**.

If the **Phone and Modem Options** dialog box is displayed, select your location (if more than one exists), and then click **OK**.

4. Click **Next**, type the information that you want to appear on your fax cover page, and then click **Next**.
5. In the **Please select the fax device** list, click the device that you want to use.
6. If you want to disable the ability to send faxes from this computer, click to clear the **Enable Send** check box. By default, the **Enable Send** check box is selected.
7. Click to select the **Enable Receive** check box if you want the computer to receive faxes.

Note: When this check box is selected, you can click **Manual answer** if you do not want the computer to automatically receive faxes. By default, automatic answering is enabled.

8. Click **Next** until finished.

Configuring Microsoft® Fax Server on Windows® 7

➤ ***Follow the steps below to configure the Microsoft® Fax Server on Windows® 7.***

1. Click **Start>All Programs>Windows® Fax and Scan**.
2. On the **Windows Fax and Scan**, click **Fax Settings** on the **Tools** menu.
3. Press the **Select fax device** button.
4. Select the device that you want to use and press **OK**.
5. If you want to disable the ability to send faxes from this computer, click to clear the **Allow the device to send faxes** check box.

Note: By default the **Allow the device to send faxes** check box is selected.

6. Select the **Allow the device to receive fax calls** check box if you want the computer to receive faxes.

Note: When this check box is selected, you can click **Manual answer** if you do not want the computer to automatically receive faxes. By default, automatic answering is enabled.

7. Set the number of rings before answering the call. The default number of rings is **5**. If your fax and telephone do not share a line, you should decrease this number to **2**. If your fax and telephone do share a line, and you decide to increase this number, do not increase it so much that the fax sender stops transmission.
8. Click **OK**.

7 - Integrating Microsoft® Exchange 2010

This chapter describes how to integrate Exchange 2010 into the Brooktrout Fax Products configuration.

Microsoft Exchange Server 2010 Unified Messaging (UM) relies on certified fax partner solutions for enhanced fax functionality such as outbound fax or fax routing.

The Microsoft® Fax Server with Brooktrout FSP software and Brooktrout SR140 Fax Software is certified as a Microsoft® Exchange Server 2010 Fax Partner Solution.

By default, when you install the Unified Messaging server role, the server is not configured to allow incoming fax messages to be delivered to a UM-enabled user. Instead, the UM server redirects incoming fax calls to a certified fax partner solution. The fax partner's server receives the fax data and then sends it to the recipient's mailbox in an e-mail message with the fax included as a .tif attachment.

Routing to Exchange 2010 is supported only with SIP fax devices. PSTN and H.323 fax devices are unable to receive the routing information of the Exchange user.

Configuring Incoming Fax Routing to the Exchange UM Partner Email

- ***Follow the steps below to configure incoming fax routing to the Exchange UM Partner email.***
1. Open Fax Service Manager.
 - a. On Windows® 2008 and 2008 R2: Click **Start>Administrative Tools>Fax Service Manager**.
 - b. On Windows®2003: Click **Start>All Programs>Accessories>Communications>Fax>click Fax Service Manager**.
 2. In the left pane, double-click **Fax**, double-click **Devices and Providers**, double-click **Devices**, double-click the device you want to configure, and then click **Incoming Methods**.
 3. In the details pane, right-click the **Route through Exchange UM Partner email** method, and then click **Enable** to enable the method, or **Disable** to disable it. To configure incoming routing through **Route through Exchange UM Partner email**, you must specify the Simple Mail Transfer Protocol (SMTP) settings of the e-mail server. These settings are not the same as the ones used by the **Route through e-mail method**.
 4. In the left pane, click **Fax**, double-click **Incoming Routing** and then click **Global Methods**.
 5. In the right pane, right-click the **Route through Exchange UM Partner email** method, click **Properties**, and then do the following:
 - a. Select the **Exchange UM Partner email** tab.
 - b. In **From Display Name**, type the display name of the user sending e-mail on behalf of the fax server.
 - c. In **From e-mail address**, type the e-mail address of the user sending e-mail on behalf of the fax server.
 - d. In **Server address**, type the Simple Mail Transfer Protocol (SMTP) address of the Exchange UM server to which incoming faxes will be sent.
 - e. In **Port**, type the port number.
 - f. If the Exchange UM server requires authentication set the following:
 - ◆ **User name** - type a user name with credentials on the Exchange UM server.

- ◆ **Password** - type the user's password.
 - ◆ **Confirm Password** - re-type the user's password.
6. For more details refer to the **Microsoft® Exchange 2010 Configuration Guide**.

8 - Inbound Routing

This chapter describes how to perform inbound routing to individual email addresses in TDM or IP endpoint environments.

You can use routing methods to control what happens to faxes that are received by a fax device managed by the Microsoft Fax Server.

You can use any combination of routing methods to forward received faxes to an e-mail address, store faxes in a folder, or print faxes. Routing to an e-mail address is only available on server versions of Windows®.

Workstation versions, like Windows® XP and Windows® 7, do not support routing to an email address. Workstation versions do not support third party inbound routing extensions and are limited to routing only to a folder or printer.

Configuring Incoming Fax Routing Methods on Windows® 2003, 2008, and 2008 R2

- ***Follow the steps below to configure incoming fax routing methods on Windows® 2003, 2008, and 2008 R2:***
1. Open Fax Service Manager.
 - a. On Windows® 2008 and 2008 R2: Click **Start>Administrative Tools>Fax Service Manager**.
 - b. On Windows® 2003: Click **Start>All Programs>Accessories>Communications>Fax>Fax Service Manager**.
 2. In the left pane, double-click **Fax**, double-click **Devices and Providers**, double-click **Devices**, double-click the device you want to configure, and then click **Incoming Methods**.
 3. In the right pane, right-click the method you want to configure, click **Properties**, and then do the following:
 - a. To configure the Store in a folder method, click the **Store in Folder** tab, and then either type the Universal Naming Convention (UNC) path of the folder (\\<network location>\<folder>), or click **Browse** to select the folder.
 - b. To configure the **Route through e-mail method**, click the **E-mail** tab, and then type the e-mail address to which you want incoming faxes to be delivered. To configure incoming routing through e-mail, you must specify the Simple Mail Transfer Protocol (SMTP) settings of the e-mail server. Refer to ***Follow the steps below to configure SMTP Settings for E-mail Routing on page 38***.
 - c. To configure the Print method, click the **Print** tab, and then type the UNC path of the printer location.
 4. To configure the Route through Exchange UM Partner email, see the section ***Configuring Incoming Fax Routing to the Exchange UM Partner Email on page 34***.
 5. Once the incoming methods have been configured, in the details pane, right-click each method, and then click **Enable** to enable the method, or **Disable** to disable it. (You may want to disable a method if, for example, you want to temporarily disable printing because the printer is down and faxes are getting stuck in the Inbox.)

➤ ***Follow the steps below to configure SMTP Settings for E-mail Routing***

1. Open Fax Service Manager.
2. In the left pane, right-click **Fax**, and then click **Properties**.
3. To enable incoming faxes to be routed to recipients by e-mail, click the **Receipts** tab and then do the following:
 - a. Select the **Use these SMTP settings for the Route Through E-mail incoming routing method** check box.
 - b. In **From e-mail address**, type the e-mail address to which all incoming faxes will be received.
 - c. In **Server address**, type the Simple Mail Transfer Protocol (SMTP) address of the mail server to which incoming faxes will be received.
 - d. In **Port**, type the port number.
4. Also on the **Receipts** tab, click **Authentication**, and then, based on how your SMTP server is set up, do one of the following:
 - ◆ Click **Anonymous** access if this is sufficient to access the SMTP server.
 - ◆ Click **Basic authentication>Credentials**, and then type a user name and password.
 - ◆ Click **Integrated Windows Authentication** if NTLM authentication is needed to access the SMTP server, click **Credentials**, and then type a user name and password.

Configuring Incoming Fax Routing Methods on Windows® XP

➤ ***Follow the steps below to configure incoming fax routing methods on Windows® XP.***

1. Click **Start>All Programs>Accessories>Communications>Fax>Fax Console**.
2. The first time configuring the Fax Configuration Wizard will start. If the Fax Configuration Wizard does not start, on the Fax Console, click **Configure Fax** on the **Tools** menu to start the Fax Configuration Wizard.

Note: You may be prompted to unblock the program. If this is the case, click **Unblock**. The Fax Configuration Wizard starts.

3. If you are prompted, type the area code or city code of your present location, a carrier code, the number that you must dial first to dial out, and the telephone system that you are using (Tone or Pulse), and then click **OK**.

If the **Phone and Modem Options** dialog box is displayed, select your location (if more than one exists), and then click **OK**.

4. Click **Next** until the you see the Routing Options.
5. To print to a printer, check **Print** it on and select a printer.
6. To save to a folder, check **Store a copy in a folder** and select a folder where a copy of a received fax will be stored.
7. Click **Next** until finished.

Configuring Microsoft® Fax Server on Windows® 7

- ***Follow the steps below to configure the Microsoft® Fax Server on Windows® 7:***
1. Click **Start>All Programs>Windows Fax and Scan**.
 2. On the **Windows Fax and Scan**, click **Fax Settings** on the **Tools** menu.
 3. Click the **More** options button.
 4. To print to a printer, check **Print a copy to** and select a printer.
 5. To save to a folder, check **Save a copy to** and select a folder where a copy of a received fax will be stored.
 6. Click **OK** until complete.